



## FTL5 - TYLER 5 DRAWER LINGERIE CHEST

*Congratulations on the purchase of your **TYLER 5 DRAWER LINGERIE CHEST**. The **TYLER** Collection is manufactured right here in New Zealand - by New Zealanders, for New Zealanders. A stylish option which combines quality with value, The TYLER Collection is an excellent investment for your home.*

*The TYLER Collection is constructed from NZ made MDF, a renewable resource from sustainably managed pine forests. This means you can have complete confidence that with The TYLER Collection, you are making an environmentally responsible choice.*

**If you have any questions please visit [www.farmersfurniture.co.nz](http://www.farmersfurniture.co.nz) or call the manufacturers direct on 0800 100 858.**

---

### **WHERE TO ASSEMBLE YOUR LINGERIE CHEST**

Assemble your Lingerie Chest on a clean and smooth surface, free of anything which may damage the Black finishes. A clean, carpeted floor is ideal. If assembling on a workbench or table we suggest you cover it with the carton the Lingerie Chest was packaged in.

**Warning!** Never leave hardware parts where children can reach them. Small parts may be a choking hazard!

---

### **5 YEAR GUARANTEE**

The TYLER Collection carries a **5 year guarantee** against defective material or workmanship, excluding misuse and normal wear and tear. Obviously, as this unit is customer-assembled we cannot guarantee cabinet failure or damage from incorrect assembly. **All claims need proof of purchase – to ensure this register your Lingerie Chest at [www.farmersfurniture.co.nz](http://www.farmersfurniture.co.nz).**

Follow the assembly instructions carefully and take note of the precautions below.

- **Avoid direct sunlight wherever possible.**
- **Keep cabinet in a dry place.**
- **Wipe off spilt liquids immediately.**
- **Avoid placing hot items directly on the surface.**
- **Clean with a damp cloth and buff dry with a soft dry cloth - microfibre is ideal.**
- **Do not allow nail polish, removers, deodorant or other damaging chemicals to come into contact with the surface.**

---

### **COLOUR CODING**

To help identify the parts, the main components are colour coded with a pen mark on the back edge of the panel. (The edge without any Black finish on it.)












- |                 |  |
|-----------------|--|
| ○ <b>RED</b>    | <b>Right Hand Parts.</b> (E.g. RH End, RH Division, RH Drawer Side.) |
| ○ <b>GREEN</b>  | <b>Left Hand Parts.</b> (E.g. LH End, LH Division, LH Drawer Side.)  |
| ○ <b>BLUE</b>   | <b>Tops</b>  |
| ○ <b>PURPLE</b> | <b>Bases</b>   |

## PARTS LIST

Please check you have all the parts before beginning to assemble your cabinet. The measurements will help you identify each part. If any parts are missing or damaged please contact us directly for replacements and advice. Do not call the store you bought the cabinet from as they will be unable to help you. **Note: You may find two pieces of board fitted across the ends of the package. These are for packing purposes only and are not part of the cabinet.**

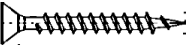
QTY	PART	MEASUREMENTS	NOTES
1	Top	450 x 396 x 25mm	Black finish - <i>Blue mark on back edge</i>
1	Base	450 x 396 x 25mm	Black finish - <i>Purple mark on back edge</i>
1	LH End	1154 x 388 x 25mm	Black finish both sides - <i>Green mark on back edge</i>
1	RH End	1154 x 388 x 25mm	Black finish both sides - <i>Red mark on back edge</i>
1	Rail	384 x 80 x 15mm	Plain MDF
1	Top Drawer Front	378 x 195 x 15mm	Black finish
4	Drawer Fronts	378 x 235 x 15mm	Black finish
5	LH Drawer Sides	340 x 160 x 12mm	Plain MDF 12mm - Green mark
5	RH Drawer Sides	340 x 160 x 12mm	Plain MDF 12mm - Red mark
5	Drawer Backs	334 x 155 x 12mm	Plain MDF 12mm
5	Drawer Bottoms	344 x 339 x 4mm	Plain MDF 4mm
1	Back Panel	1174 x 404 x 4mm	Plain MDF 4mm

## HARDWARE LIST

QTY	PART	CODE	
15	Connecting Bolts	H1	
6	Large Cams	H2	
10	Small Cams	H3	
20	Drawer Slide Screws	H4	
4	Large Screws	H5	
20	Small Woodscrews	H6	
24	Woodscrews	H9	
16	Dowels	H15	
4	Black Plastic Feet	H16	
5	Set of metal drawer slides	H21	
1	Bag of small Nails	H27	
5	TYLER Handle & Handle Screw		

## CAM INSTALLATION & OPERATION GUIDE

The Cam and Connecting Bolt system is used to put your unit together. Explanation below of how this system works.

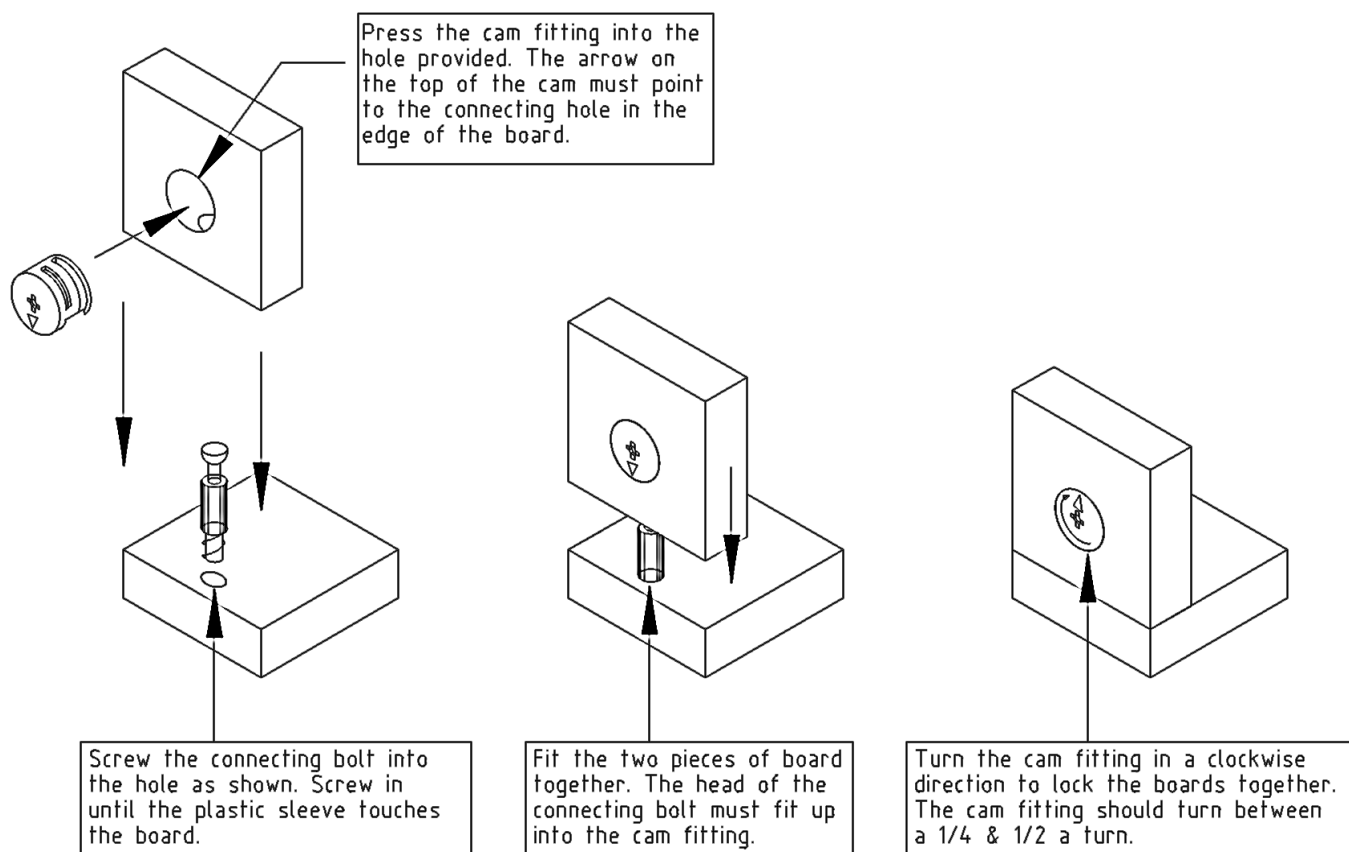

To see a demonstration click on the assembly assistance tab at [www.farmersfurniture.co.nz](http://www.farmersfurniture.co.nz).

## **DRAWER SLIDES GUIDE**

Your pack will contain 5 sets of Metal Drawer Slides. These are bundled together with adhesive tape. Each set comprises of 4 components. Undo the tape on one set at a time and separate the parts into four piles.




LEFT HAND PART (**DL**)



RIGHT HAND PART (**DR**)

The Drawer Slide components shown above are attached to the **drawers**. They have the letters **DL** or **DR** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawer later on.

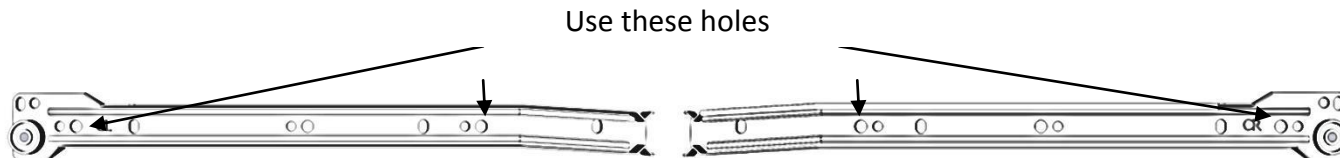

LEFT HAND PART (**CL**)


RIGHT HAND PART (**CR**)

The Drawer Slide components shown above are to be attached to the **cabinet**. They have letters **CL** or **CR** stamped on them to indicate left hand or right hand components.

## INSTALL THE HARDWARE



### STEP 1 - LH END

- Take the LH End and lay it on a clean, clear surface with the holes facing upwards.
- Take the five **LH Cabinet Drawer Slides (CL)** and screw them to the LH End using ten **H4 Drawer Slide Screws**. Use the holes as indicated in the drawing below. Ensure that the end of the slide with the wheel faces towards the finished edge of the end.
- Insert two **H2 Large Cams** as indicated. Make sure the arrow on top of the Cam points towards the top edge of the End.
- Push two **H15 Dowels** into the top edge of the End.
- Screw one **H1 Connecting Bolt** into the hole as indicated in the drawing below

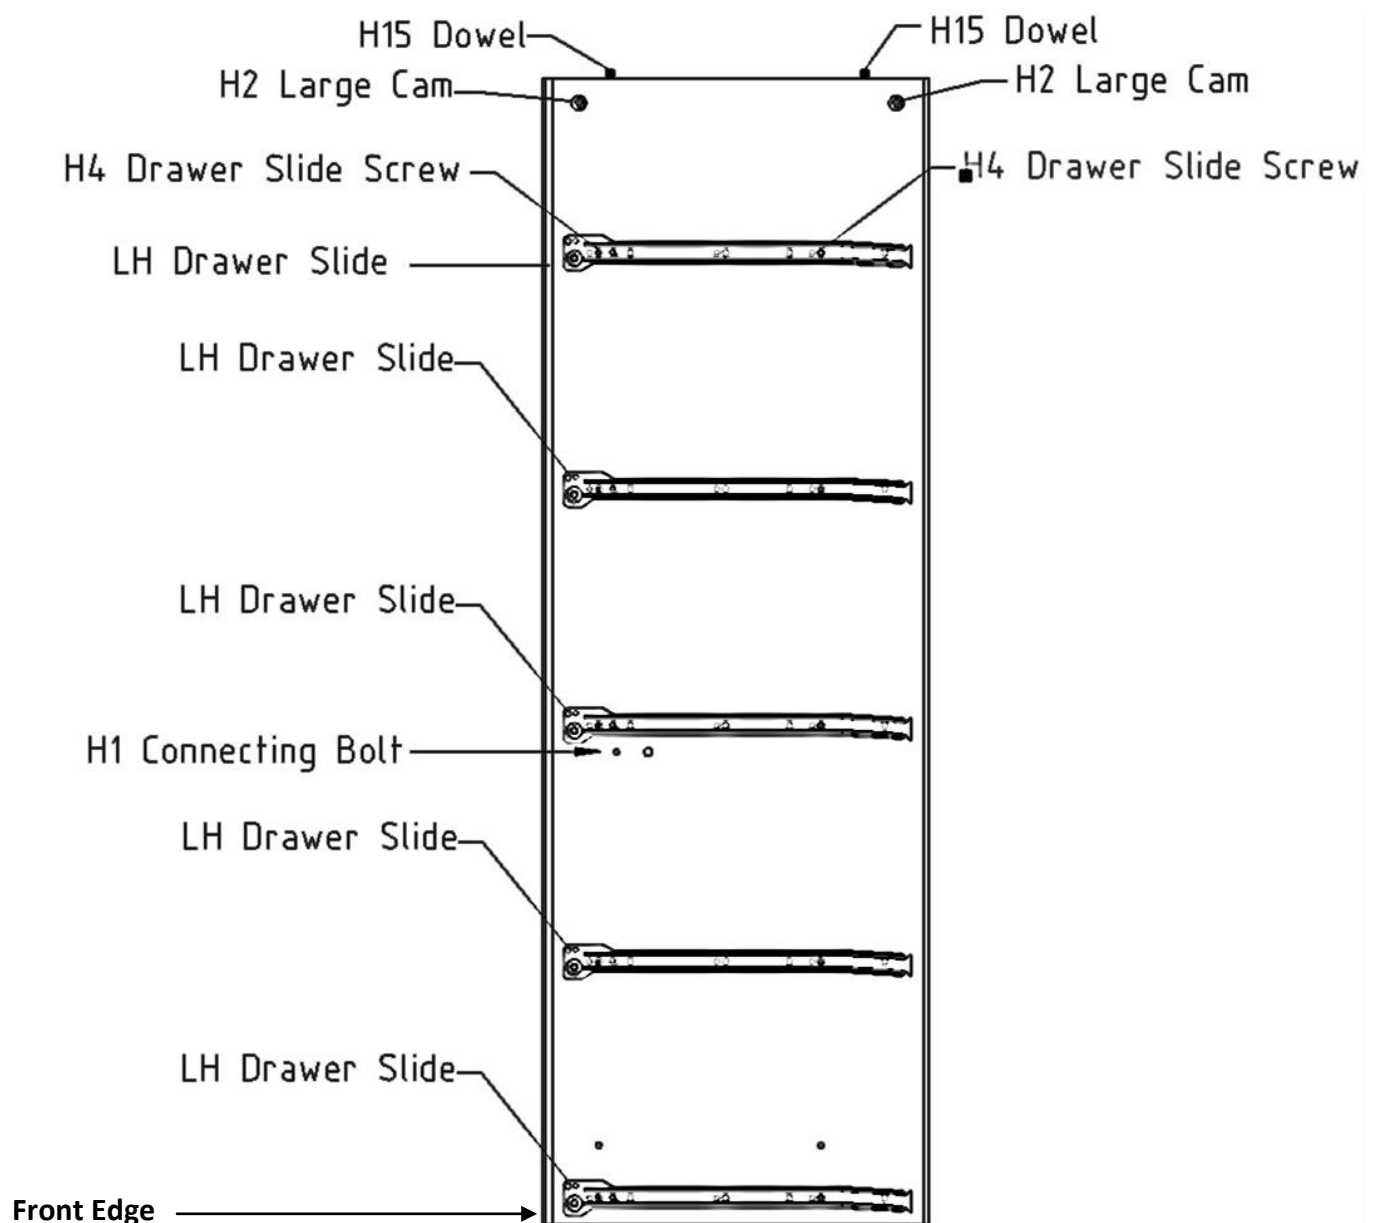


## STEP 2 - RH END

- Repeat previous step with the Right Hand End. Use the five **RH Cabinet Drawer Slides (CR)**.

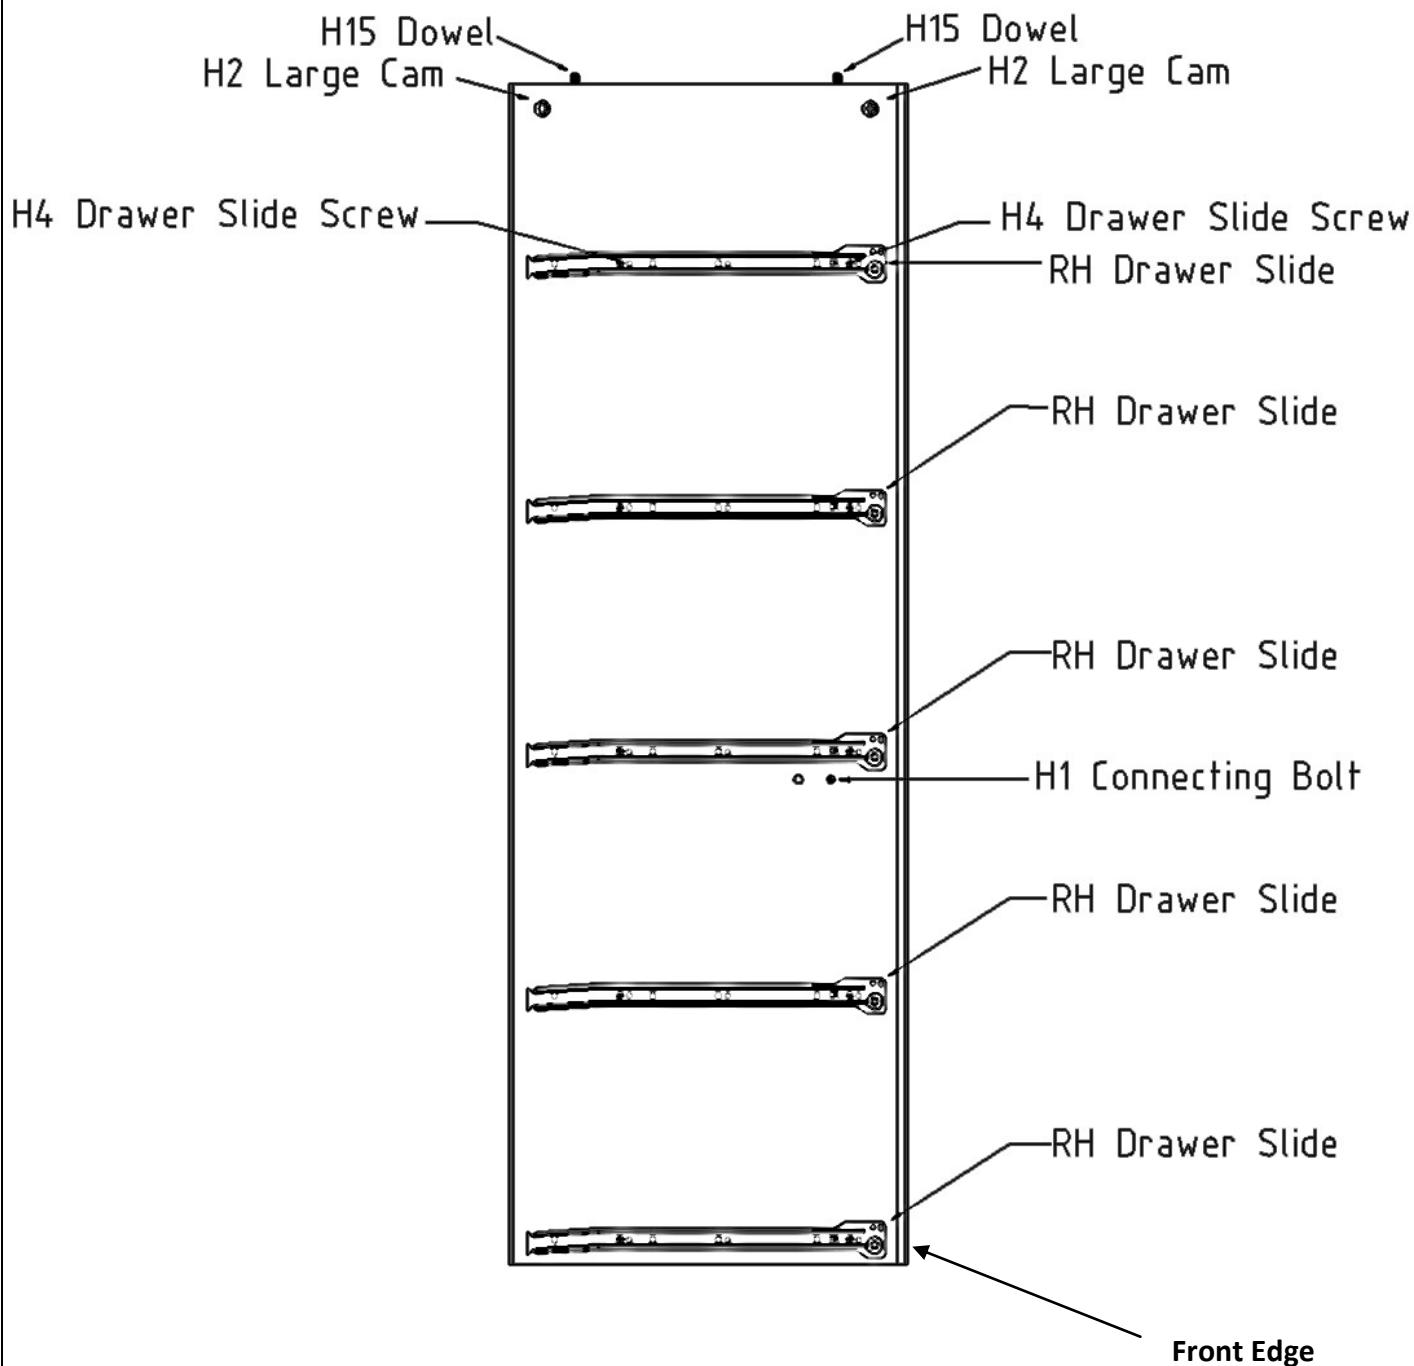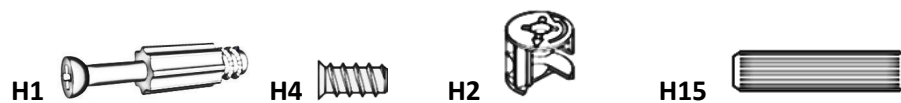


### STEP 3 - TOP

- Lay the Top of the cabinet, finished side down, on a smooth clean surface.
- Screw the four **H1 Connecting Bolts** into the holes as indicated.

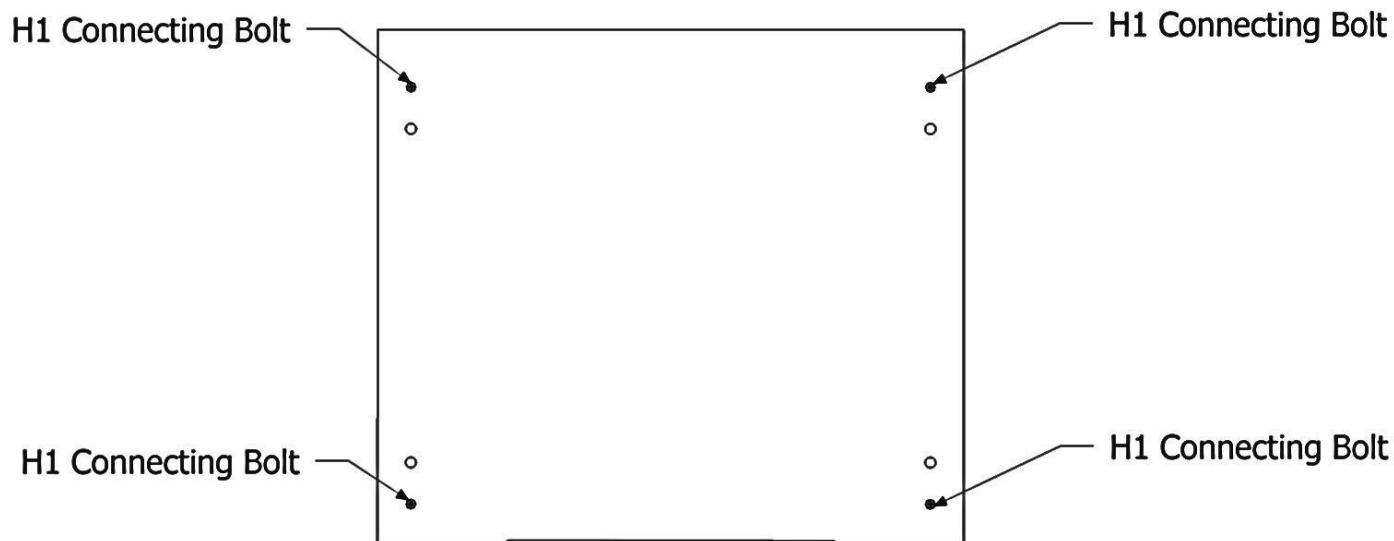

### STEP 4 - RAIL

- Insert two **H15 Dowels** and two **H2 Large Cams** into the end of the **Rail** as indicated below. Ensure the arrow on the top of the cam points toward the edge of the rail with the Dowel in it.

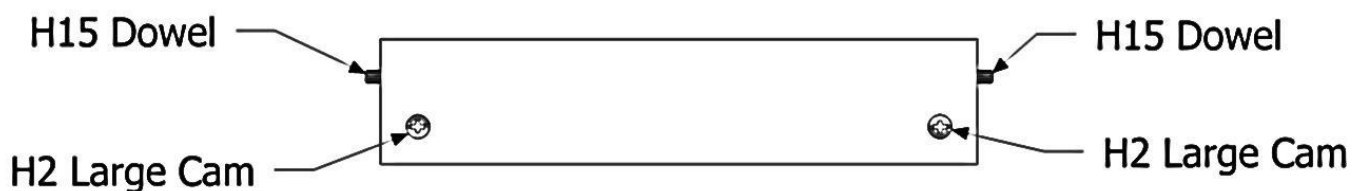


## **ASSEMBLE THE LINGERIE CHEST**

### **STEP 5 - ATTACH RAIL**


- Lay the LH End on a clean and clear surface.
- Fit the Rail to the LH End - the cam should face up to the top of the unit. The Connecting Bolt in the End will fit up into the Cam in the Rail.
- Turn the Large Cam in a clockwise direction to lock the Rail to the End. **NOTE:** Ensure the Cam turns a least a  $\frac{1}{4}$  to  $\frac{1}{2}$  a turn.

*To see a demonstration of how the cam and connecting bolt system works click on the assembly assistance tab at [www.farmersfurniture.co.nz](http://www.farmersfurniture.co.nz).*

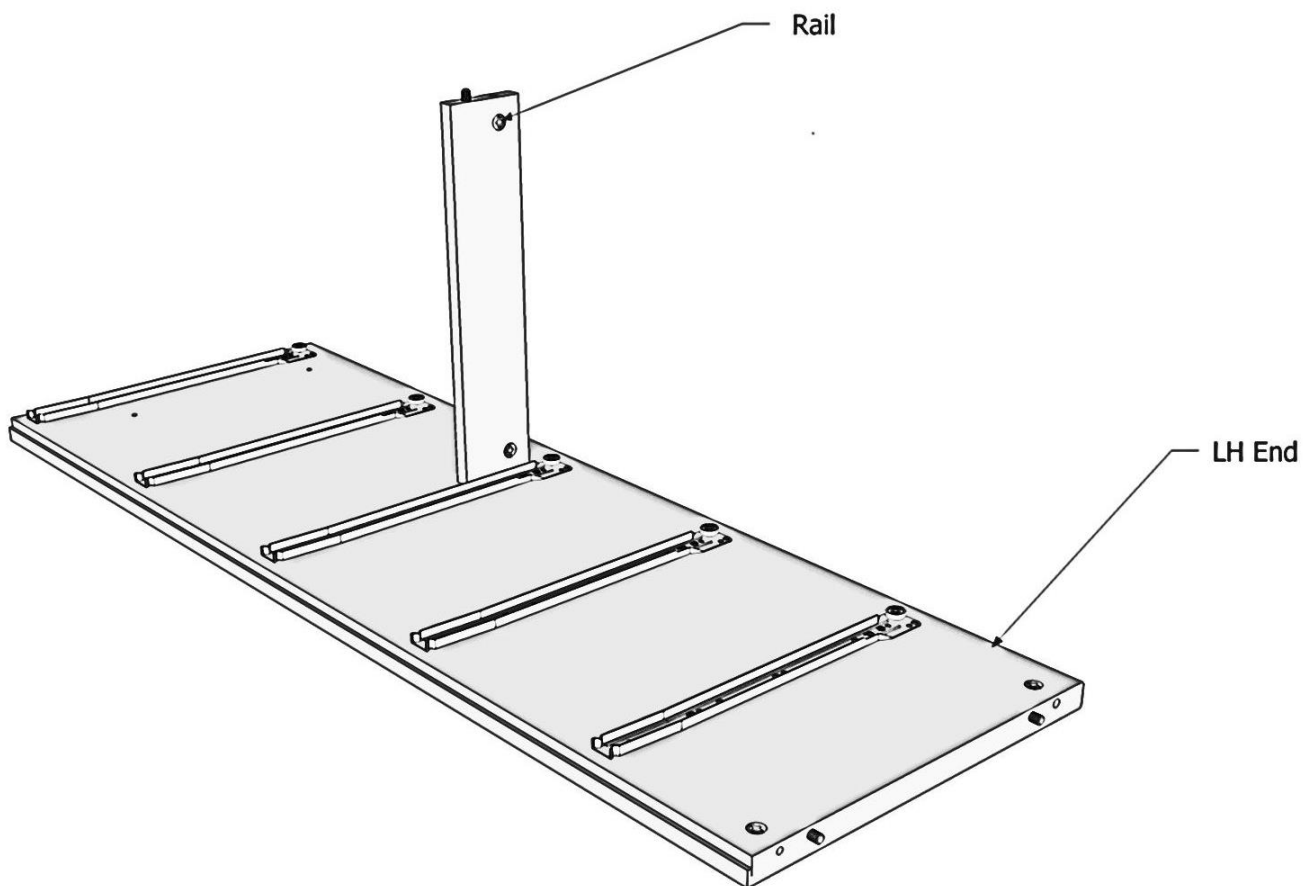


## STEP 6 - ATTACH RH END

- Stand the LH End with the Rail attached onto its back edge as shown below.
- Attach the RH End to the Rail. Turn the Cam to lock the End to the Rail.

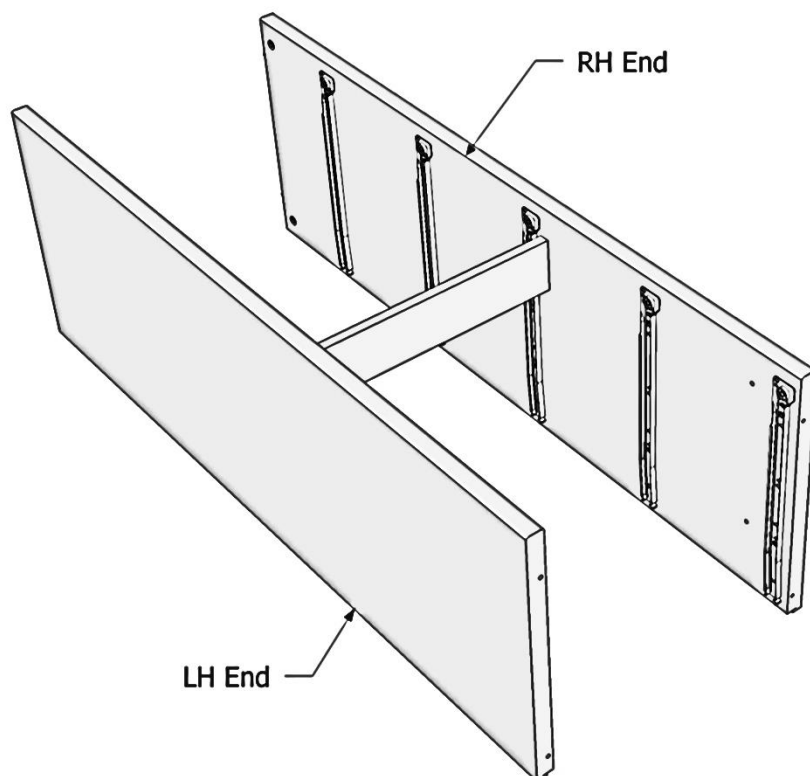

## STEP 7 - ATTACH TOP

- Attach the Top to the Ends. The Connecting Bolts in the Top will fit down into the Cams in the Ends.
- Tighten the Cams to lock the Top to the Ends. Ensure the Cams turn at least a  $\frac{1}{4}$  to  $\frac{1}{2}$  a turn.


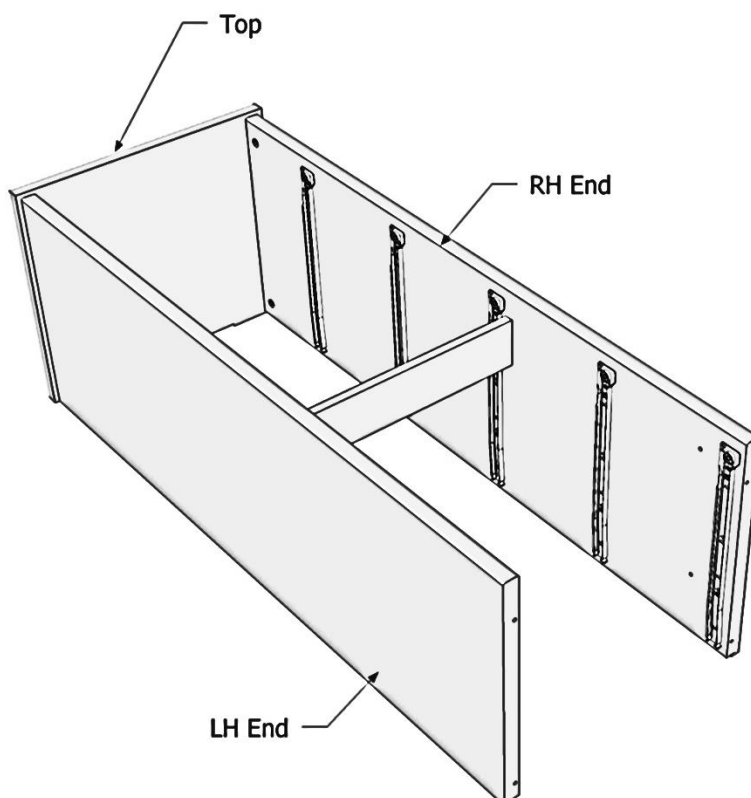





## STEP 8 - BASE

- Attach the Base using the four **H5 Large Screws**. Ensure the side of the base with the Black finish faces into the inside of the Lingerie Chest.
- Next attach the **H16 Black Plastic Feet** using four **H9 Woodscrews**

H5 Large Screws

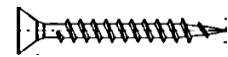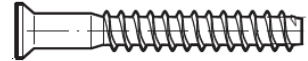


H9 Woodscrews

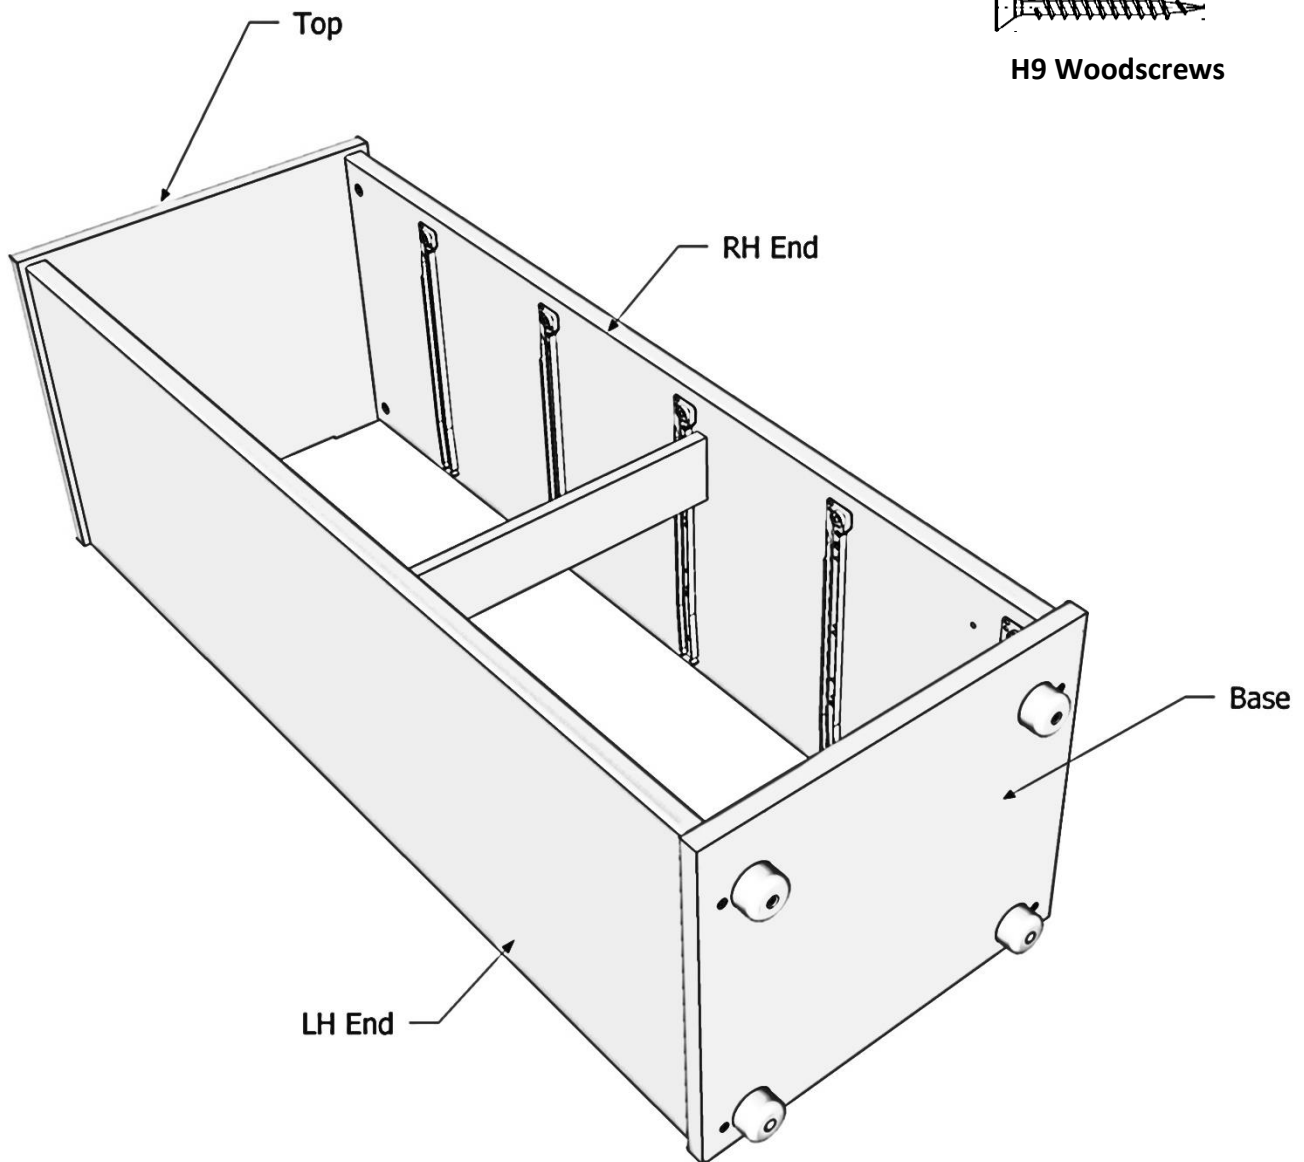


## STEP 9 - BACK PANEL

- Lay the unit on its front edge - make sure the surface is clean and clear of anything that may damage the Black finish.
- Fit the Back Panel into place.
- Nail the Back Panel in place with the Small Nails provided. Space the nails about 10 to 15 cm apart.
- Stand the cabinet upright.

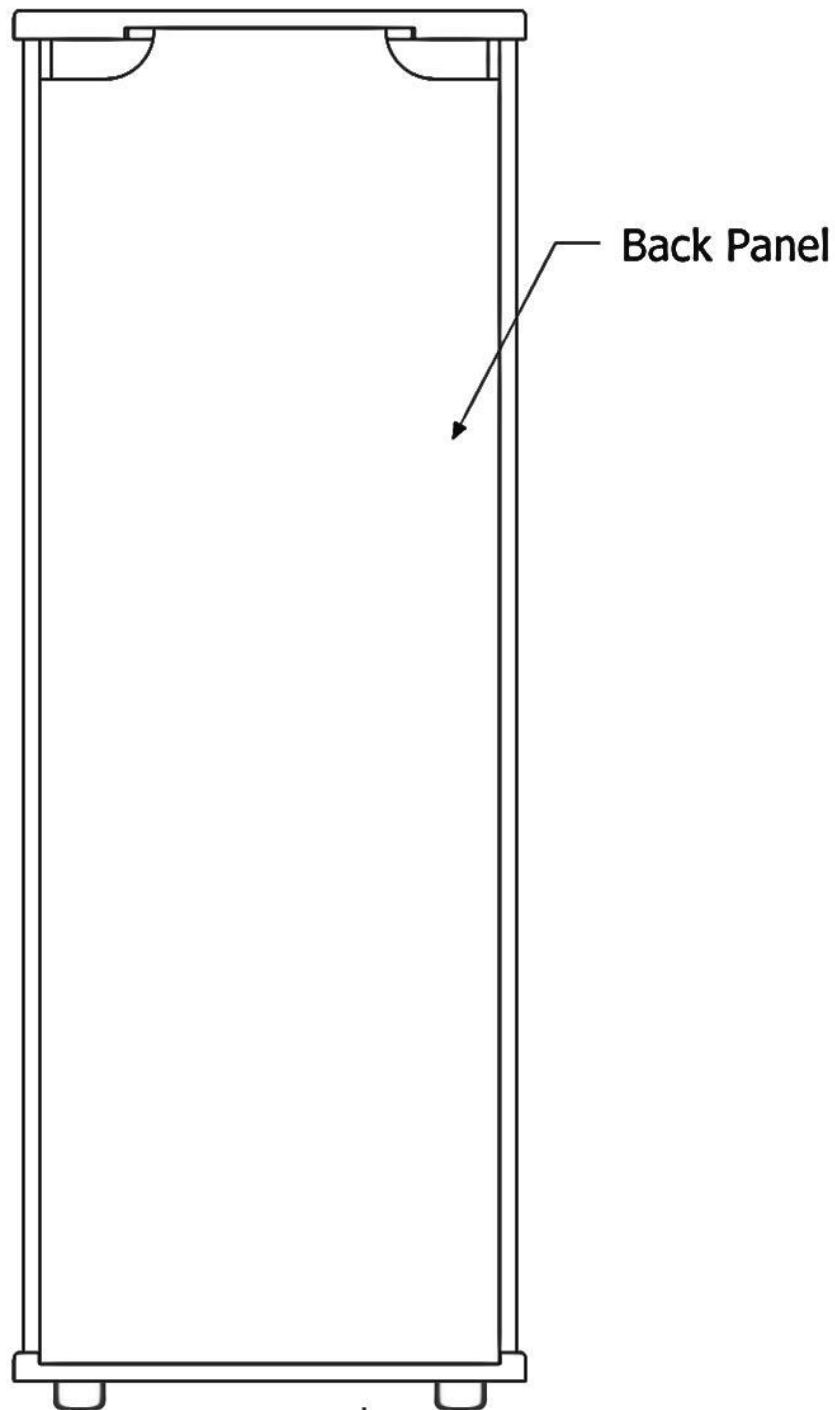

## **ASSEMBLE THE DRAWERS**

*To see a demonstration of how a drawer goes together, click on the assembly assistance tab at [www.farmersfurniture.co.nz](http://www.farmersfurniture.co.nz).*

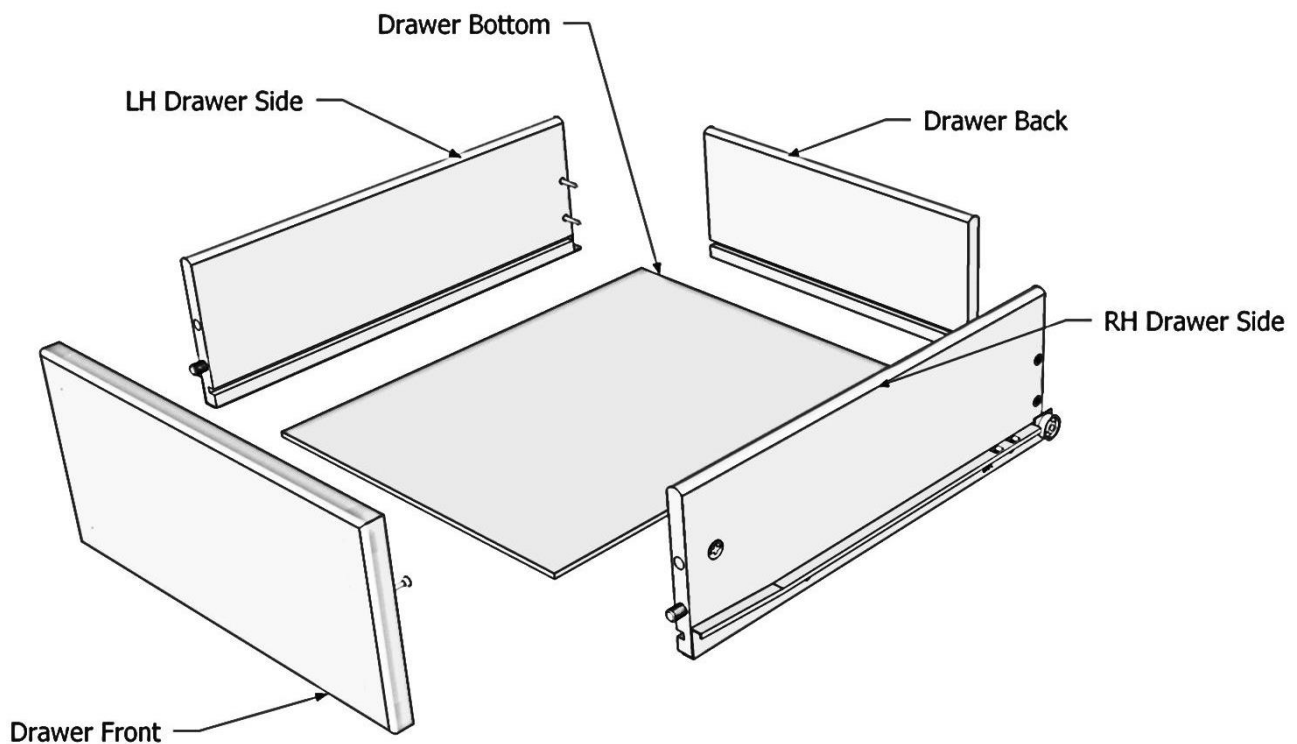


### **STEP 10 - INSTALL HARDWARE**


Install the hardware in the drawer parts as shown below.



**DRAWER FRONT**

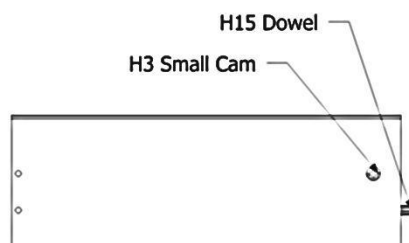

**LH DRAWER SIDE**

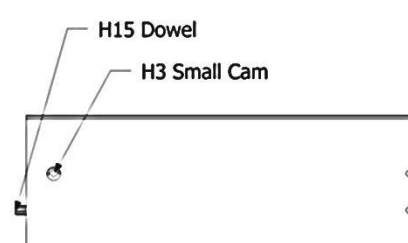

**RH DRAWER SIDE**

**Note:** Ensure that the arrow on the Small Cam points to the end of the drawer side nearest it.



**H15 Dowel**




**H3 Small Cam**




**H1 Connecting Bolt**

## STEP 11 - ASSEMBLE THE DRAWER

- Lay the Drawer Front face down on a smooth, clean surface.
- Attach the LH and RH Drawer Sides by fitting them into place over the Connecting Bolts installed in the Drawer Front.
- Turn the Small Cams clockwise to lock the Drawer Sides in place.
- Slide the Drawer Bottom into place in the grooves in the Drawer Sides and Drawer Front.
- Fit the Drawer Back into place between the Drawer Sides. The groove in the Drawer Back will fit over the end of the Drawer Bottom.
- Secure the Drawer Sides to the Drawer Back with four **H9 Screws** as shown below.

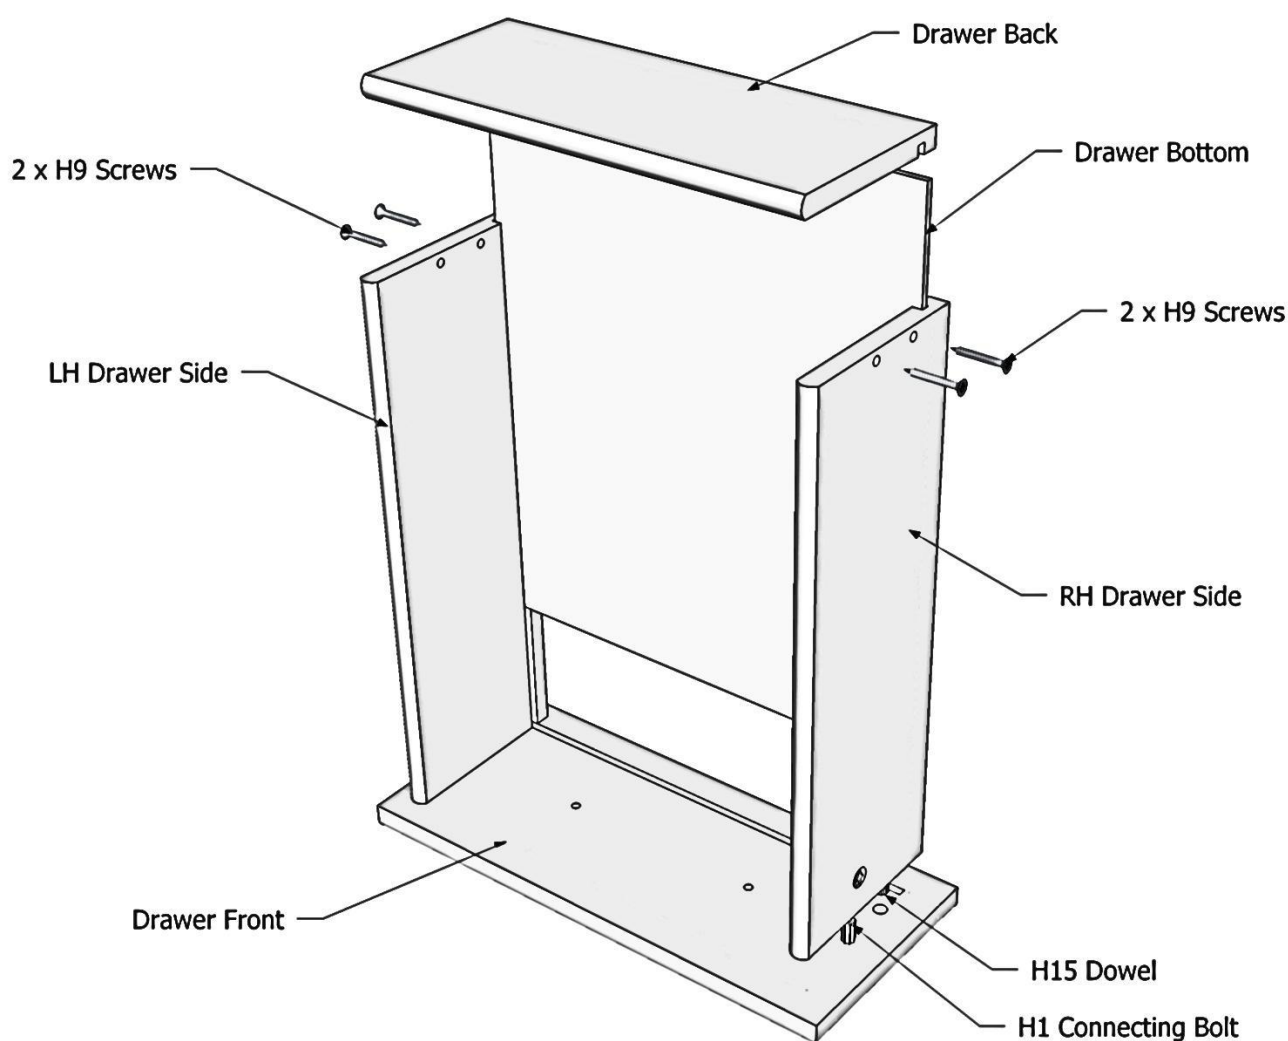


H9 Woodscrew

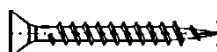


## STEP 12 - ATTACH THE DRAWER SLIDES

- Turn the drawer upside-down as shown and attach the Drawer Slides (**DR** and **DL**) with the four **H6 Small Woodscrews** as shown below. Ensure that the ends of the slides without the wheels are hard up against the back of the drawer front. **Each slide requires two screws.**

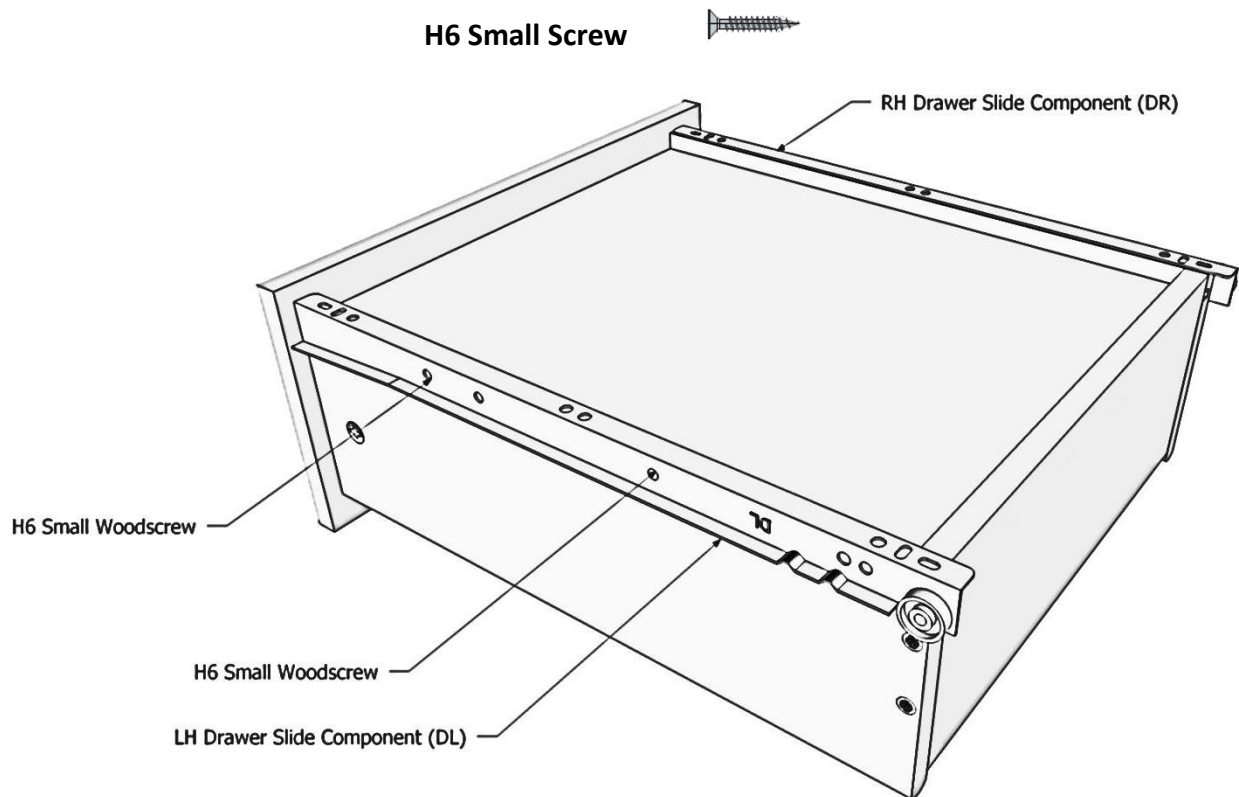


## STEP 13 - ATTACH THE BAR HANDLE AND INSERT THE DRAWERS

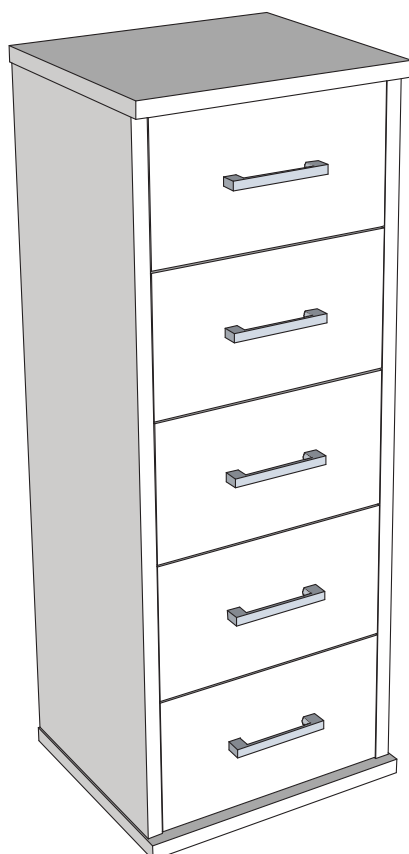

- Turn the drawer over.
- Attach the Drawer Bar Handle using the screw provided with the Bar Handle.
- Fit the drawers into the cabinet. Start with the top drawer and work your way down.

Angle the drawer slightly to ensure that the wheel at the back of the drawer slide goes behind the front wheel on the cabinet slide. Then lift the drawer up and slide it into the channel of the drawer slide attached to the cabinet.

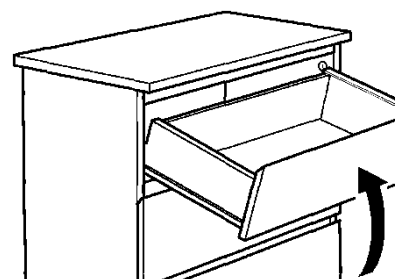

**CONGRATULATIONS, YOUR *TYLER 5 DRAWER LINGERIE CHEST* IS NOW COMPLETE.**

**THANK-YOU FOR SUPPORTING NEW ZEALAND MADE FURNITURE**

Add to your collection....



To view the full TYLER COLLECTION visit...

[www.farmersfurniture.co.nz](http://www.farmersfurniture.co.nz)