


THE Malone COLLECTION

CONGRATULATIONS ON THE PURCHASE
OF YOUR

MALONE 2 DRW BEDSIDE

WELCOME TO THE MAL-BS52
INSTRUCTION MANUAL

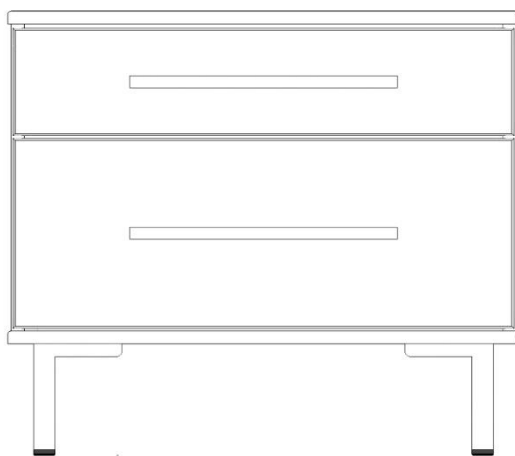

DID YOU KNOW.....

.....the **Malone** Collection is manufactured right here in New Zealand - by New Zealanders, for New Zealanders. Honest Kiwi Quality that is backed by our signature 5 Year Guarantee*. If by any chance you have a problem during this period, OUR promise to YOU is that we will repair or replace. Additionally, being based right in here New Zealand our experienced team's expertise is near at hand; if you have any problems at all during the assembly process, you can give us a call on our Freephone number (0800 100858) or email us at sales@compacfurniture.co.nz during normal working hours and we will step you through the process.

The Malone Collection is a **modern and stylish collection**, designed in response to latest interior trends, both in New Zealand and overseas. **Finished in a latest European trending Smokey Walnut woodgrain**, The **Malone Collection is right up with the minute**. Paired with a **minimalistic streamlined style** and an **emphasis on strong horizontal lines**, this collection is guaranteed to impress. Fully overlaid drawers give an illusion of length, attributing to the **slim line effect**. Thin silver extruded handles enhance this effect, adding to the overall horizontal theme without complicating surface areas. Tall slim chrome feet contribute the slim-line effect, and create a feeling of space, by lifting the unit up off the ground.

The Malone Collection is constructed from NZ made MDF, a renewable resource from sustainably managed pine forests. This means you can have complete confidence that with The Malone Collection, you are making an environmentally responsible choice.

If you have any questions please visit www.farmersfurniture.co.nz or call the manufacturers direct on 0800 100 858.

WHERE TO ASSEMBLE YOUR BEDSIDE

Assemble your Bedside on a clean and smooth surface, free of anything which may damage the finished surfaces. A clean, carpeted floor is ideal. If assembling on a workbench or table we suggest you cover it with the carton the Bedside was packaged in.

Warning! Never leave hardware parts where children can reach them. Small parts may be a choking hazard!

* 5 YEAR GUARANTEE

The Malone Collection carries a **5 year guarantee** against defective material or workmanship, excluding misuse and normal wear and tear. Obviously, as this unit is customer-assembled we cannot guarantee cabinet failure or damage from incorrect assembly. **All claims need proof of purchase – to ensure this register your Bedside at www.farmersfurniture.co.nz.**

Follow the assembly instructions carefully and take note of the precautions below.

- **Avoid direct sunlight wherever possible.**
- **Keep cabinet in a dry place.**
- **Wipe off spilt liquids immediately.**
- **Avoid placing hot items directly on the surface.**
- **Clean with a slightly damp cloth and buff dry with a soft dry cloth - microfibre is ideal.**
- **Do not allow nail polish, removers, deodorant or other damaging chemicals to come into contact with the surface.**

PARTS LIST

Please check you have all the necessary parts before beginning to assembling your Bedside. The measurements provided will help you to identify each part. If any parts are missing or damaged please contact the manufacturers directly, either via our website or our 0800 number. Do not call the store you bought the cabinet from as they will be unable to help you.















QTY	PART NAME	MEASUREMENTS	NOTES	MANUFACTURERS CODE
1	Top	596 x 396 x 15mm	Finished on one side. <i>Blue mark</i>	106428
1	Base	596 x 396 x 15mm	Finished on one side. <i>Purple mark</i>	106429
1	LH End	357 x 377 x 15mm	Finished on one side. <i>Green mark</i>	106430
1	RH End	357 x 377 x 15mm	Finished on one side. <i>Red mark</i>	106431
1	Small Drw Front	584 x 125 x 15mm	Finished on one side	106432
1	Large Drw Front	584 x 221 x 15mm	Finished on one side	106433
1	LH Drw Side – Sml	340 x 95 x 12mm	Finished on both sides. 12mm	106434
1	LH Drw Side - Lrg	340 x 160 x 12mm	Finished on both sides. 12mm	106436
1	RH Drw Side – Sml	340 x 95 x 12mm	Finished on both sides. 12mm	106435
1	RH Drw Side - Lrg	340 x 160 x 12mm	Finished on both sides. 12mm	106437
1	Drawer Back – Sml	508 x 90 x 12mm	Finished on one side. 12mm	106438
1	Drawer Back – Lrg	508 x 155 x 12mm	Finished on one side. 12mm	106405
2	Drawer Bottom	518 x 339 x 4mm	Finished on one side. 4mm	106439
1	Back Panel	377 x 578 x 4mm	Plain 4mm	106440

COLOUR CODING

To help identify the parts, the main components are colour coded with a pen mark on the back edge of the panel. (The unfinished edge.)


- **RED** **Right Hand Parts.** (E.g. RH End, RH Division, RH Drawer Side.)
- **GREEN** **Left Hand Parts.** (E.g. LH End, LH Division, LH Drawer Side.)
- **BLUE** **Tops**
- **PURPLE** **Bases**

HARDWARE LIST

CABINET HARDWARE				
QTY	PART NAME	ASSEMBLY CODE	PICTURE	MANUFACTURERS CODE
4	Connecting Bolts	H1		102649
4	15mm Cams	H2		102511
4	Dowels	H15		102515
8	Small Silver Screws	H61		106618
4	Large Screws	H5		102648
2	Metal Drawer Slide sets	H60		102482
2	Bar Handles	H58		102472
12	Gold Panhead Screws	H7		106118
4	Tall Feet	H59		106092
DRAWER HARDWARE				
4	Connecting Bolts	H1		102649
4	12mm Cams	H3		102510
4	Dowels	H15		102515
8	Small Panhead Screws	H61		1026618
8	Screws	H9		102645

CAM INSTALLATION & OPERATION GUIDE

The Cam and Connecting Bolt system is used to put your unit together. Below is an explanation of how this system works.

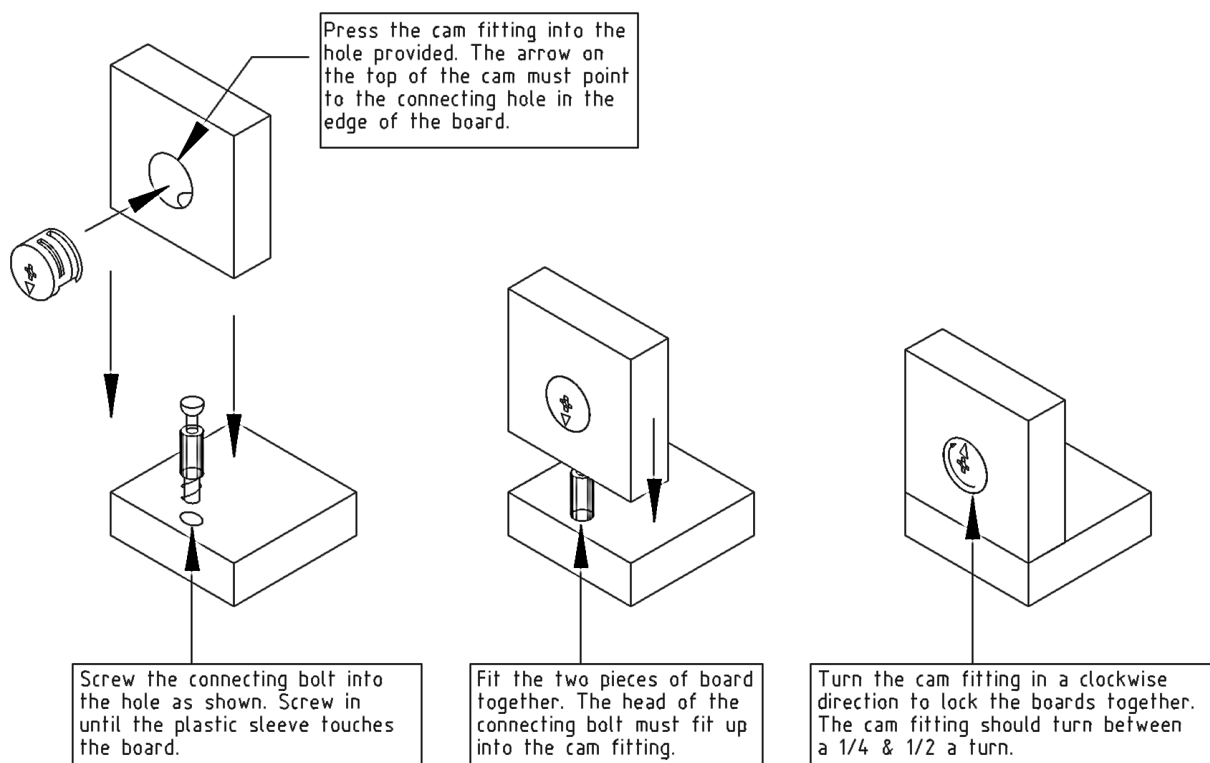

To see a demonstration click on the assembly assistance tab at www.warehousefurniture.co.nz

DRAWER SLIDES GUIDE

Your pack will contain 2 sets of Full Extension Drawer Slides. Each drawer requires one set. Left and right sides are interchangeable. Each set consists of two pairs, each of which has two parts, the Cabinet component and the Drawer component. You will need to separate the two parts before beginning the assembly process. NOTE: Slides could be greasy.


Each pair of slides in your pack will appear as below.



To separate the two parts of the slide, extend the slide as shown below.




Turn the extended slide onto its reverse side. Lift the black plastic tab as shown below, and slide the end section of the slide right out, to separate the two pieces. NOTE: This could be a bit stiff.



The two separated pieces will appear as below.

Cabinet Component:




Drawer Component:



INSTALL THE HARDWARE


STEP 1 - TOP

- Lay the Top of the unit finished side down on a clean, clear surface.
- Screw four **H1 Connecting Bolts** into the holes as indicated in the drawing below

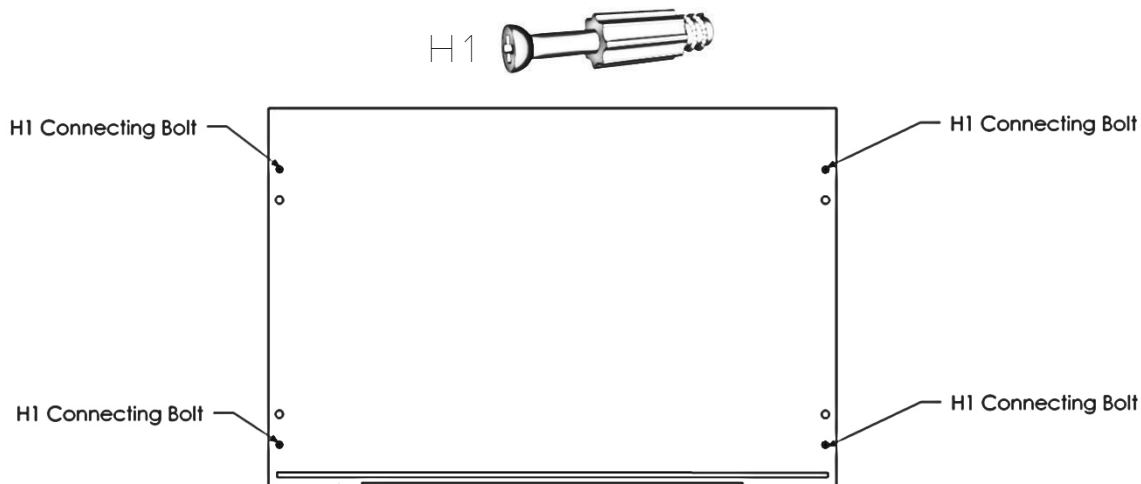


STEP 2 - LH END

- Lay the **LH End** on a smooth clean surface with holes facing upwards.
- Attach two **Cabinet Drawer Slides** to the LH End using the **H61 Small Silver Screws**. Use the holes as indicated in the diagram below - each slide requires two screws. Ensure that the Slides are facing the same way as in the diagram.
- Insert two **H2 Large Cams** as shown in diagram. Ensure the arrow on the top of the Cam points towards the top edge of the End.
- Push two **H15 Dowels** into the top edge of the End.

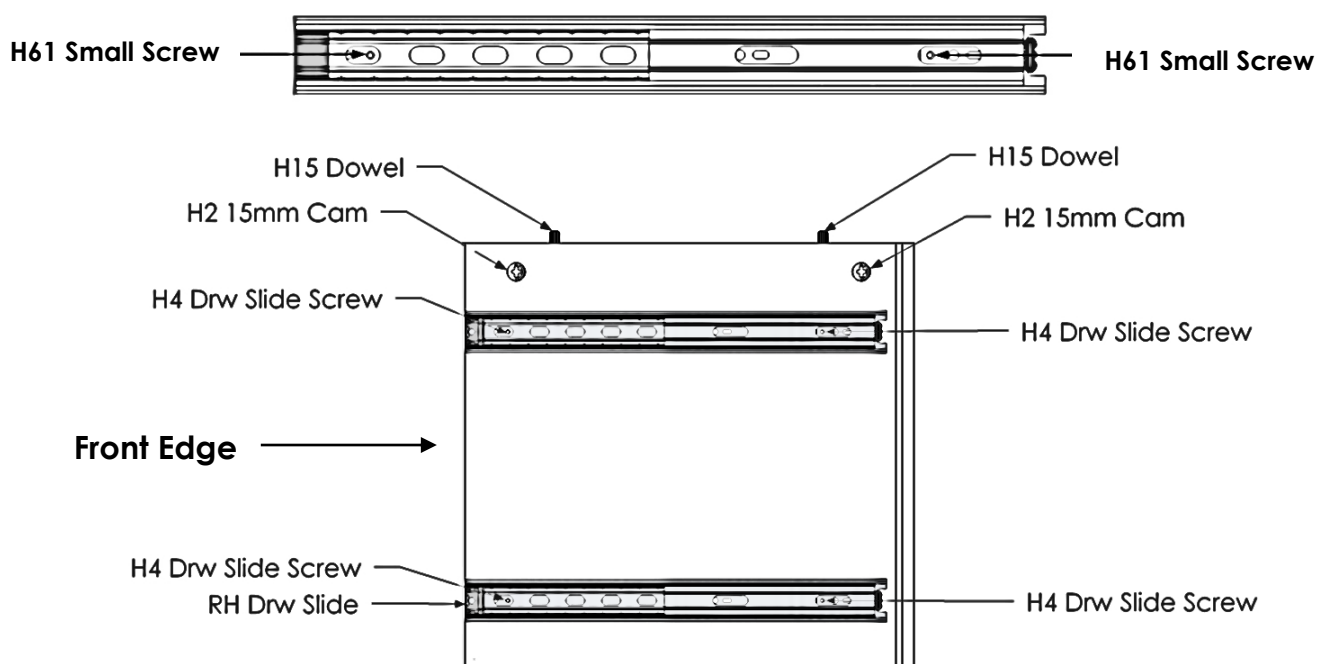

STEP 3 - RH END


- Lay the **RH End** on a smooth clean surface with holes facing upwards.
- Attach two **Cabinet Drawer Slides** to the RH End using the **H61 Small Silver Screws**. Use the holes as indicated in the diagram below - each slide requires two screws. Ensure that the Slides are facing the same way as in the diagram.
- Insert two **H2 Large Cams** as shown in diagram. Ensure the arrow on the top of the Cam points towards the top edge of the End.
- Push two **H15 Dowels** into the top edge of the End.

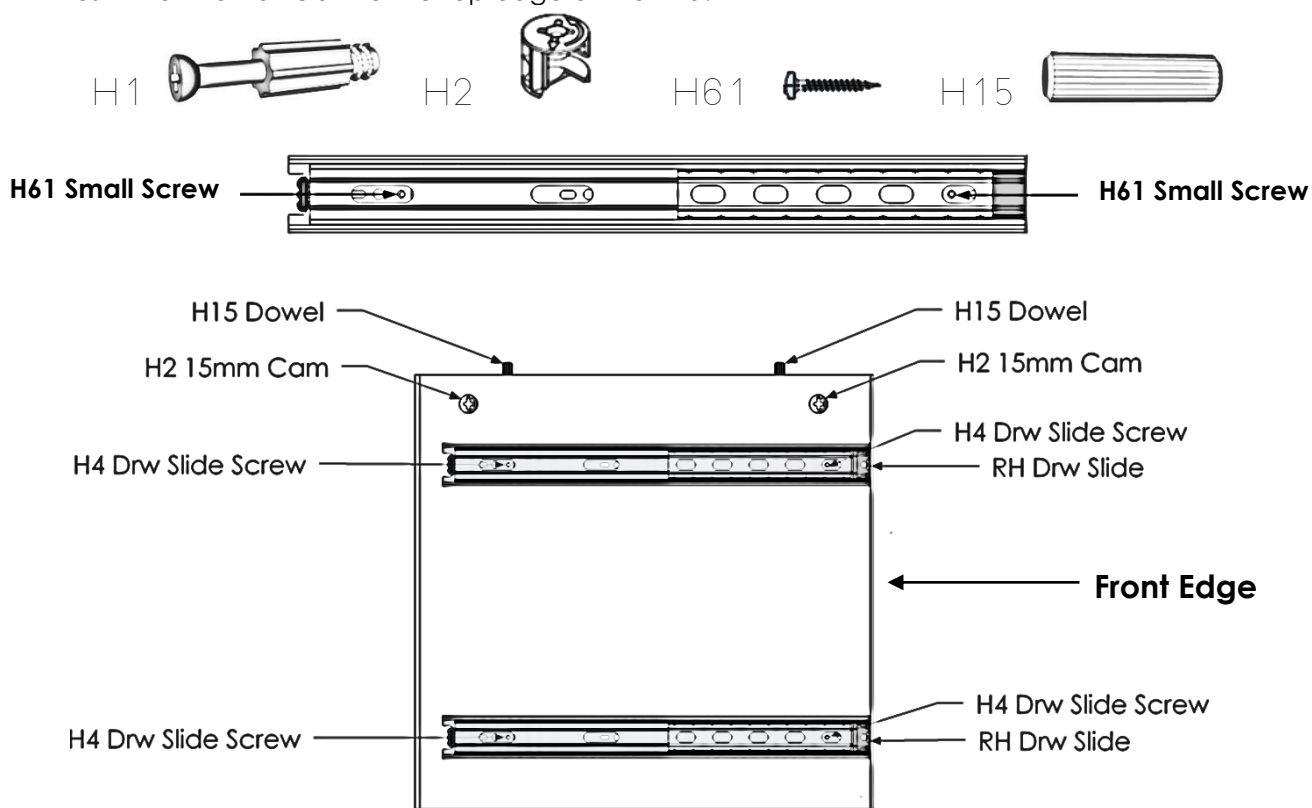

ASSEMBLE THE UNIT


STEP 4 - ENDS TO TOP

- Stand the Top on its back edge.
- Fit the LH End and RH Ends to the underside of the Top. The Connecting Bolts in the Top will fit into the Metal Cams in the Ends.
- Turn the Metal Cams in a clockwise direction to lock the Top to the Ends. Ensure they turn a least a $\frac{1}{4}$ to $\frac{1}{2}$ a turn.

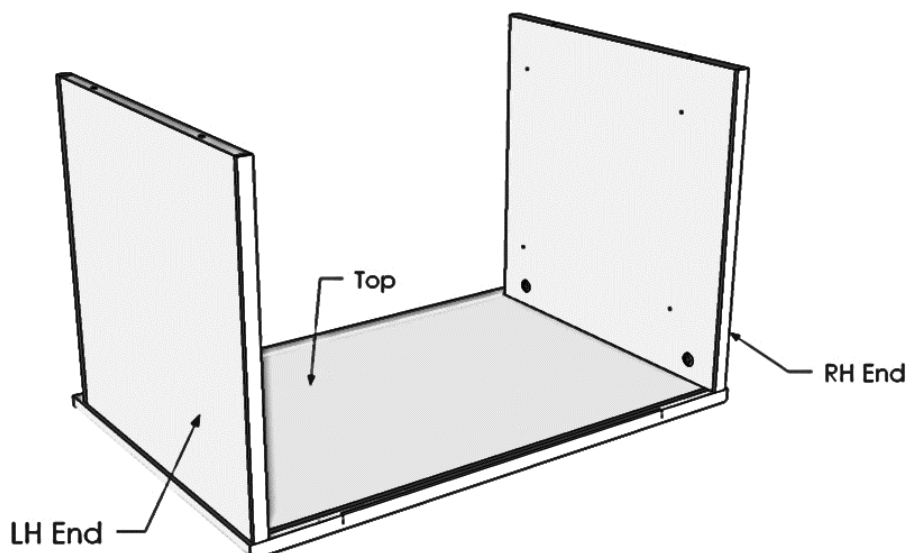


STEP 5 - BACK PANEL

- Carefully turn the bedside onto its Top.
- Take the Back Panel. Slide this into place between the grooves in the Ends.

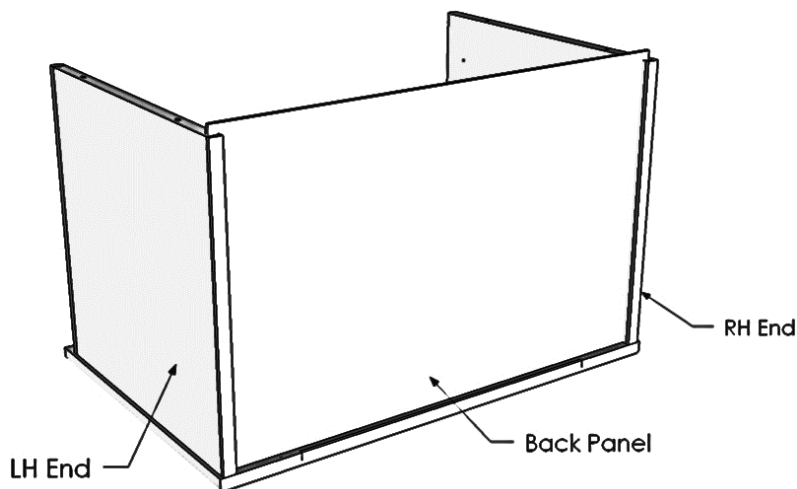


STEP 6 - BASE

- Attach the Base using the four **H5 Large Screws**. Ensure the finished side of the Base faces into the inside of the Bedside

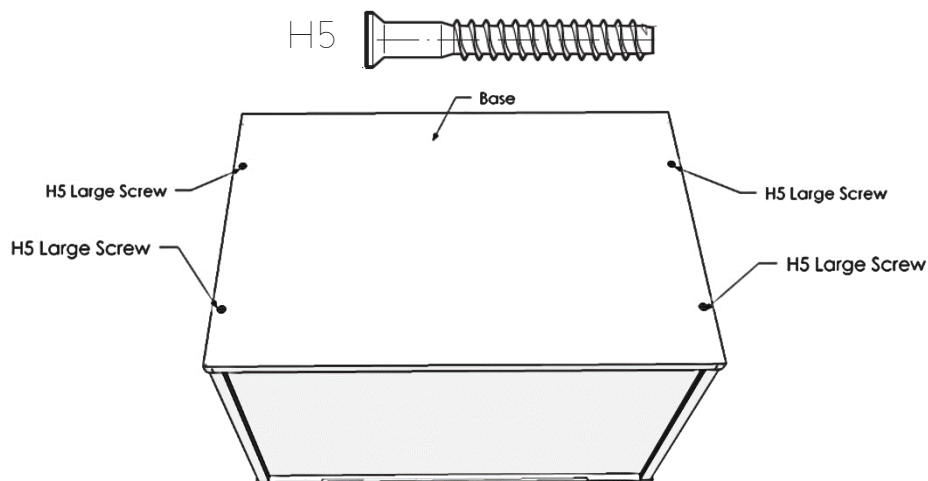


STEP 7 - BASE

- Next screw on the four Tall Feet using the **H7 Gold Panhead Screws**. Use the pre-drilled holes.
- Turn the unit upright. Be careful not to drag or scratch it.

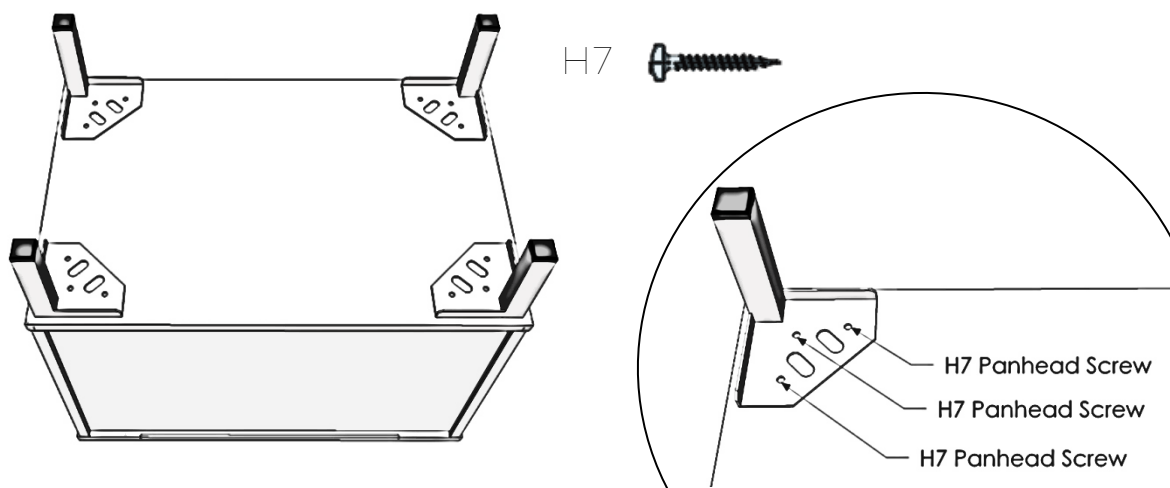

ASSEMBLE THE DRAWERS


Your Malone 2 Drawer Bedside has two drawers. Both Drawers are constructed from the same parts and are therefore assembled the same way.

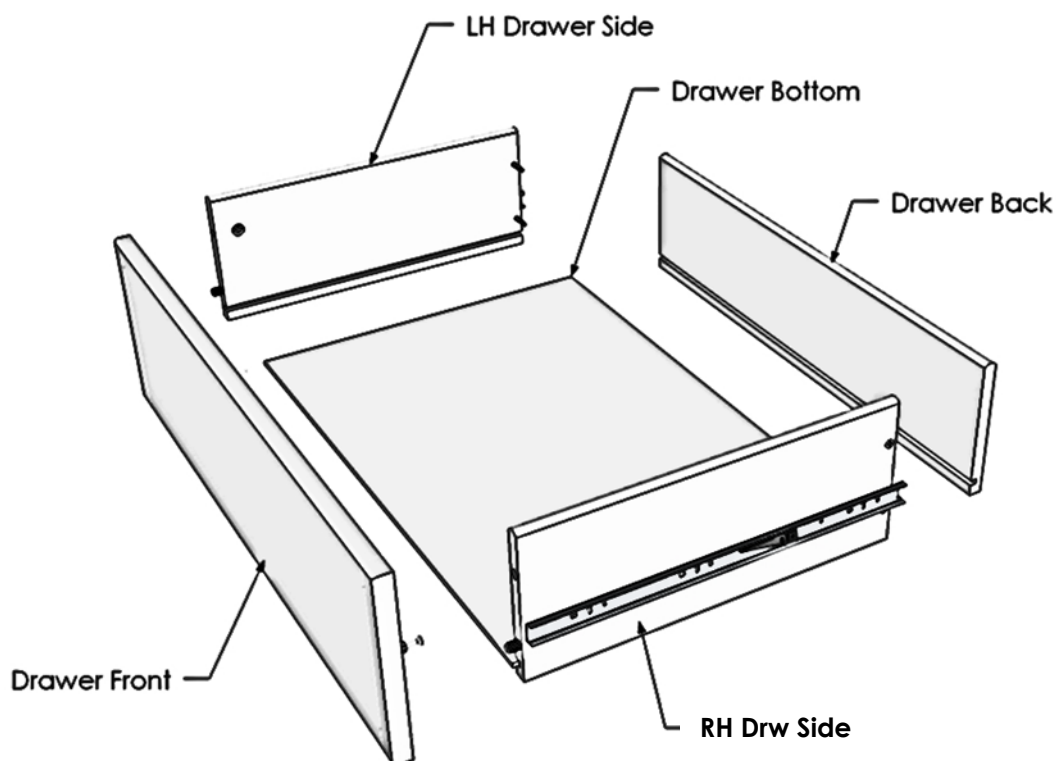


demonstration of
put a drawer
click on the
assistance tab at
nersfurniture.co.nz

STEP 8 - INSTALL HARDWARE /DRAWERS


- Install the hardware in the drawer parts as shown below. *NOTE: Be sure that the arrow on the Small Cam points to the end of the drawer side nearest it.*

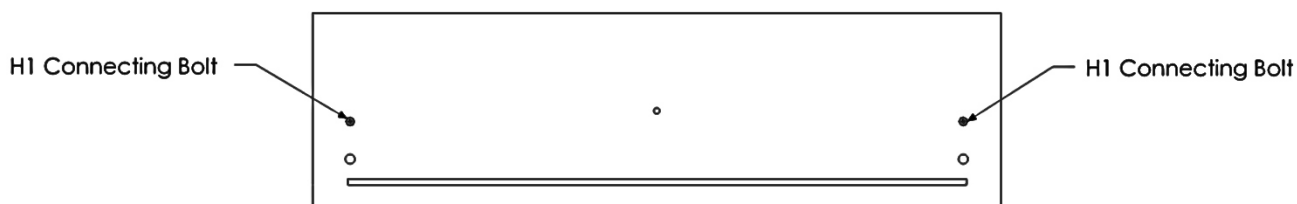

DRAWER FRONT

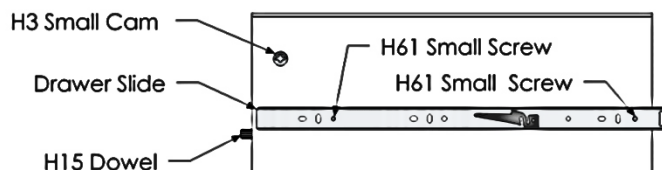


RH DRAWER SIDE

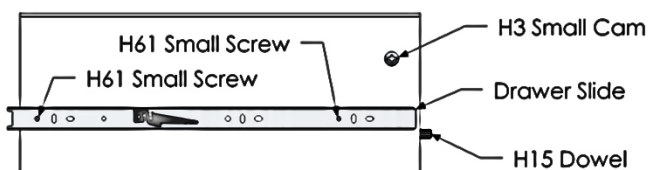

LH DRAWER SIDE


STEP 9 – SIDES AND BOTTOM

- Lay the **Drawer Front** face down on a smooth, clean surface.
- Attach the LH and RH **Drawer Sides** by fitting them into place over the Connecting Bolts installed in the Drawer Front.
- Turn the Small Cams clockwise to lock the Drawer Sides in place.
- Slide the **Drawer Bottom** into place in the grooves in the Drawer Sides and Drawer Front.

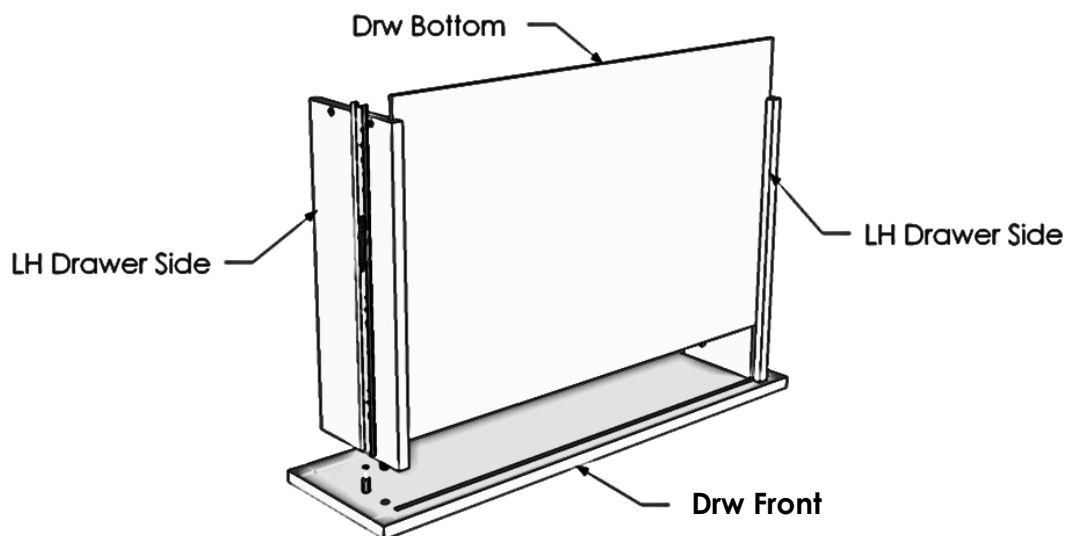

STEP 10 – ATTACH DRAWER BACK



- Fit the **Drawer Back** into place between the Drawer Sides. The groove in the Drawer Back will fit over the end of the Drawer Bottom.
- Secure the Drawer Sides to the Drawer Back with four **H9 Screws** as shown below.

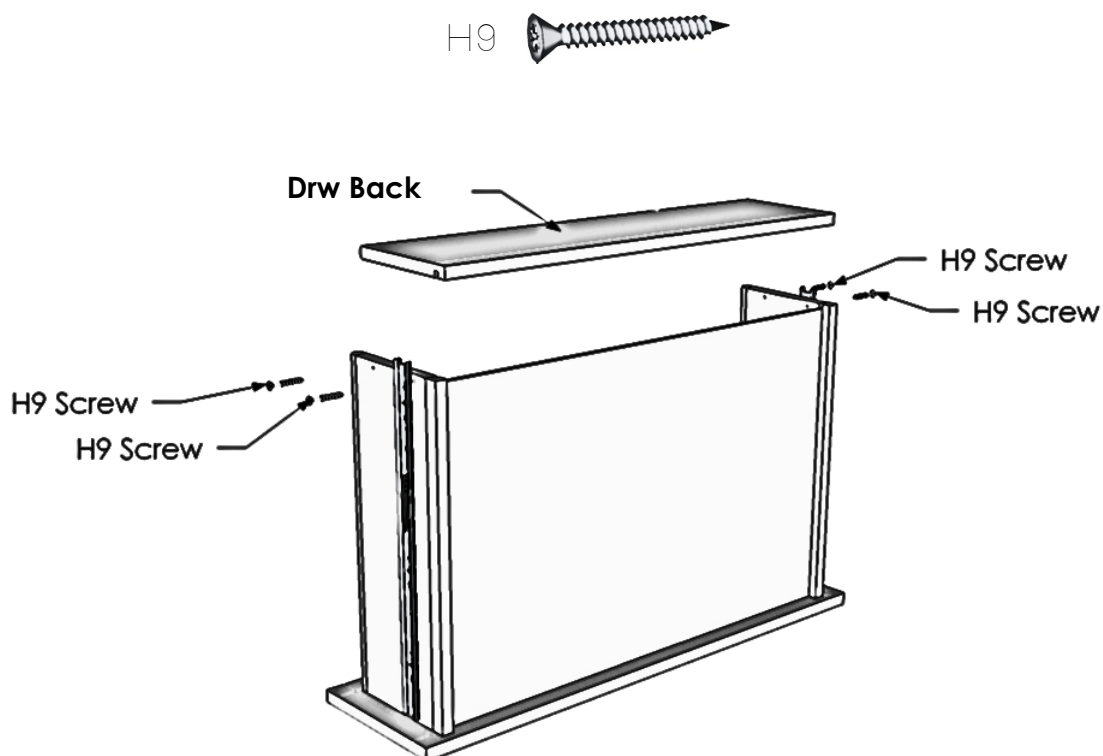

STEP 11 - ATTACH HANDLES AND FIT DRAWERS INTO CABINET

- Turn the drawer over and attach the handle using the screws provided.
- Fit the drawers into the cabinet. Start with the top drawers and work your way down.

Holding the Drawer level, fit the Slides installed on the Drawers to the slides installed in the cabinet. Without forcing, slide the drawer in until the slides click. It may be helpful to hold the sliding parts of the Cabinet slides while you slide the drawer in. NOTE: Do not force the drawer if it jams. Take it out and ensure that the slides are lined up properly before inserting.

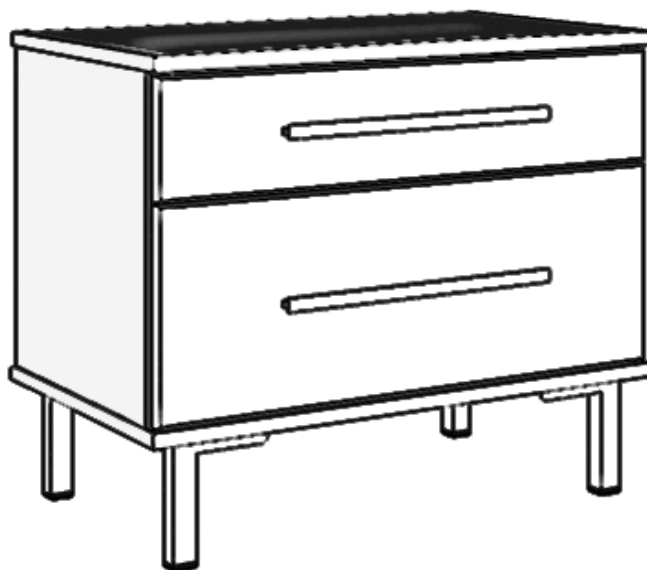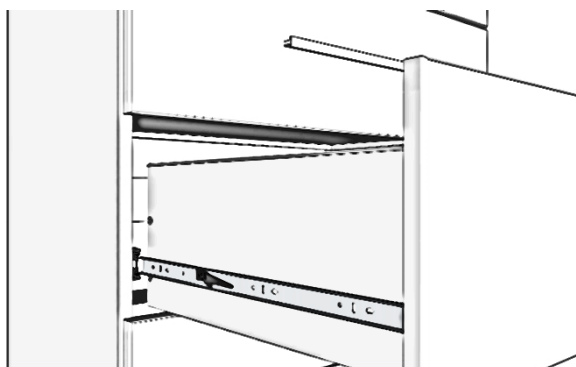

CONGRATULATIONS, YOUR **MALONE** 2 DRAWER BEDSIDE IS NOW COMPLETE.
THANK-YOU FOR SUPPORTING NEW ZEALAND MADE FURNITURE