


# Malone

COLLECTION

CONGRATULATIONS ON THE PURCHASE  
OF YOUR .....

## MALONE 5 DRW TALLBOY

WELCOME TO THE MAL - TB85 .....  
INSTRUCTION MANUAL

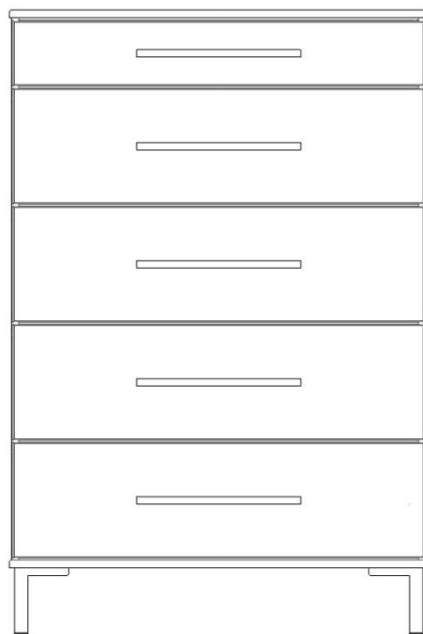

0800 100 858

# DID YOU KNOW.....

.....the **Malone** Collection is manufactured right here in New Zealand - by New Zealanders, for New Zealanders. Honest Kiwi Quality that is backed by our signature 5 Year Guarantee\*. If by any chance you have a problem during this period, OUR promise to YOU is that we will repair or replace. Additionally, being based right in here New Zealand our experienced team's expertise is near at hand; if you have any problems at all during the assembly process, you can give us a call on our Freephone number (0800 100858) or email us at [sales@compacfurniture.co.nz](mailto:sales@compacfurniture.co.nz) during normal working hours and we will be happy to step you through the process.

The Malone Collection is a **modern and stylish collection**, designed in response to latest interior trends, both in New Zealand and overseas. **Finished in a latest European trending Smokey Walnut woodgrain**, The **Malone Collection is right up with the minute**. Paired with a **minimalistic streamlined style** and an **emphasis on strong horizontal lines**, this collection is guaranteed to impress. Fully overlaid drawers give an illusion of length, attributing to the **slim line effect**. Thin silver extruded handles enhance this effect, adding to the overall horizontal theme without complicating surface areas. Tall slim chrome feet contribute the slim-line effect, and create a feeling of space, by lifting the unit up off the ground.

The Malone Collection is constructed from NZ made MDF, a renewable resource from sustainably managed pine forests. This means you can have complete confidence that with The Malone Collection, you are making an environmentally responsible choice.

**If you have any questions please visit [www.farmersfurniture.co.nz](http://www.farmersfurniture.co.nz) or call the manufacturers direct on 0800 100 858.**

## WHERE TO ASSEMBLE YOUR CABINET

Assemble your Tallboy on a clean and smooth surface, free of anything which may damage the finished surfaces. A clean, carpeted floor is ideal. If assembling on a workbench or table we suggest you cover it with the carton the Tallboy was packaged in.

**Warning!** Never leave hardware parts where children can reach them. Small parts may be a choking hazard!

## \* 5 YEAR GUARANTEE

The Malone Collection carries a **5 year guarantee** against defective material or workmanship, excluding misuse and normal wear and tear. Obviously, as this unit is customer-assembled we cannot guarantee cabinet failure or damage from incorrect assembly. **All claims need proof of purchase – to ensure this register your cabinet at [www.farmersfurniture.co.nz](http://www.farmersfurniture.co.nz).**

Follow the assembly instructions carefully and take note of the precautions below.

- **Avoid direct sunlight wherever possible.**
- **Keep cabinet in a dry place.**
- **Wipe off spilt liquids immediately.**
- **Avoid placing hot items directly on the surface.**
- **Clean with a slightly damp cloth and buff dry with a soft dry cloth - microfibre is ideal.**
- **Do not allow nail polish, removers, deodorant or other damaging chemicals to come into contact with the surface.**

# PARTS LIST

Please check you have all the necessary parts before beginning to assembling your cabinet. The measurements provided will help you to identify each part. If any parts are missing or damaged please contact the manufacturers directly, either via our website or our 0800 number. Do not call the store you bought the cabinet from as they will be unable to help you.









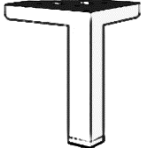





QTY	PART NAME	MEASUREMENTS	NOTES	MANUFACTURERS CODE
1	Top	796 x 396 x 15mm	Finished on one side. <i>Blue mark.</i>	106465
1	Base	796 x 396 x 15mm	Finished on one side. <i>Purple mark.</i>	106466
1	LH End	1029 x 377 x 15mm	Finished on one side. <i>Green mark.</i>	106467
1	RH End	1029 x 377 x 15mm	Finished on one side. <i>Red mark.</i>	106468
2	Rails	758 x 80 x 15mm	Plain MDF	106469
1	Small Drw Front	785 x 125 x 15mm	Finished on one side	106470
4	Large Drw Fronts	785 x 221 x 15mm	Finished on one side	106471
1	LH Drw Side – Sml	340 x 95 x 12mm	Finished on both sides. 12mm	106434
4	LH Drw Side - Lrg	340 x 160 x 12mm	Finished on both sides. 12mm	106436
1	RH Drw Side – Sml	340 x 95 x 12mm	Finished on both sides. 12mm	106435
4	RH Drw Side - Lrg	340 x 160 x 12mm	Finished on both sides. 12mm	106437
1	Drawer Back – Sml	708 x 90 x 12mm	Finished on one side. 12mm	106472
4	Drawer Backs – Lrg	708 x 155 x 12mm	Finished on one side. 12mm	106473
5	Drawer Bottom	718 x 339 x 4mm	Finished on one side. 4mm	106474
1	LH Back Panel	1049 x 391 x 4mm	Plain 4mm. <i>Groove on one edge.</i>	106475
1	RH Back Panel	1049 x 391 x 4mm	Plain 4mm. <i>Tongue on edge.</i>	106476

## COLOUR CODING

To help identify the parts, the main components are colour coded with a pen mark on the back edge of the panel. (The unfinished edge.)


- **RED**                      **Right Hand Parts.** (E.g. RH End, RH Division, RH Drawer Side.)
- **GREEN**                  **Left Hand Parts.** (E.g. LH End, LH Division, LH Drawer Side.)
- **BLUE**                    **Tops**
- **PURPLE**                **Bases**

## HARDWARE LIST

QTY	PART NAME	ASSEMBLY CODE	PICTURE	MANUFACTURERS CODE
<b>CABINET HARDWARE</b>				
8	Connecting Bolts	H1		102649
8	15mm Cams	H2		102511
8	Dowels	H15		102515
20	Small Silver Screws	H61		106618
4	Large Screws	H5		102648
5	Metal Drawer Slide sets	H60		102482
5	Bar Handles	H58		102472
12	Gold Panhead Screws	H7		106118
4	Tall Feet	H59		106092
<b>DRAWER HARDWARE</b>				
10	Connecting Bolts	H1		102649
10	12mm Cams	H3		102510
10	Dowels	H15		102515
20	Small Silver Screws	H61		106618
8	Screws	H9		102645

# CAM INSTALLATION & OPERATION GUIDE

The Cam and Connecting Bolt system is used to put your unit together. Below is an explanation of how this system works.

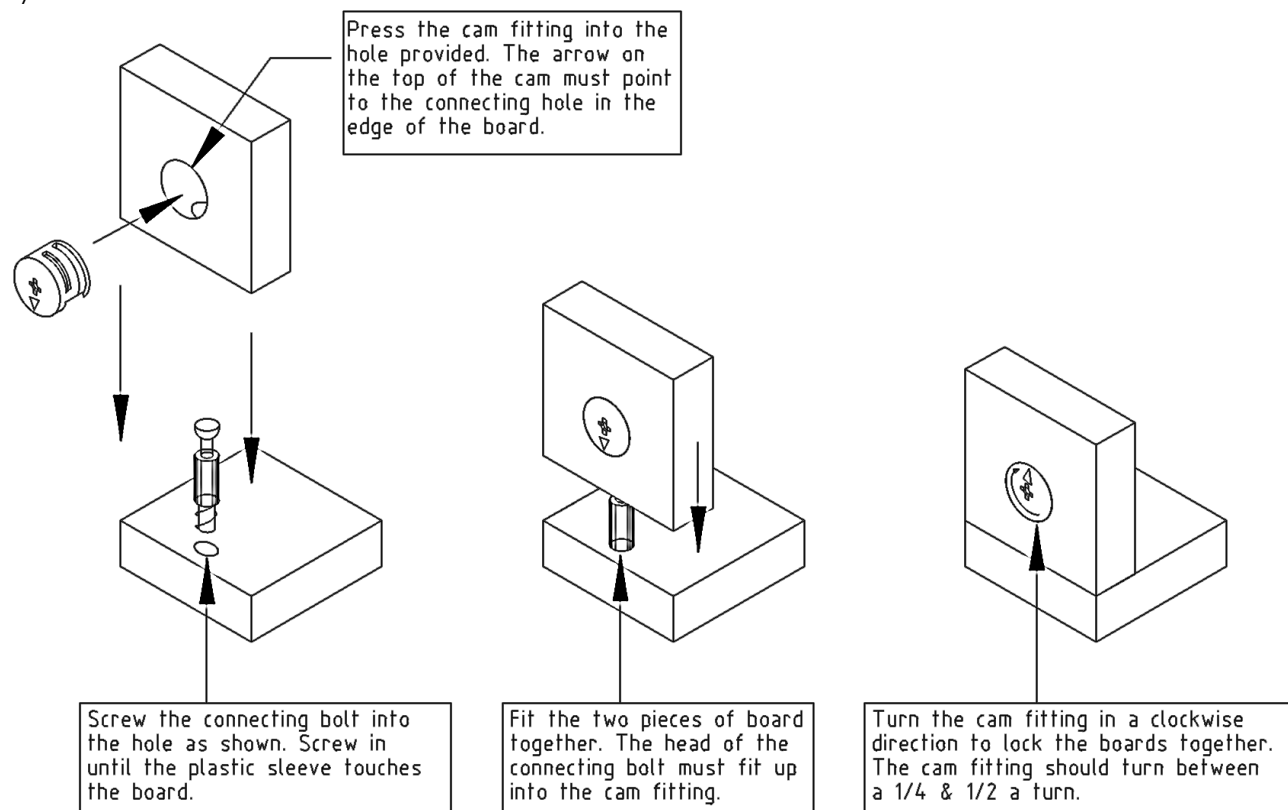

To see a demonstration click on the assembly assistance tab at [www.farmersfurniture.co.nz](http://www.farmersfurniture.co.nz).

## DRAWER SLIDES GUIDE

Your pack will contain 5 sets of Full Extension Drawer Slides. Each drawer requires one set. Left and right sides are interchangeable. Each set consists of two pairs, each of which has two parts, the Cabinet component and the Drawer component. You will need to separate the two parts before beginning the assembly process. NOTE: Slides could be greasy.

Each pair of slides in your pack will appear as below.



To separate the two parts of the slide, extend the slide as shown below.



Turn the extended slide onto its reverse side. Lift the black plastic tab as shown below, and slide the end section of the slide right out, to separate the two pieces. NOTE: This could be a bit stiff.



The two separated pieces will appear as below.

**Cabinet Component:**





**Drawer Component:**



# INSTALL THE HARDWARE


## STEP 1 - TOP

- Lay the Top of the unit finished side down on a clean, clear surface.
- Screw four **H1 Connecting Bolts** into the holes as indicated in the drawing below

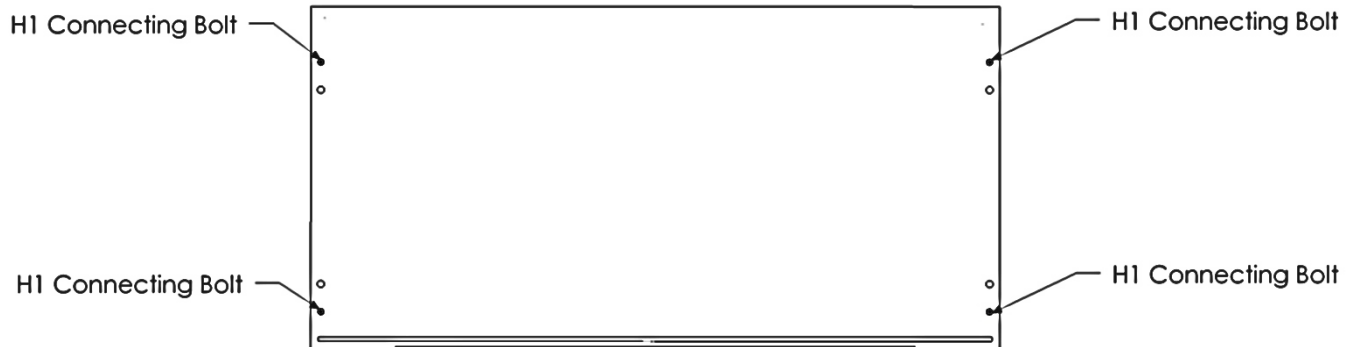


## STEP 2 - RAILS

- Take the rails. Insert two **H2 Large Cams** as shown in diagram. Ensure the arrow on the top of the Cam points towards the nearest short edge of the Rail.
- Push one **H15 Dowel** into each end of each rail.

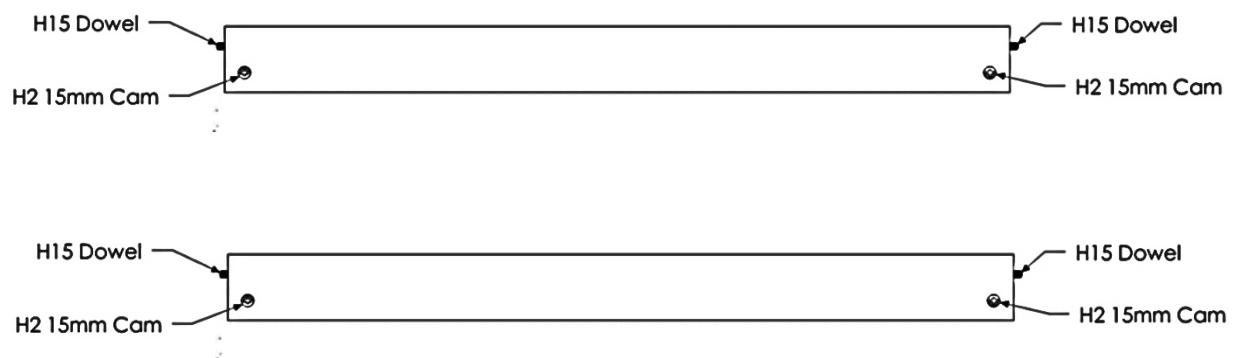


## STEP 3 - LH END

- Lay the **LH End** on a smooth clean surface with holes facing upwards.
- Attach five **Cabinet Drawer Slides** to the LH End using the **H61 Small Silver Screws**. Use the holes as indicated in the diagram below - each slide requires two screws. Ensure that the Slides are facing the same way as in the diagram.
- Insert two **H2 Large Cams** as shown in diagram. Ensure the arrow on the top of the Cam points towards the top edge of the End.
- Push two **H15 Dowels** into the top edge of the End.
- Screw in four **H1 Connecting Bolts** as shown below.

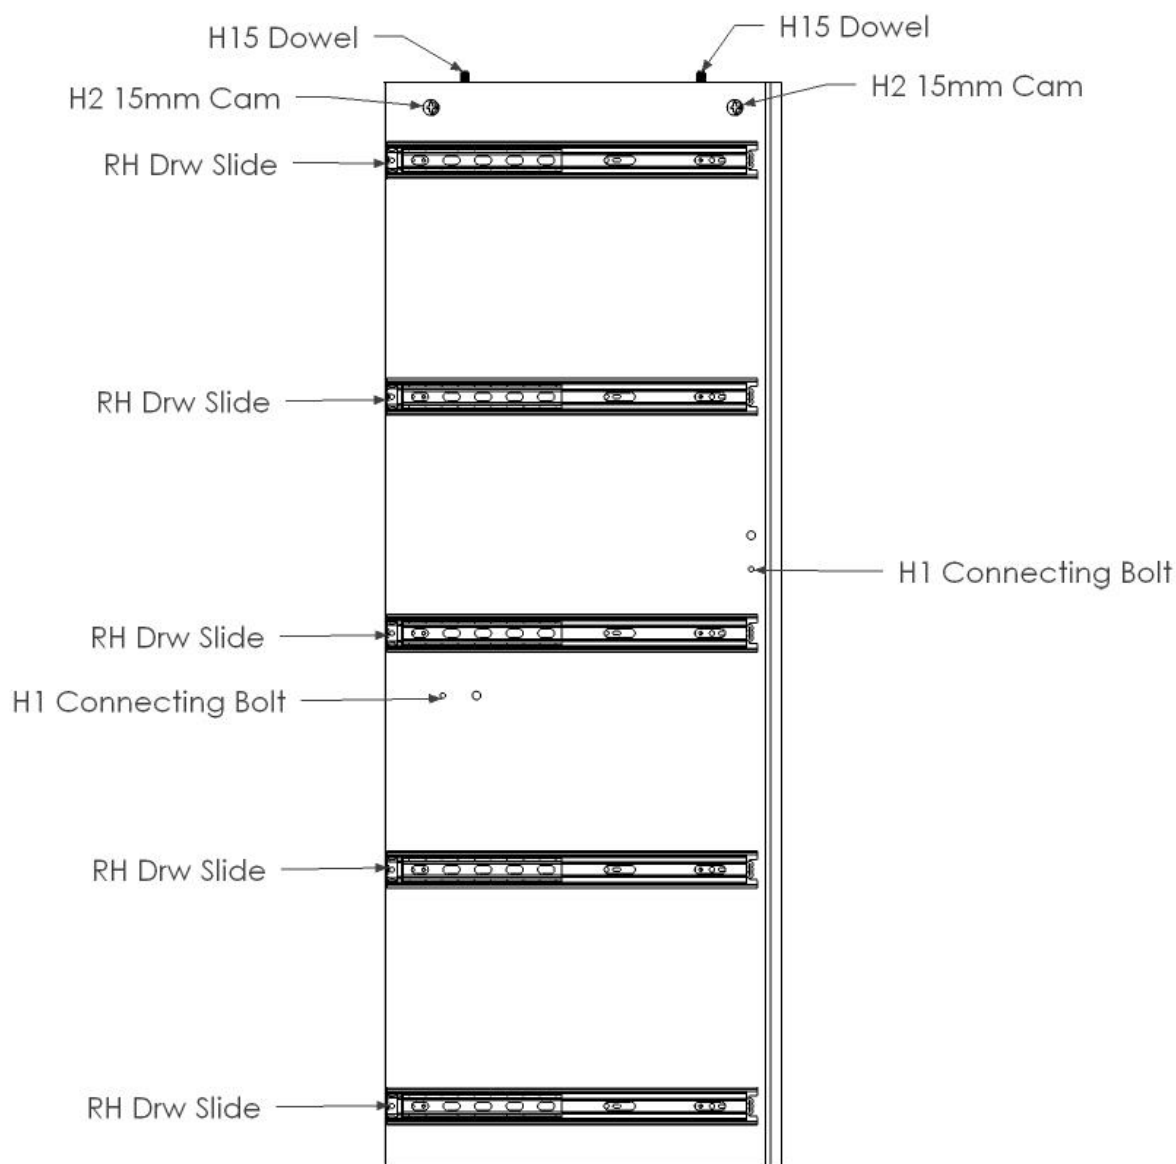

## STEP 4 - RH END

- Lay the **RH End** on a smooth clean surface with holes facing upwards.
- Attach five **Cabinet Drawer Slides** to the RH End using the **H61 Small Silver Screws** . Use the holes as indicated in the diagram below - each slide requires two screws. Ensure that the Slides are facing the same way as in the diagram.
- Insert two **H2 Large Cams** as shown in diagram. Ensure the arrow on the top of the Cam points towards the top edge of the End.
- Push two **H15 Dowels** into the top edge of the End.
- Screw in four **H1 Connecting Bolts** as shown below.

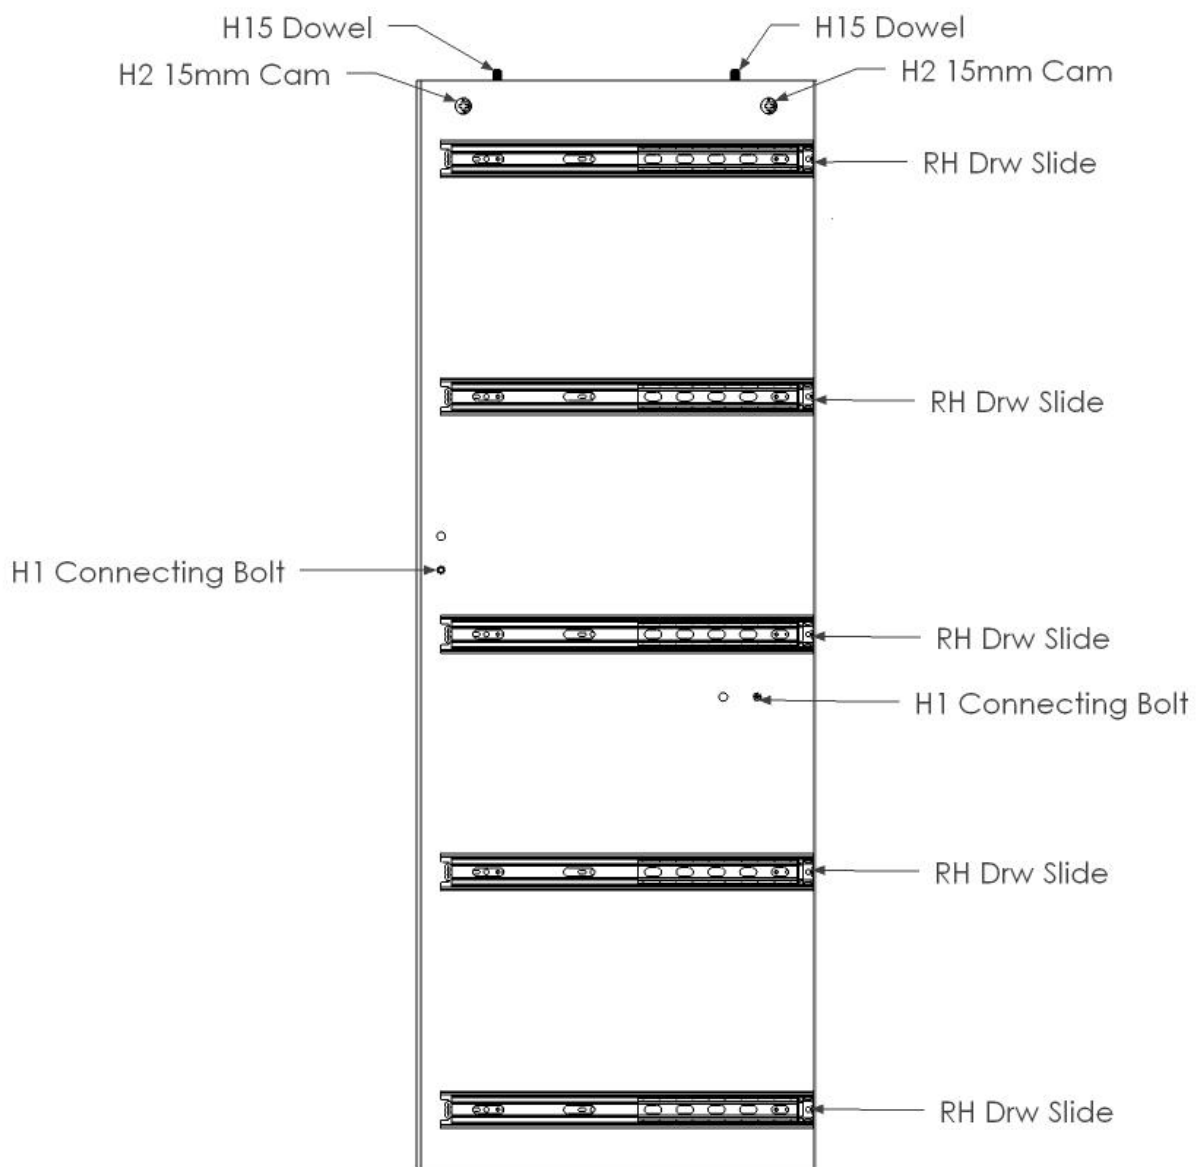




# ASSEMBLE THE UNIT


## STEP 5 – RAILS TO LH END

- Lay the **LH End** finished side down on a clean clear surface. Fit the two **Rails** as shown below. The H1 Connecting Bolts installed in the End will fit into the H2 Large cams installed in the Rails.
- Turn the Metal Cams installed in the Rails in a clockwise direction to lock the Rails to the End. Ensure they turn a least a  $\frac{1}{4}$  to  $\frac{1}{2}$  a turn.

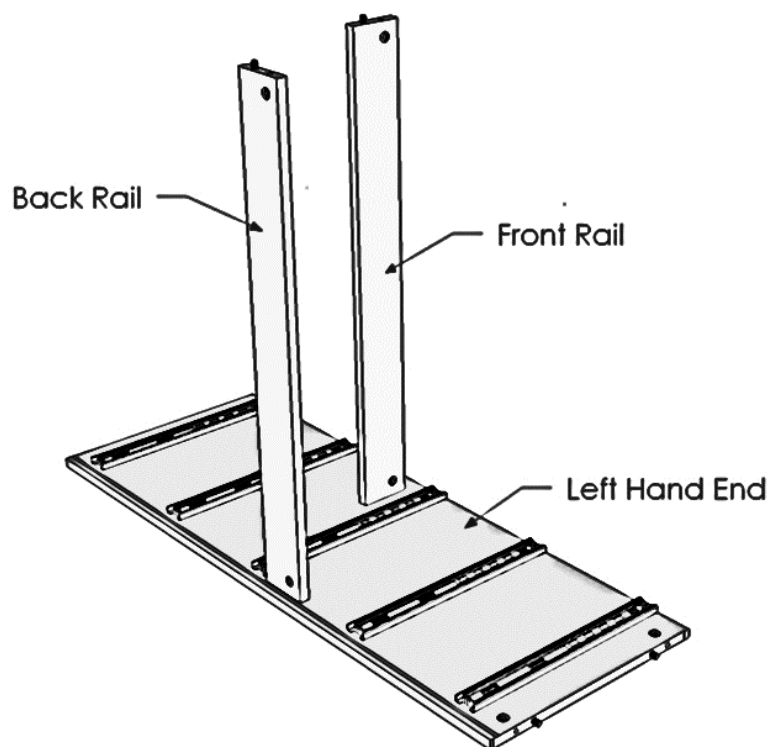


## STEP 6 – RH END

- Attach the **RH End** to the **Rails** by connecting the H1 Connecting Bolts installed in the RH End to the H2 15mm Cams installed in the Rails as shown below.
- Turn the Metal Cams installed in the Rails in a clockwise direction to lock the Rails to the End. Ensure they turn a least a  $\frac{1}{4}$  to  $\frac{1}{2}$  a turn.

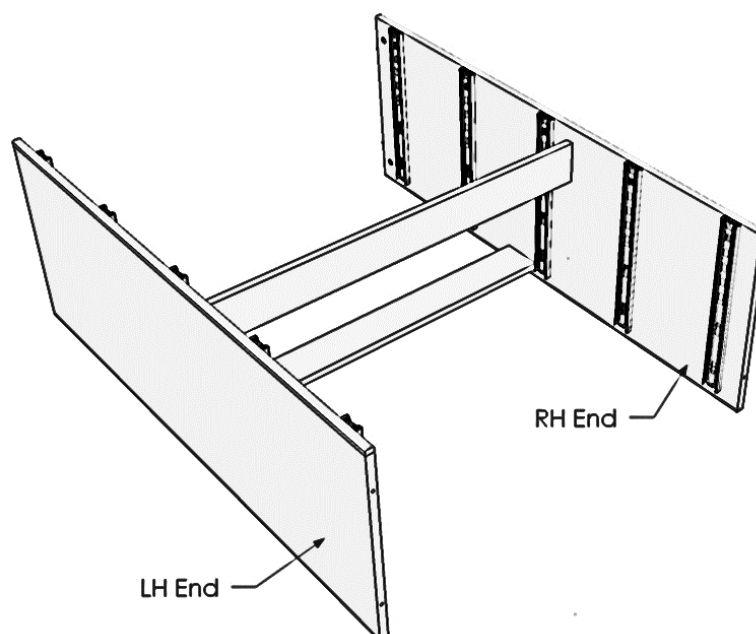


## STEP 7 - BASE

- Attach the Base to the Ends using the **H5 Large Screws** and the pre-drilled holes as shown below.

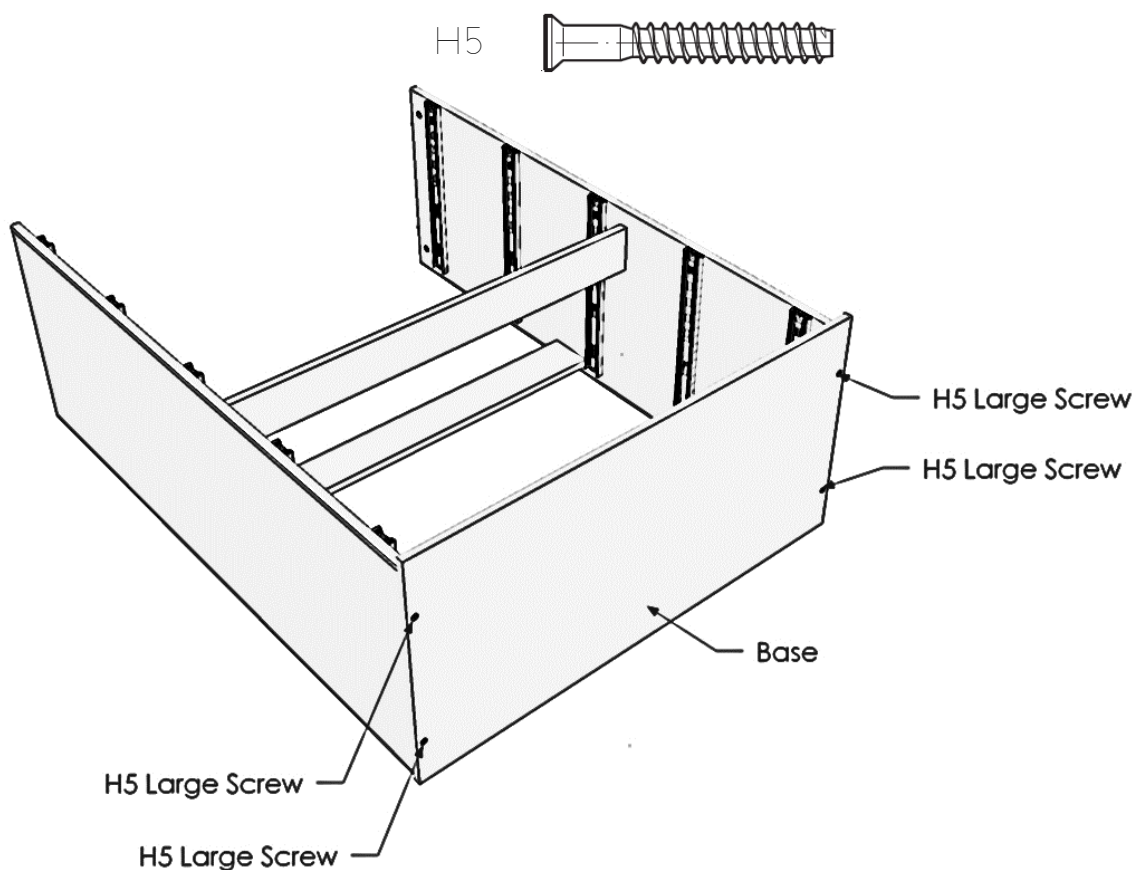


## STEP 8 - TALL FEET

- Next screw on the four **Tall Feet** using the **H7 Gold Panhead Screws**. Use the pre-drilled holes.

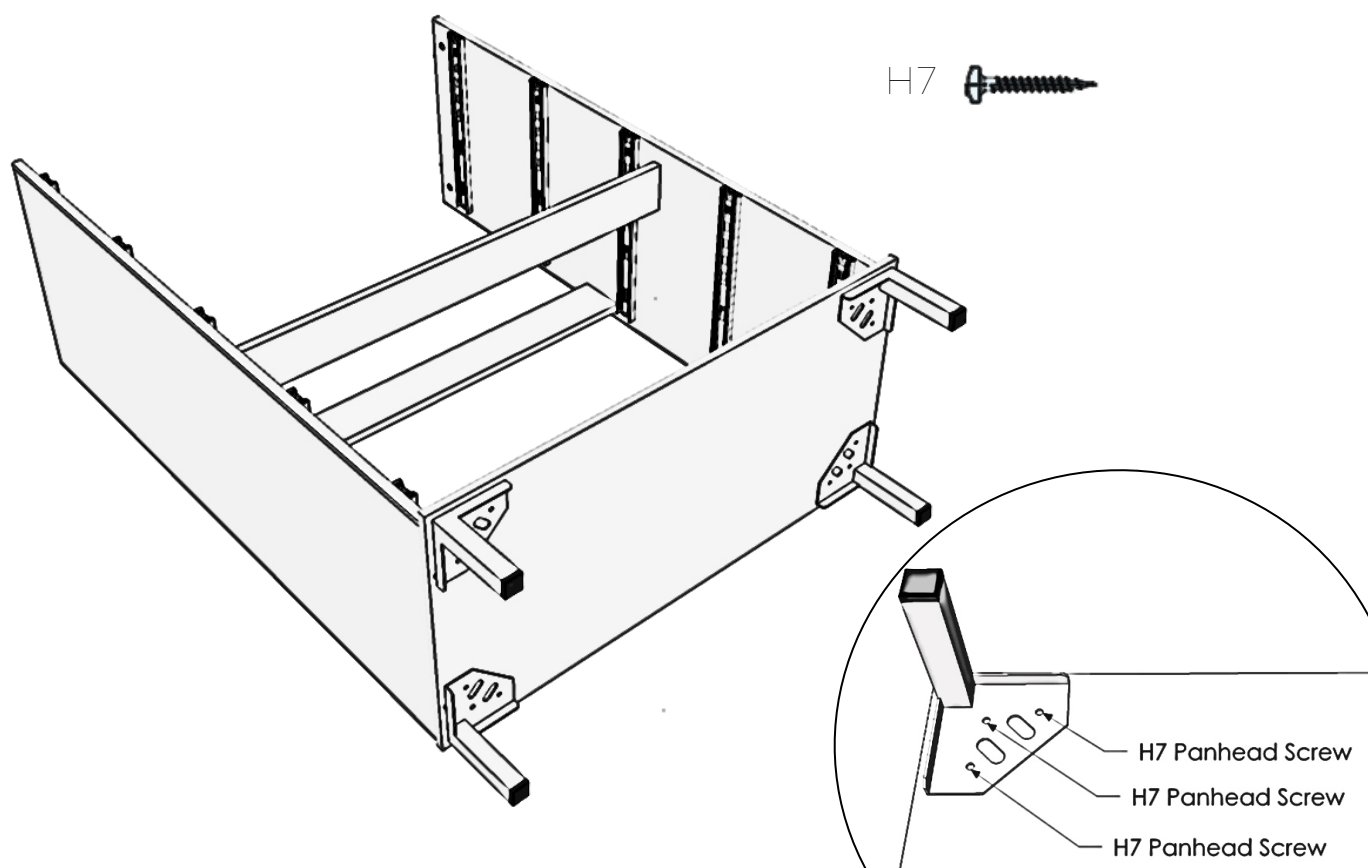


## STEP 9 - BACK PANEL

- Carefully stand the unit upright.
- Take the **two back panels**. One has a **groove** and the other has a **tongue** in one long edge. Fit the tongue and groove together.
- Slide the back panels into place in the grooves in the Ends of the Cabinet. They will with onto a groove in the Base.

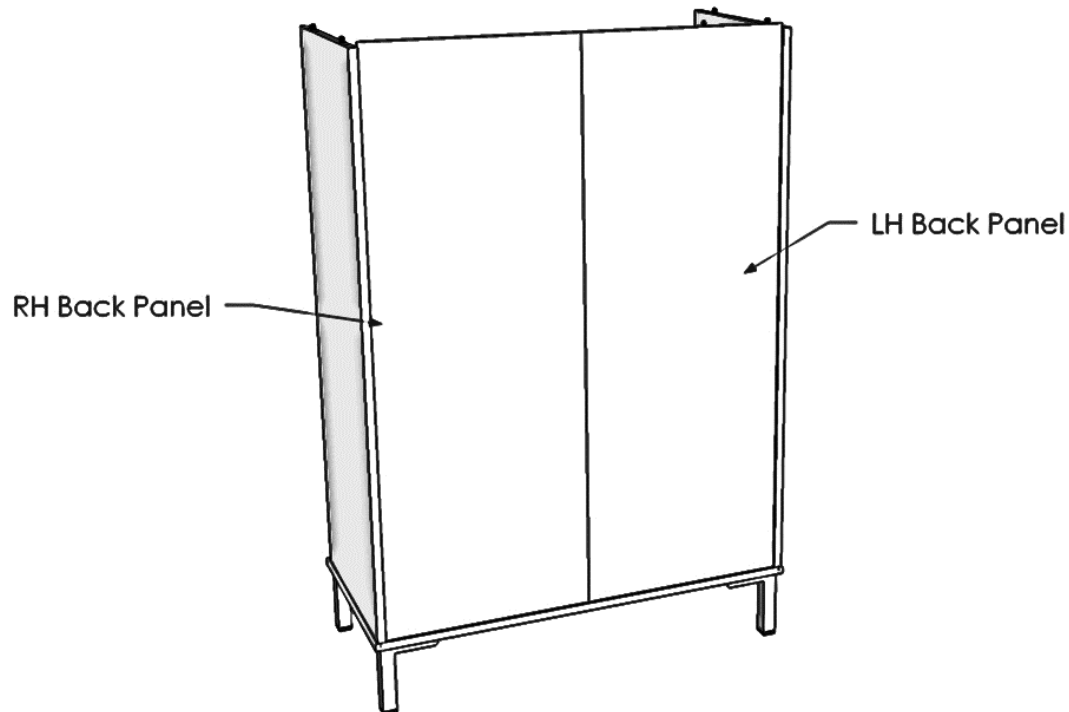


## STEP 10 - TOP

- Fit the **H1 Connecting Bolts** installed in the **Top** to the **H2 Cams** installed in the **Ends**. Ensure that the Finished Edge of the Top is facing the same way as the finished edge of the Ends. The Top Back Panel will fit into the groove in the back of the Top.
- Turn the Metal Cams installed in the Ends in a clockwise direction to lock the Top to the Ends. Ensure they turn a least a  $\frac{1}{4}$  to  $\frac{1}{2}$  a turn

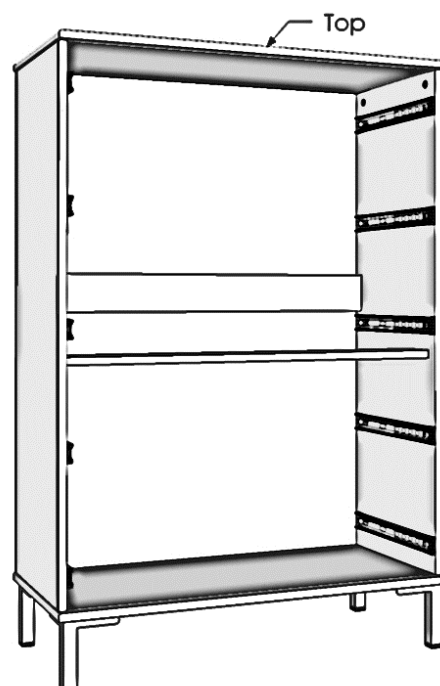

# ASSEMBLE THE DRAWERS


Your Malone 5 Drawer Tallboy has five drawers. All Drawers are constructed from the same parts and are therefore assembled the same way.

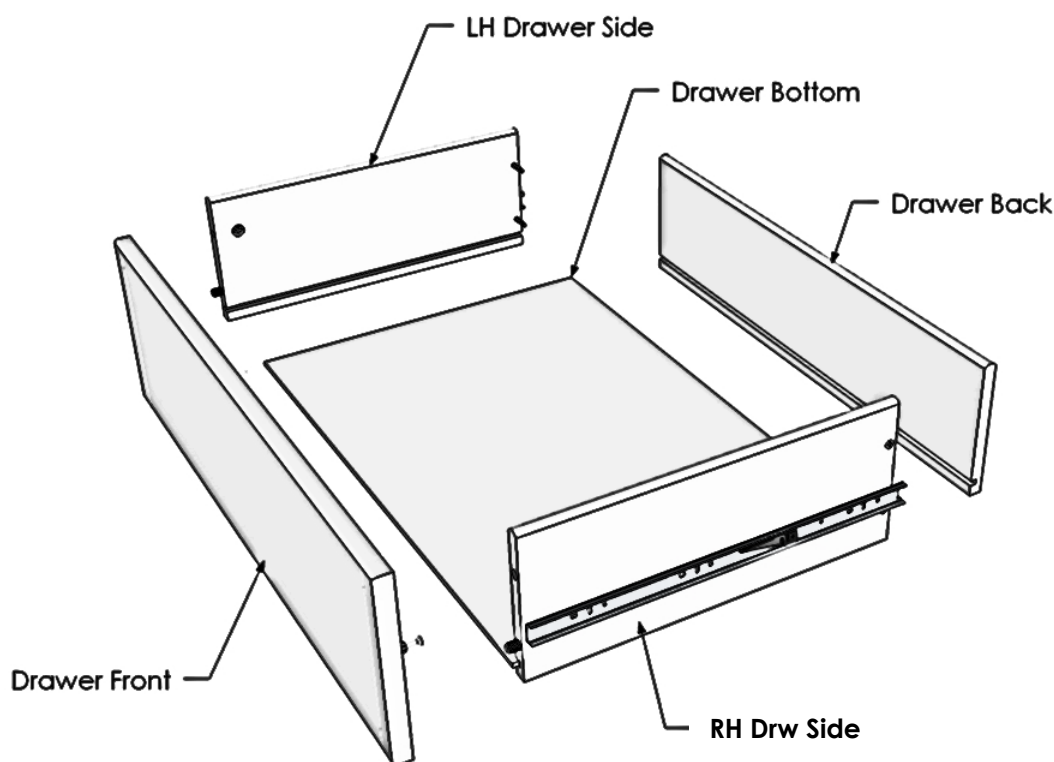


demonstration of  
put a drawer  
click on the  
assistance tab at  
[farmersfurniture.co.nz](http://farmersfurniture.co.nz)

## STEP 11 - INSTALL HARDWARE /DRAWERS


- Install the hardware in the drawer parts as shown below. *NOTE: Be sure that the arrow on the Small Cam points to the end of the drawer side nearest it.*

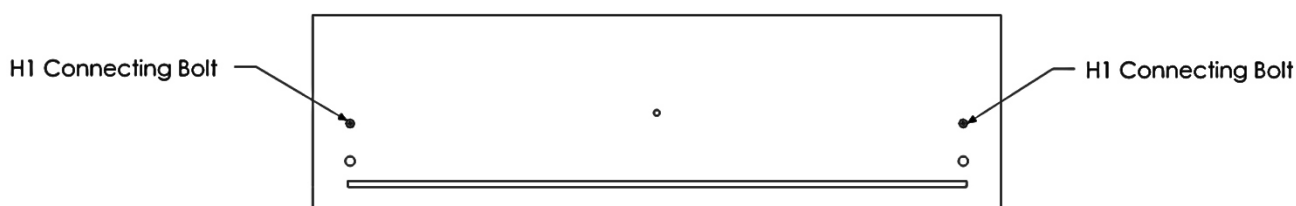

**DRAWER FRONT**

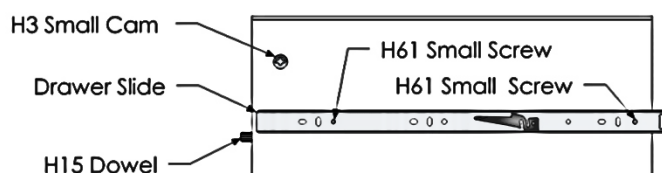


**RH DRAWER SIDE**

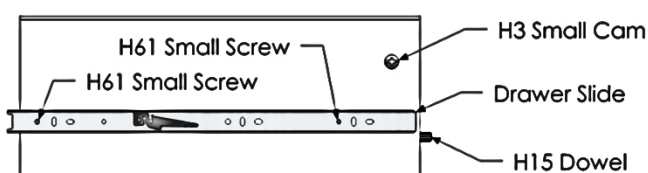

**LH DRAWER SIDE**


## STEP 12 - SIDES AND BOTTOM

- Lay the **Drawer Front** face down on a smooth, clean surface.
- Attach the LH and RH **Drawer Sides** by fitting them into place over the Connecting Bolts installed in the Drawer Front.
- Turn the Small Cams clockwise to lock the Drawer Sides in place.
- Slide the **Drawer Bottom** into place in the grooves in the Drawer Sides and Drawer Front.

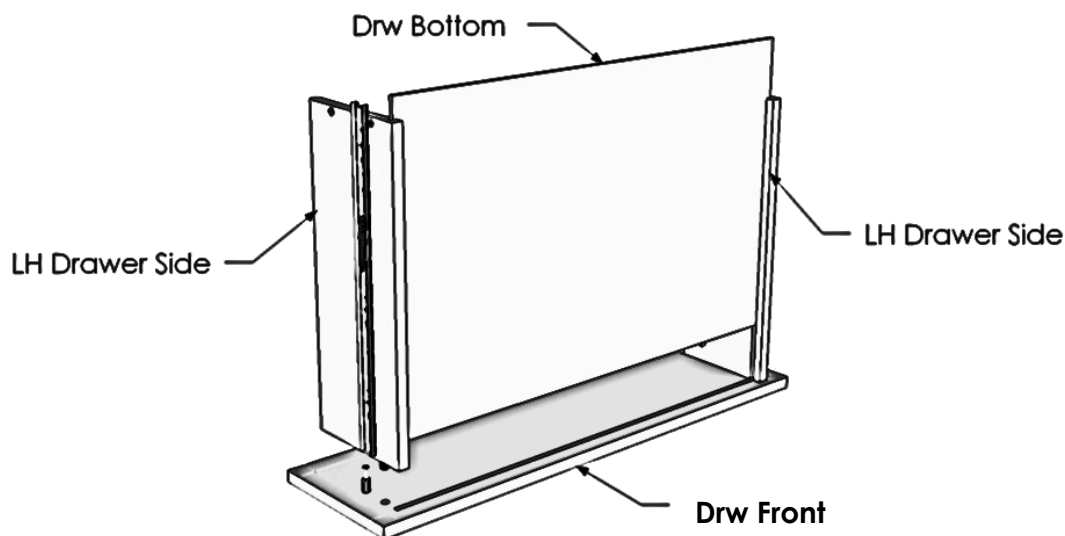

## STEP 13 - ATTACH DRAWER BACK



- Fit the **Drawer Back** into place between the Drawer Sides. The groove in the Drawer Back will fit over the end of the Drawer Bottom.
- Secure the Drawer Sides to the Drawer Back with four **H9 Screws** as shown below.

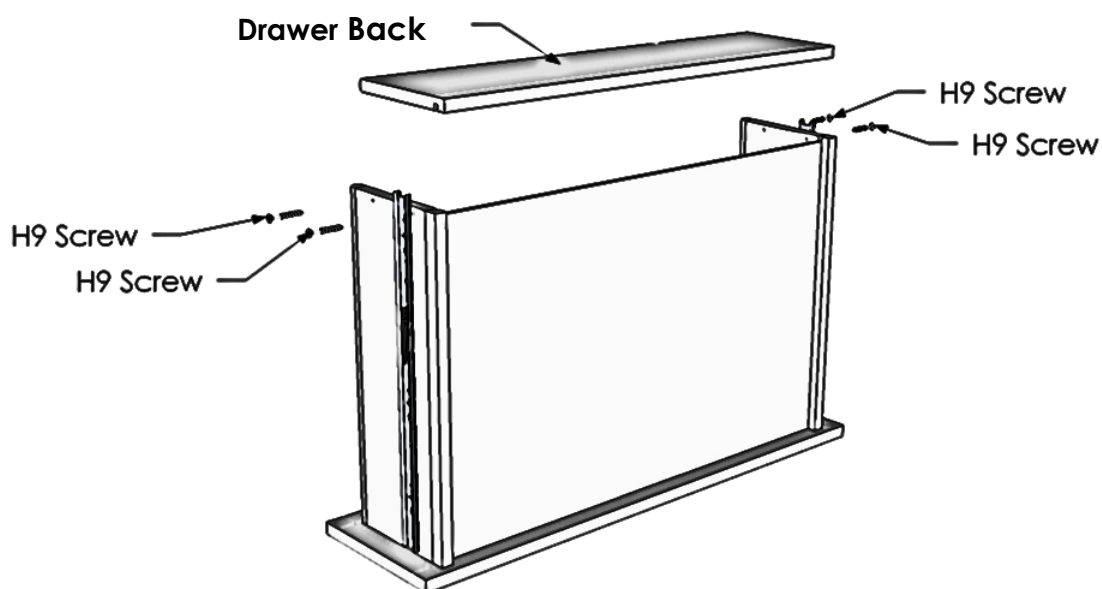

## STEP 14 - ATTACH HANDLES AND FIT DRAWERS INTO CABINET

- Turn the drawer over and attach the handle using the screws provided.
- Fit the drawers into the cabinet. Start with the top drawers and work your way down.

Holding the Drawer level, fit the Slides installed on the Drawers to the slides installed in the cabinet. Without forcing, slide the drawer in until the slides click. It may be helpful to hold the sliding parts of the Cabinet slides while you slide the drawer in. NOTE: Do not force the drawer if it jams. Take it out and ensure that the slides are lined up properly before inserting.

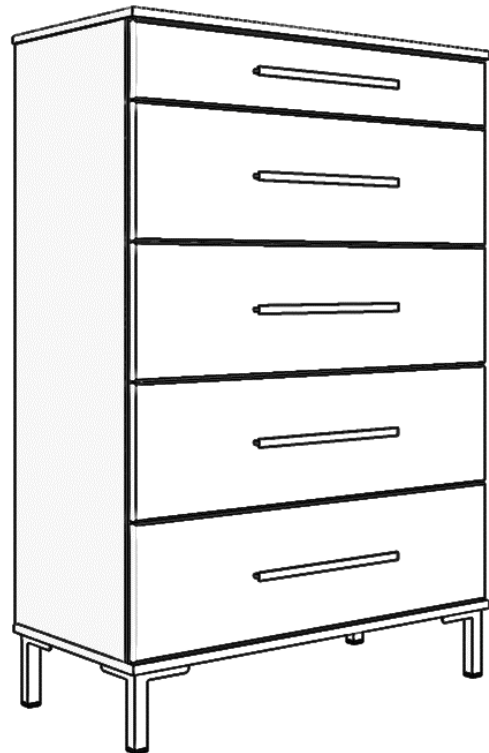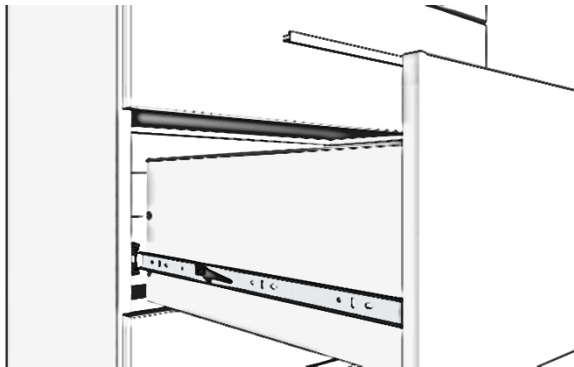

CONGRATULATIONS, YOUR MALONE 5 DRAWER TALLBOY IS NOW COMPLETE.  
THANK-YOU FOR SUPPORTING NEW ZEALAND MADE FURNITURE