



RYAN 5 DRAWER LINGERIE CHEST

Congratulations on your purchase of your **5 DRAWER LINGERIE CHEST**. The **RYAN** Collection is made in New Zealand from 100% New Zealand made MDF – an environmentally sound and renewable resource.

If you require any parts or assembly advice or have any questions please go to www.farmersfurniture.co.nz or call us direct on **0800 100 858**.

WHERE TO ASSEMBLE YOUR LINGERIE CHEST

Assemble your unit on a clean and smooth surface, free of anything which may damage the laminated surface. A carpeted floor is ideal. If assembling on a workbench or table we suggest you cover it with the carton the unit was packaged in.












Warning! Never leave hardware parts where children can reach them. Small parts may be a choking hazard!

PARTS LIST

Please check you have all the parts before beginning to assembling your cabinet. The measurements will help you identify each part. If any parts are missing or damaged please contact us directly for replacements and advice. Do not call the store you bought the cabinet from as they will be unable to help you. Note: You will find two pieces of board fitted across the ends of the package. These are for packing purposes only and are not part of the cabinet.

QTY	PART	MEASUREMENTS	NOTES
1	Top	450 x 396 x 25mm	White laminate finish - Blue mark
1	Base	450 x 396 x 25mm	White laminate finish - Purple mark
1	LH End	1154 x 388 x 25mm	White laminate finish both sides - Green mark
1	RH End	1154 x 388 x 25mm	White laminate finish both sides - Red mark
1	Rail	384 x 80 x 15mm	Plain MDF
1	Top Drawer Front	378 x 195 x 15mm	White laminate finish
4	Drawer Fronts	378 x 235 x 15mm	White laminate finish
5	LH Drawer Sides	340 x 160 x 12mm	Plain MDF 12mm - Green mark
5	RH Drawer Sides	340 x 160 x 12mm	Plain MDF 12mm - Red mark
5	Drawer Backs	334 x 155 x 12mm	Plain MDF 12mm
5	Drawer Bottoms	344 x 339 x 4mm	Plain MDF 4mm
1	Back Panel	1174 x 404 x 4mm	Plain MDF 4mm

HARDWARE LIST

QTY	PART	CODE	
16	Connecting Bolts	H1	
6	Large Cams	H2	
10	Small Cams	H3	
20	Drawer Slide Screws	H4	
4	Large Screws	H5	
20	Small Woodscrews	H6	
24	31mm Wood screws	H9	
16	Dowels	H15	
4	White Plastic Feet	H16	
5	Set of metal drawer slides	H21	
1	Bag of small Nails	H27	
5	Ryan Handles & Handle Screws		

COLOUR CODING

To help identify the parts, the main components are colour coded with a pen mark on the back edge of the panel. (The edge without any laminate on it.)

- | | |
|-----------------|---|
| ○ RED | Right Hand Parts. (E.g. RH End, RH Drawer Side.) |
| ○ GREEN | Left Hand Parts. (E.g. LH End, LH Drawer Side.) |
| ○ BLUE | Tops |
| ○ PURPLE | Bases |

5 YEAR WARRANTY


This furniture carries a **5 year warranty** against defective material or workmanship, excluding misuse and normal wear and tear. Obviously, as this unit is customer-assembled we cannot guarantee cabinet failure or damage from incorrect assembly. **All claims need proof of purchase – to ensure this register at www.farmersfurniture.co.nz.**

Follow the assembly instructions carefully and take note of the precautions below.

- **Avoid direct sunlight wherever possible.**
- **Keep cabinet in a dry place.**
- **Wipe off spilt liquids immediately.**
- **Avoid placing hot items directly on the surface.**
- **Clean with a soft cloth.**
- **Do not allow nail polish, removers, deodorant etc. to come into contact with the surface.**

CAM INSTALLATION & OPERATION GUIDE

The Cam and Connecting Bolt system is used to put your unit together. Below is an explanation of how this system works. To see a demonstration go to the assembly assistance tab on www.farmersfurniture.co.nz.

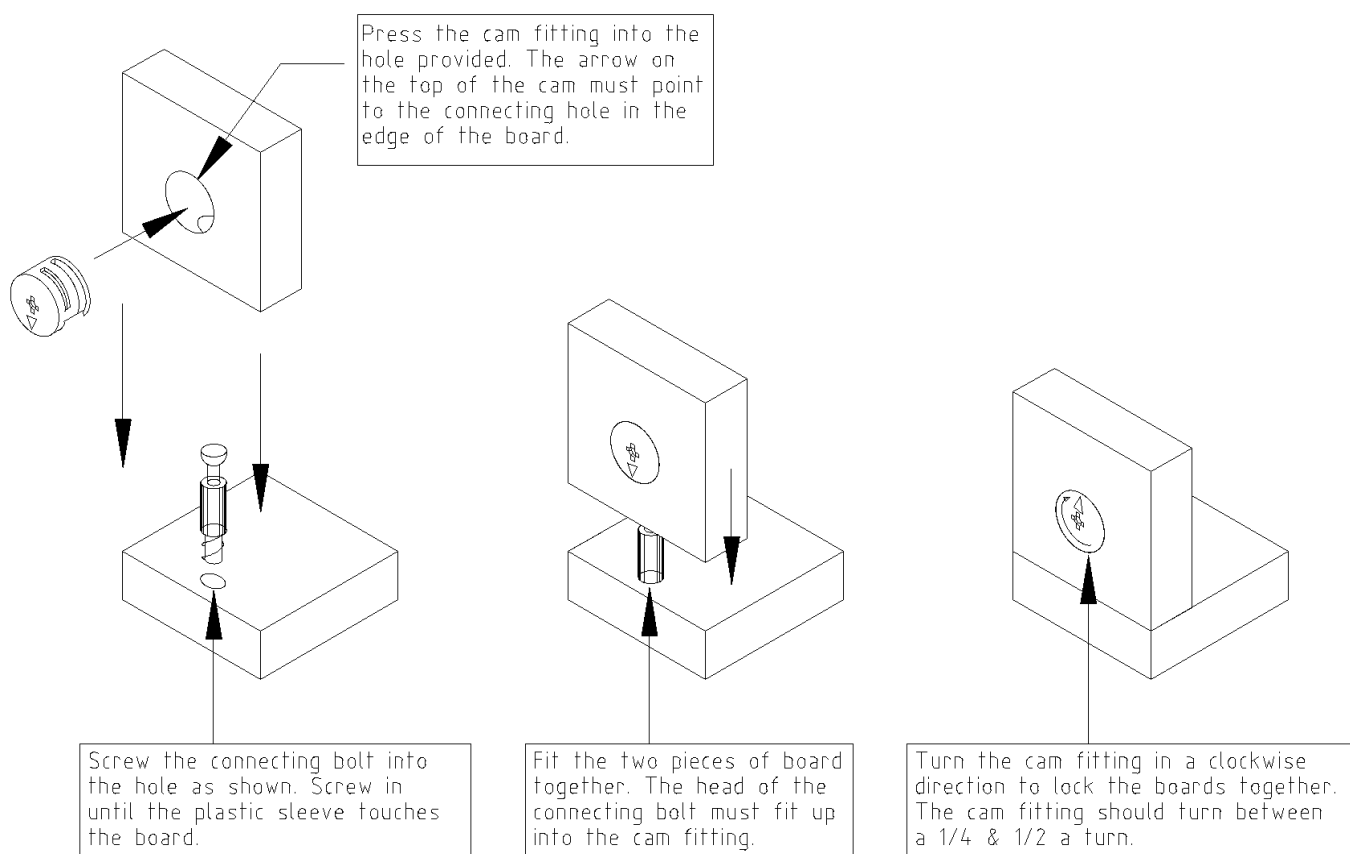

For assembly advice or parts go to www.farmersfurniture.co.nz or call 0800 100 858

DRAWER SLIDES GUIDE

Your pack will contain five sets of Metal Drawer Slides. These are bundled together with adhesive tape. Each set comprises of 4 components. Undo the tape on one set at a time and separate the parts into four piles.




LEFT HAND PART (DL)




RIGHT HAND PART (DR)

The Drawer Slide components shown above are attached to the **drawers**. They have the letters **DR** or **DL** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawers later on.

Use these holes



LEFT HAND PART (CL)



RIGHT HAND PART (CR)


The Drawer Slide components shown above are to be attached to the **cabinet**. They have letters **CR** or **CL** stamped on them to indicate left hand or right hand components.

INSTALL THE HARDWARE

STEP 1

Lay the Top laminate side down, on a smooth clean surface.

Screw four **H1 Connecting Bolts** in the holes as indicated in the drawing below.




H1 Connecting Bolt

H1 Connecting Bolt

H1 Connecting Bolt

H1 Connecting Bolt

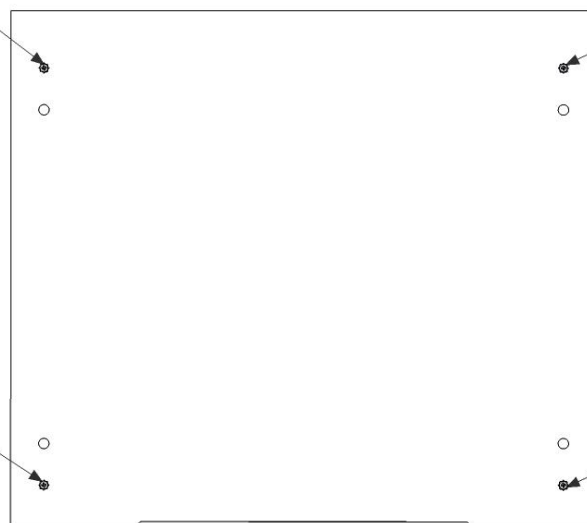

STEP 2


Take the LH End and lay it on a clean, clear surface with the holes facing upwards.

Take the five **LH Cabinet Drawer Slides (stamped CL)** and screw it to the LH End using the **H4 Drawer Slide Screws**. Use the holes as indicated in the diagram below - each slide requires two screws.

Insert two **H2 Large Cams** as indicated. Make sure the arrow on top of the cam points towards the top edge of the End.


Push two **H15 Dowels** into the top edge of the End as indicated below.

Screw one **H1 Connecting Bolt** into the hole as indicated in the drawing below

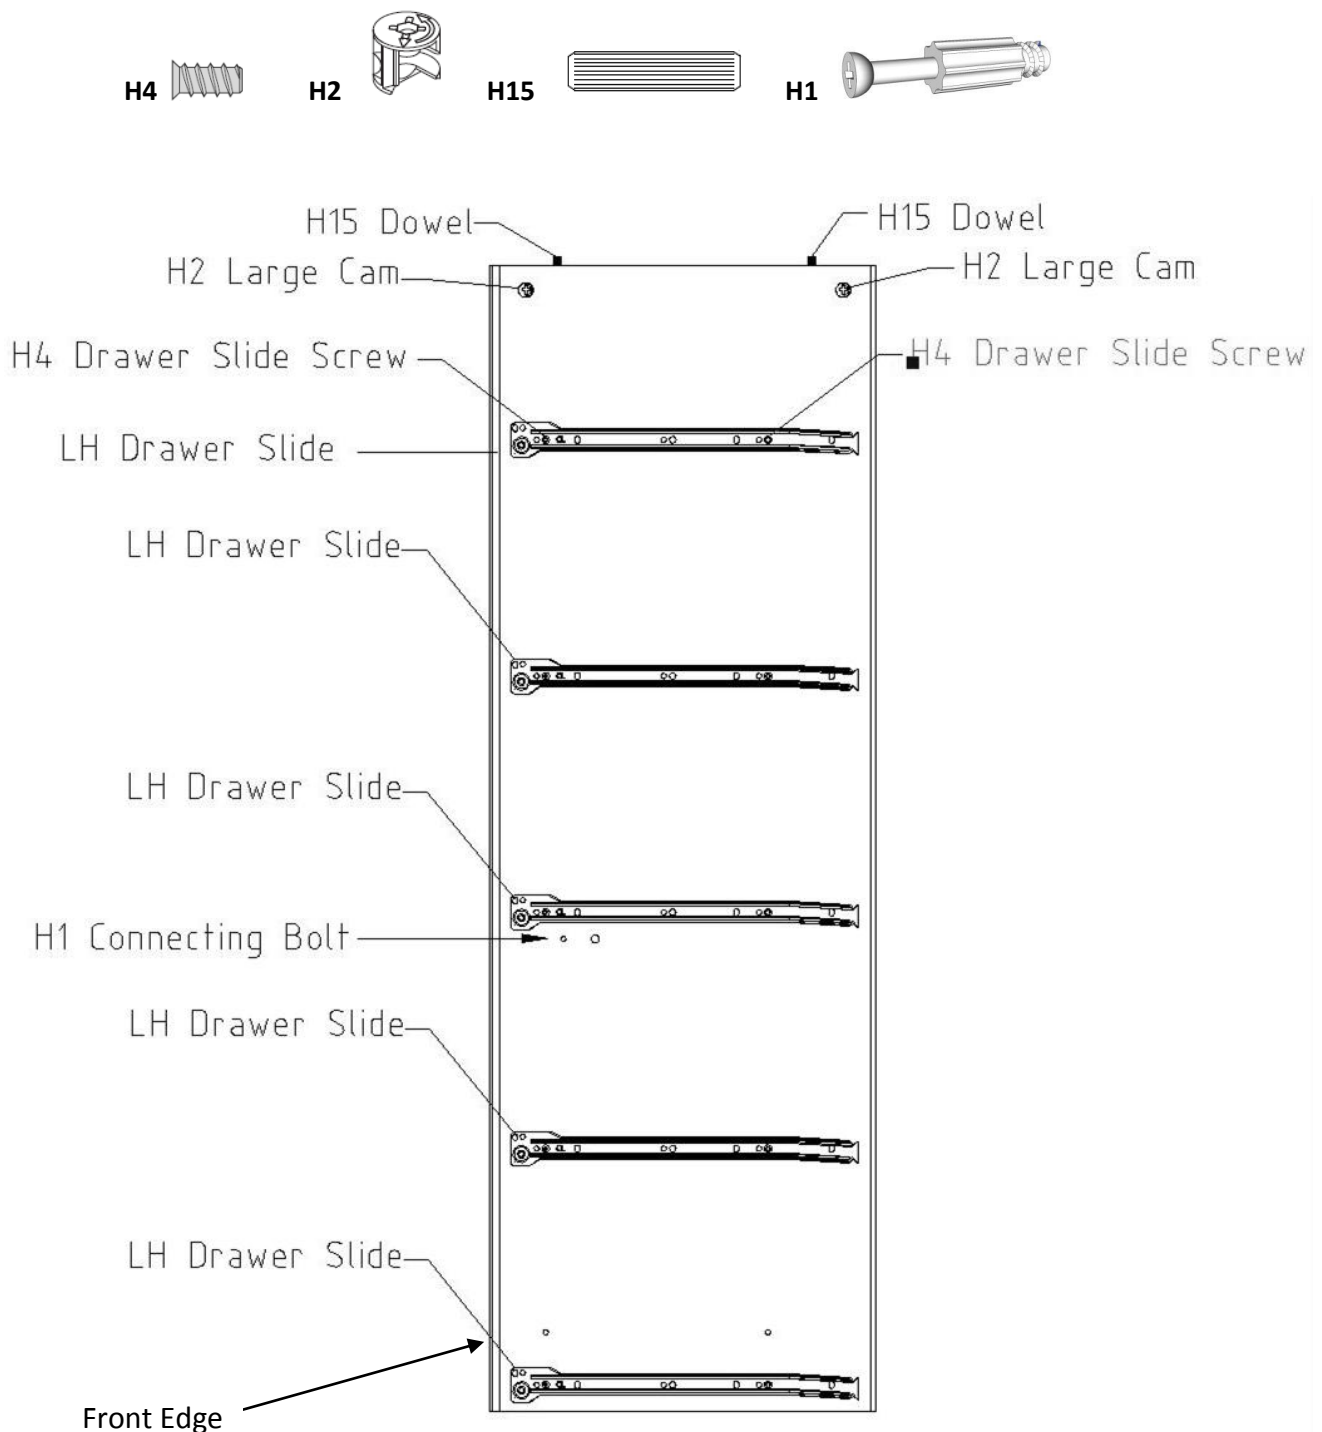


STEP 3

Repeat previous step with the Right Hand End.

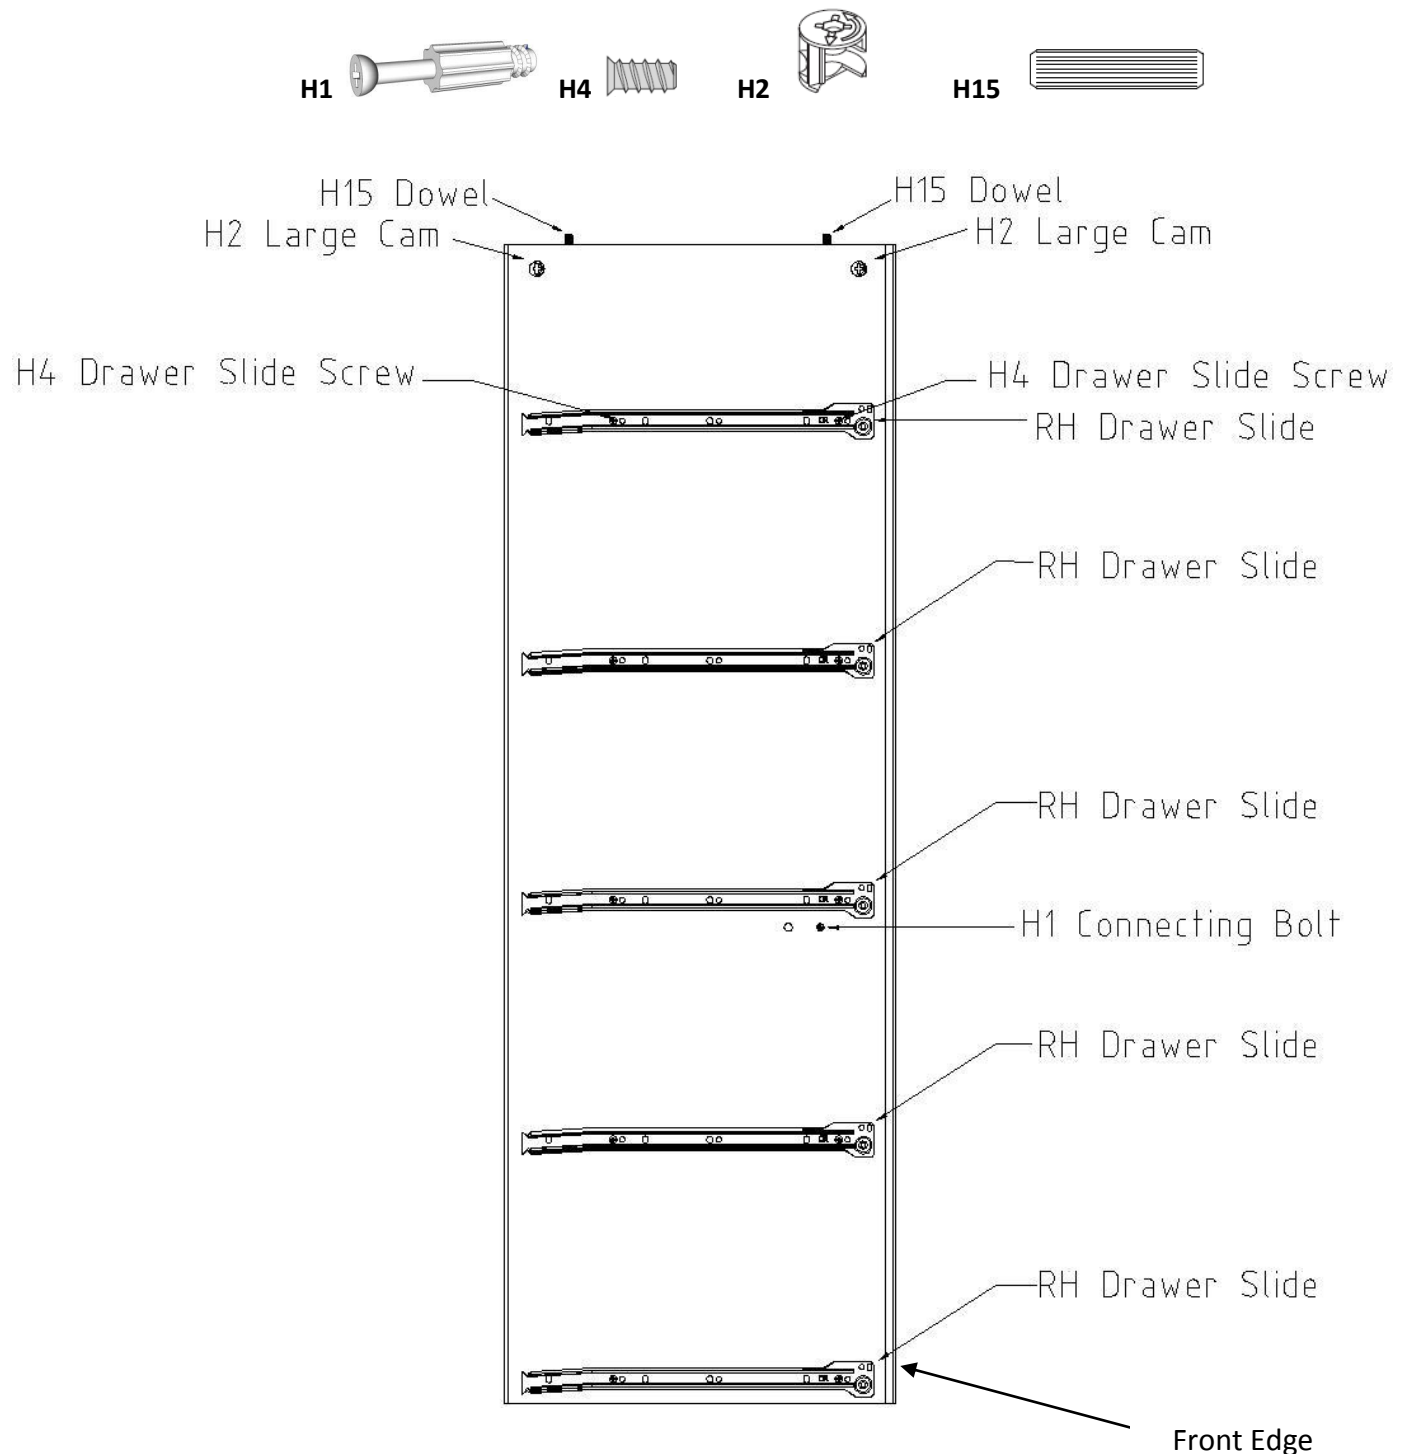**STEP 4**

Insert two **H15 Dowels** into the end of the **Rail** and two **H2 Large Cams** as indicated below. Ensure the arrow on the top of the cam points toward the edge of the rail with the Dowel in it.

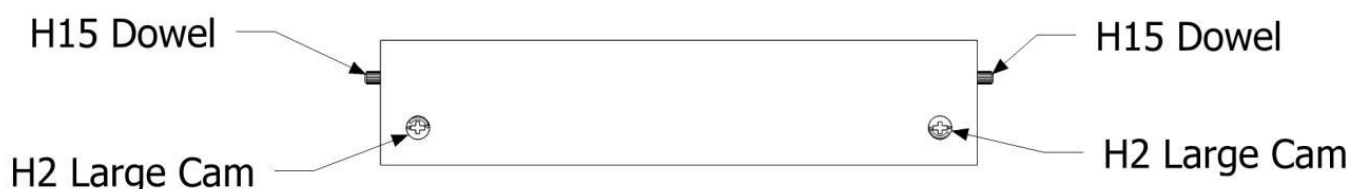

ASSEMBLE THE CABINET


STEP 1


Lay the LH End on a clean and clear surface.

Fit the Rail to the LH End - the cam should face up to the top of the unit. The Connecting Bolt in the End will fit up into the Cam in the Rail.

Turn the Large Cam in a clockwise direction to lock the Rail to the End. **NOTE:** Ensure the Cam turns a least a $\frac{1}{4}$ to $\frac{1}{2}$ a turn.


To see a demonstration of how the cam and connecting bolt works go to www.farmersfurniture.co.nz and to the assembly assistance tab at the top.

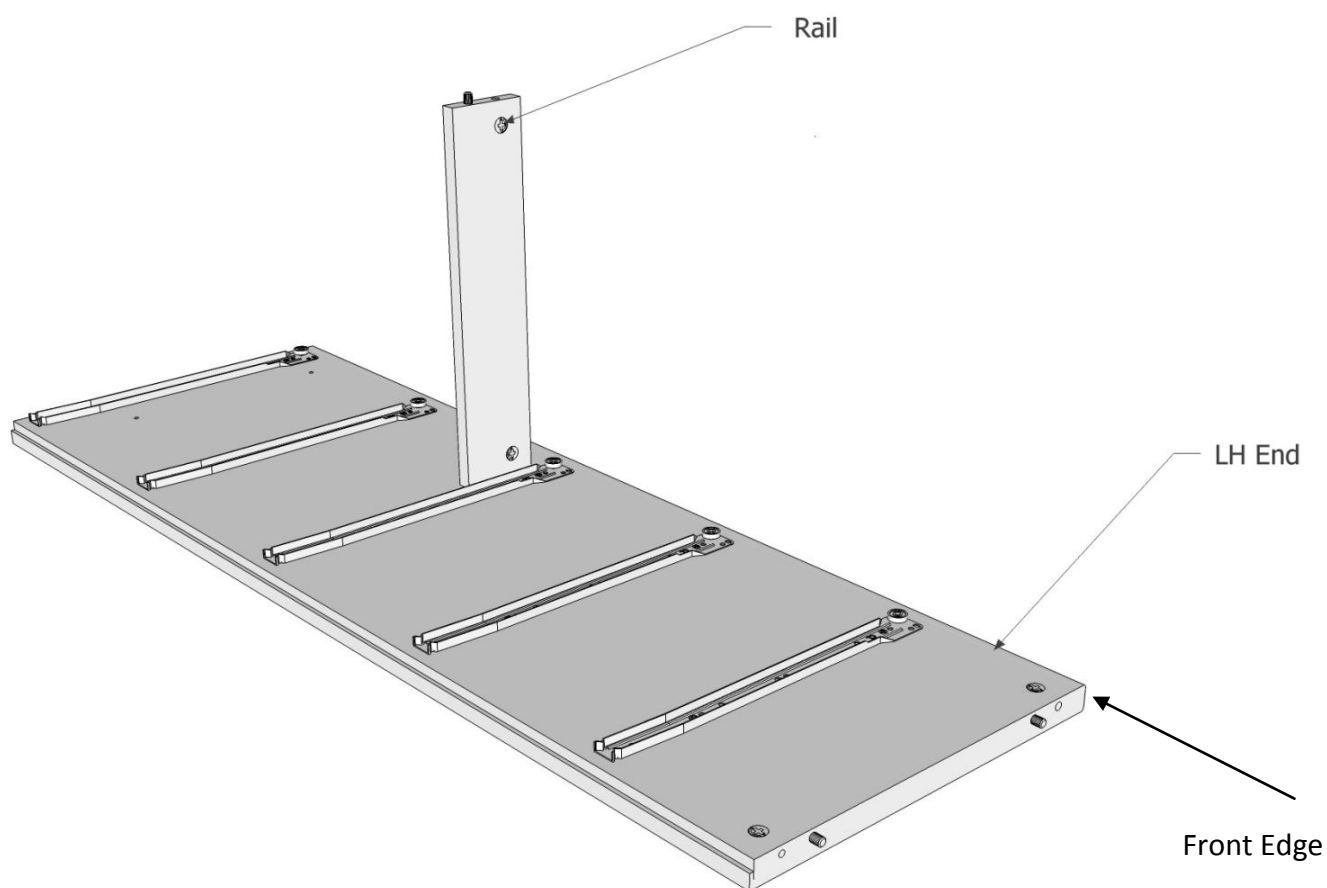

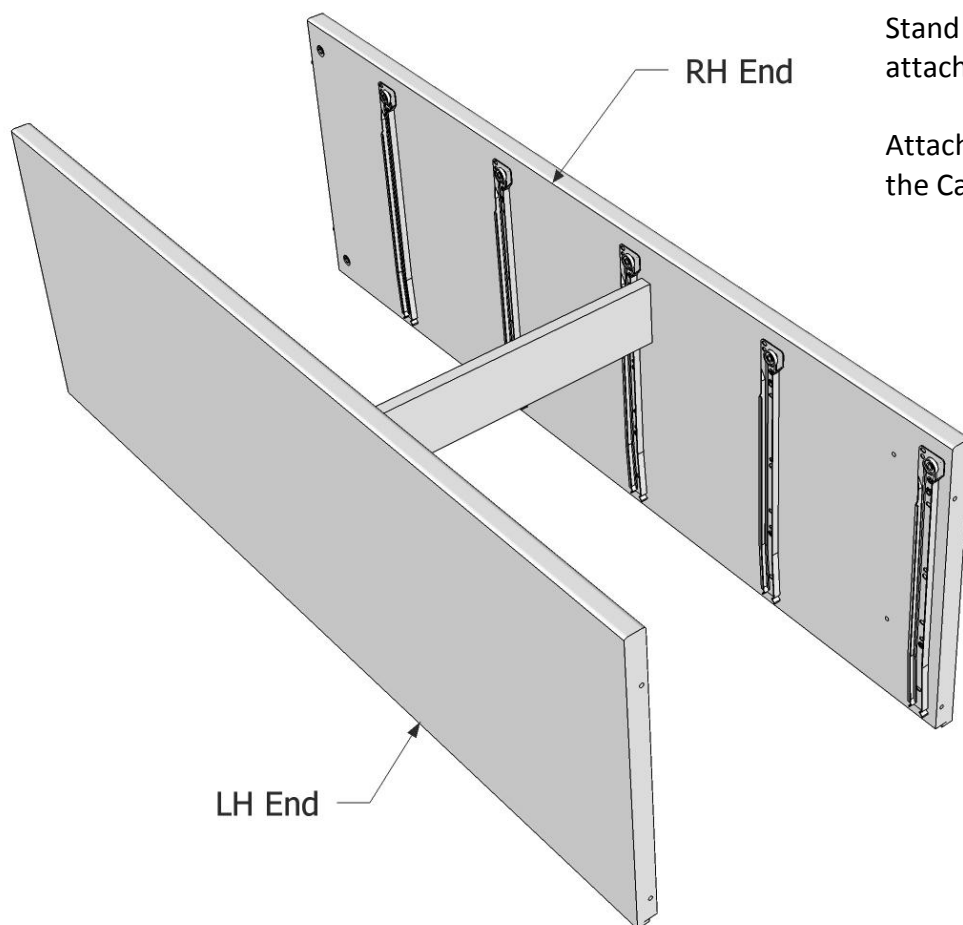STEP 2

Stand the LH End with the Rail attached onto its back edge.

Attach the RH End to the Rail. Turn the Cam to lock the End to the Rail.

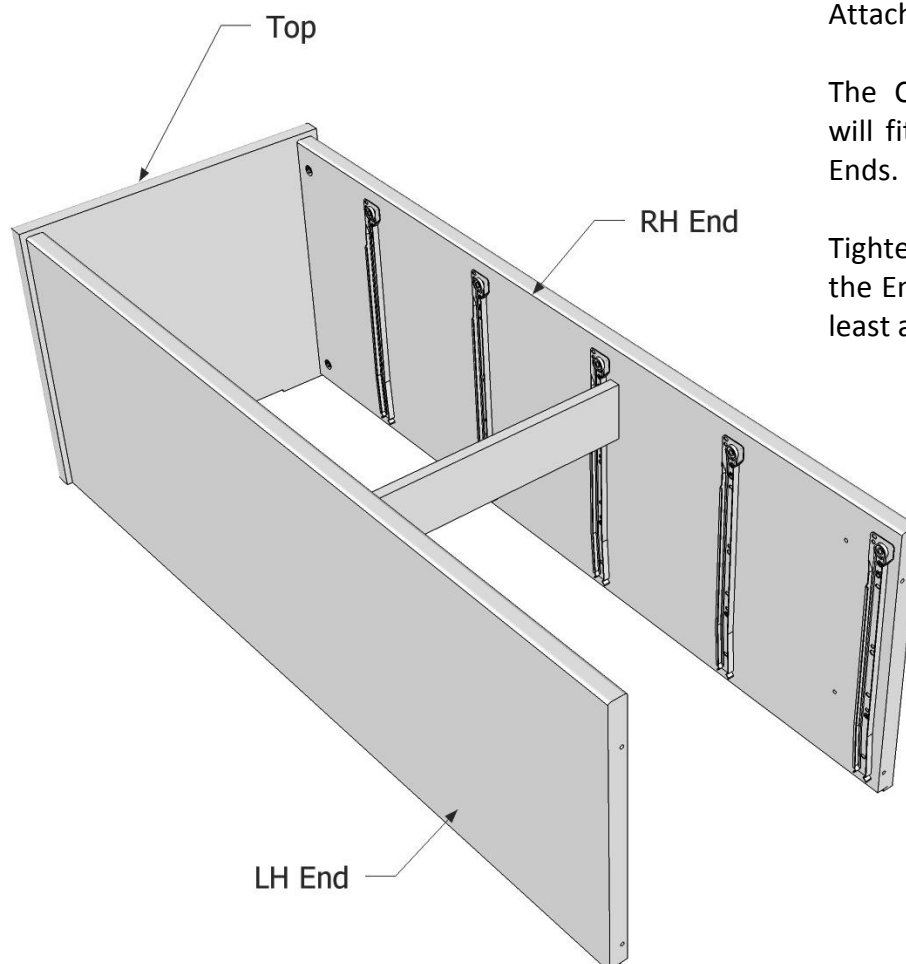STEP 3


Attach the Top to the Ends.

The Connecting Bolts in the Top will fit down into the Cams in the Ends.



Tighten the Cams to lock the Top to the Ends. Ensure the Cams turn at least a $\frac{1}{4}$ to $\frac{1}{2}$ a turn.

STEP 4

Attach the Base using the four **H5 large Screws**. Ensure the laminated side of the Base faces into inside of the unit.



Next attach the **H16 White Plastic Feet** using four **H9 Woodscrews**. The holes for the feet are predrilled.

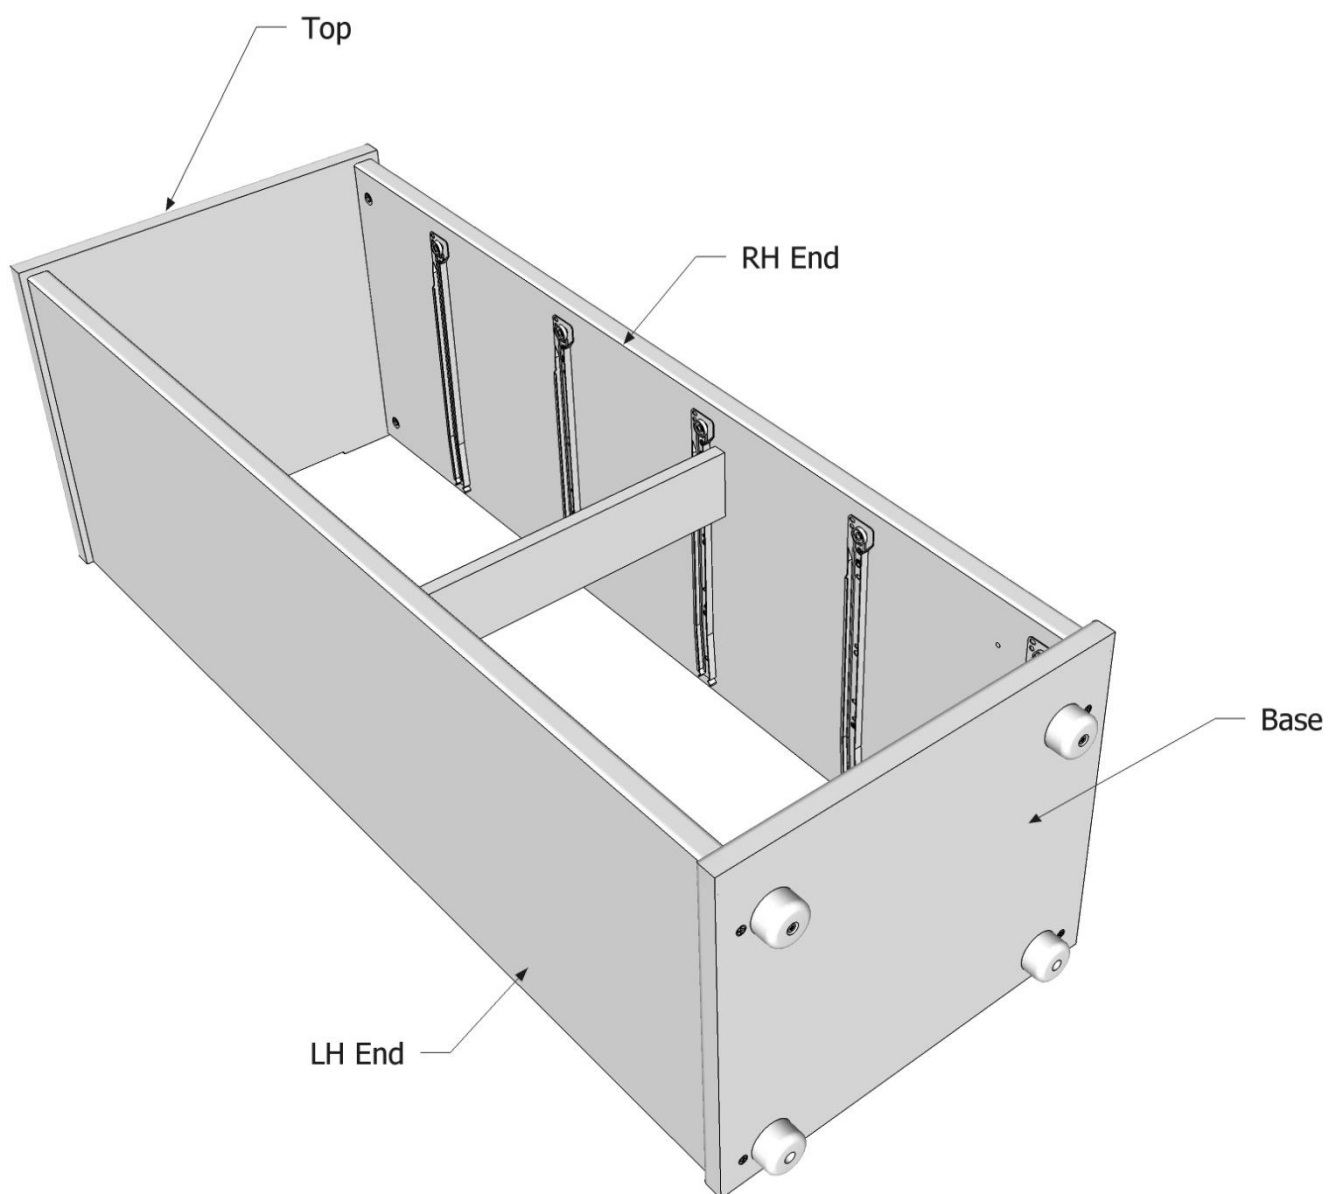


STEP 3

Lay the unit on its front edge - make sure the surface is clean and clear of anything that may damage the white finish. Fit the Back Panel into place - make sure the Back panel is square and Ends do not bow outwards otherwise the drawers will not run properly.


Nail the Back Panel in place with the Small Nails provided. Space the nails about 10 to 15 cm apart.

Stand the cabinet upright.

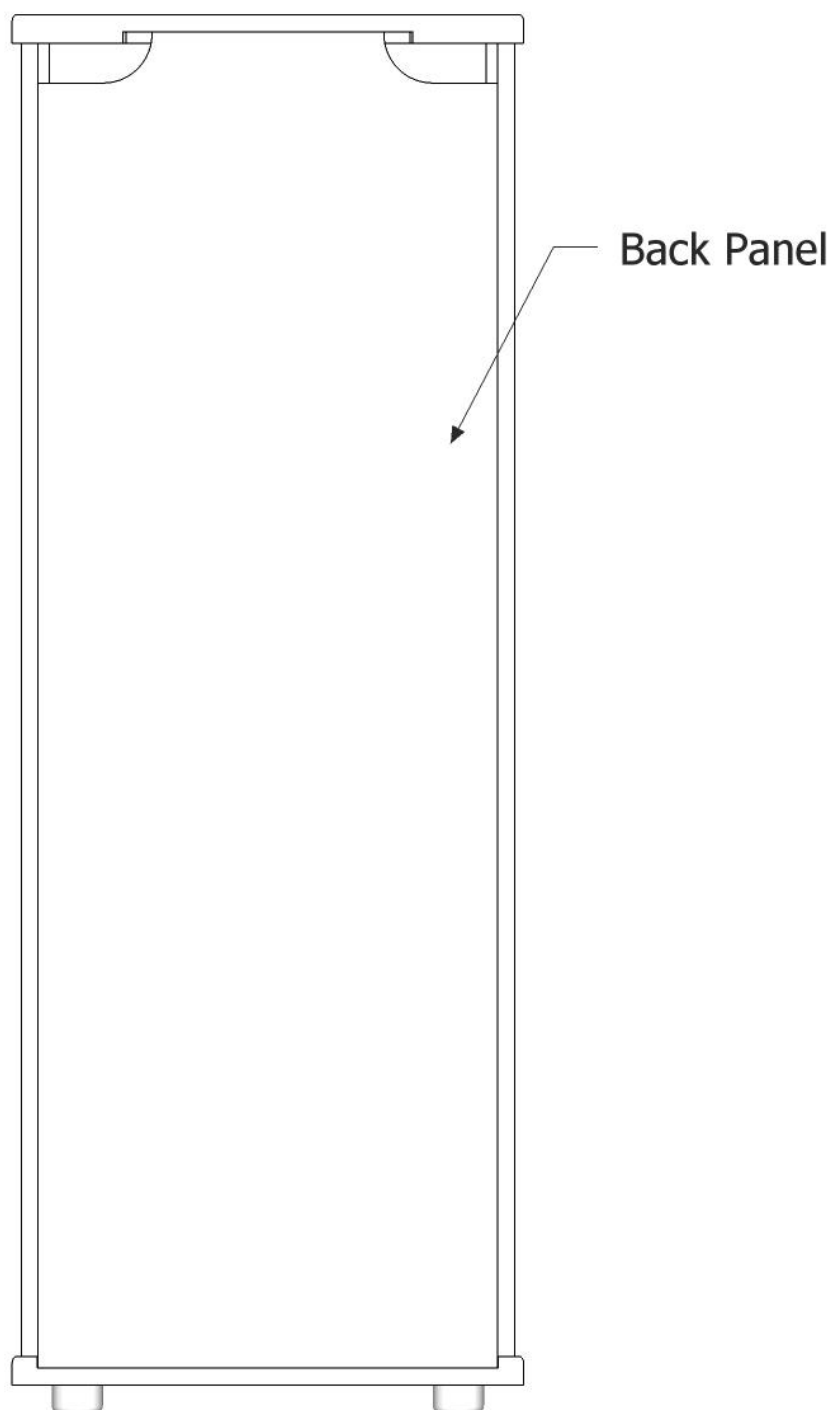



ASSEMBLE THE DRAWERS

Your **RYAN Lingerie Chest** has five drawers - one narrow top drawer and four bottom drawers. All drawers are made up of the same parts and therefore are constructed in the same way. To see a demonstration of how to put drawers together go to the assembly assistance tab at www.farmersfurniture.co.nz.

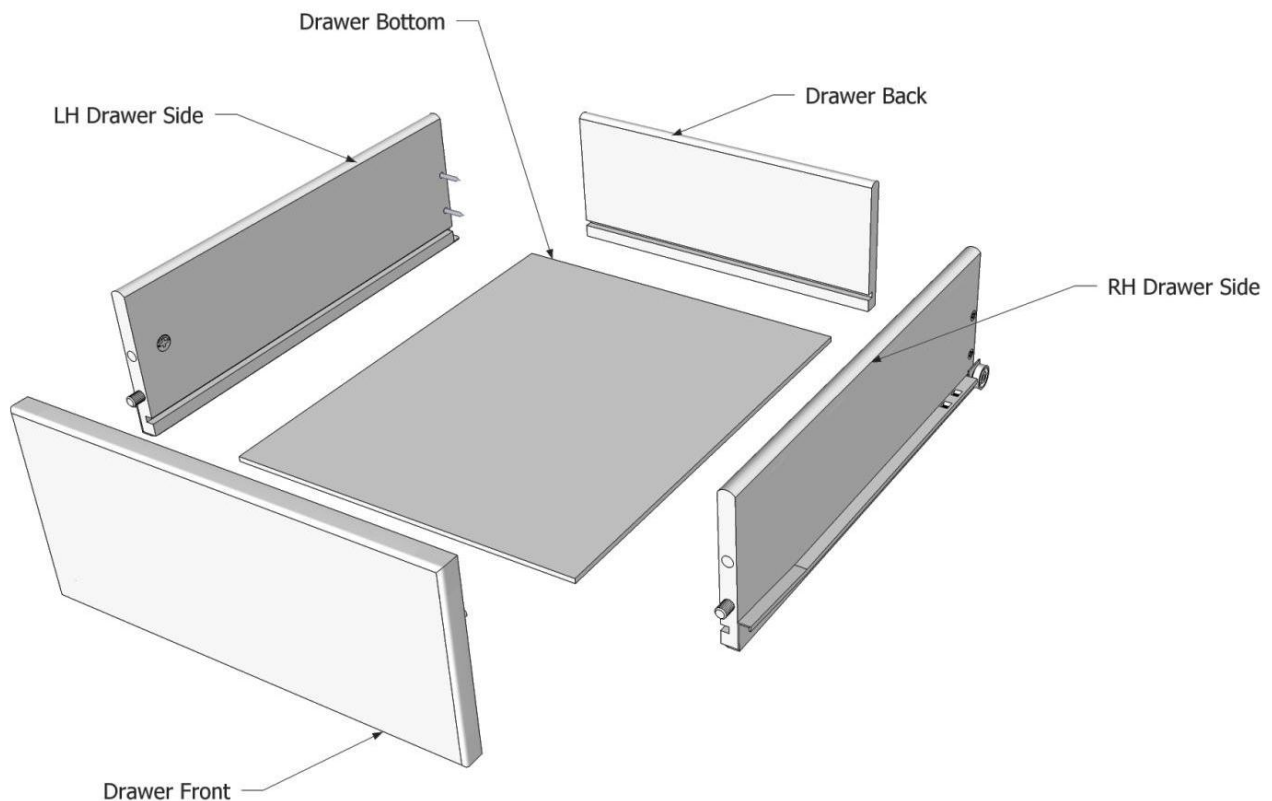


STEP 1

Install the hardware as shown below.

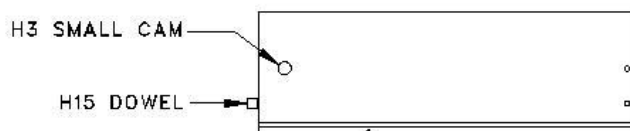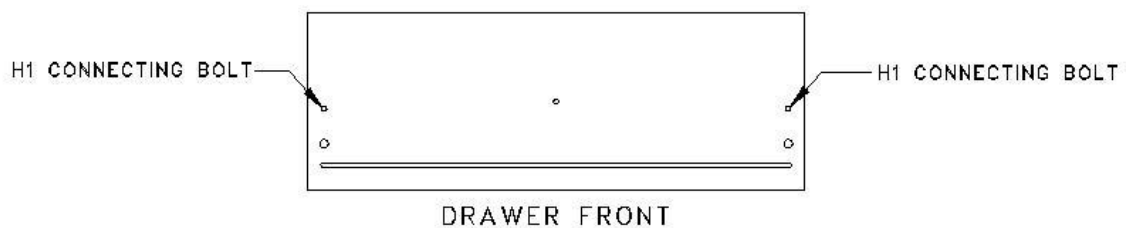

LH DRAWER SIDE

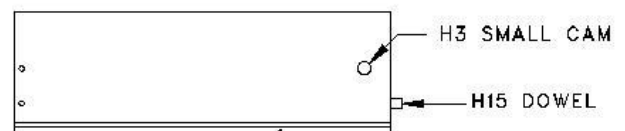

RH DRAWER SIDE

Note: Be sure that the arrow on the Cam points to the end of the drawer side nearest it.



H15 Dowel



H3 Small Cam



H1 Connecting Bolt

STEP 2


Lay the Drawer Front face down on a smooth, clean surface.

Attach the LH and RH Drawer Sides by fitting them down into place over the Connecting Bolts installed in the Drawer Front.


Turn the Metal Cams clockwise to lock the Drawer Sides in place.

Next slide the Drawer Bottom into place in the grooves in the Drawer Sides and Drawer Front.

Fit the Drawer Back into place between the Drawer Sides and secure with four **H9 Woodscrews** as shown below.

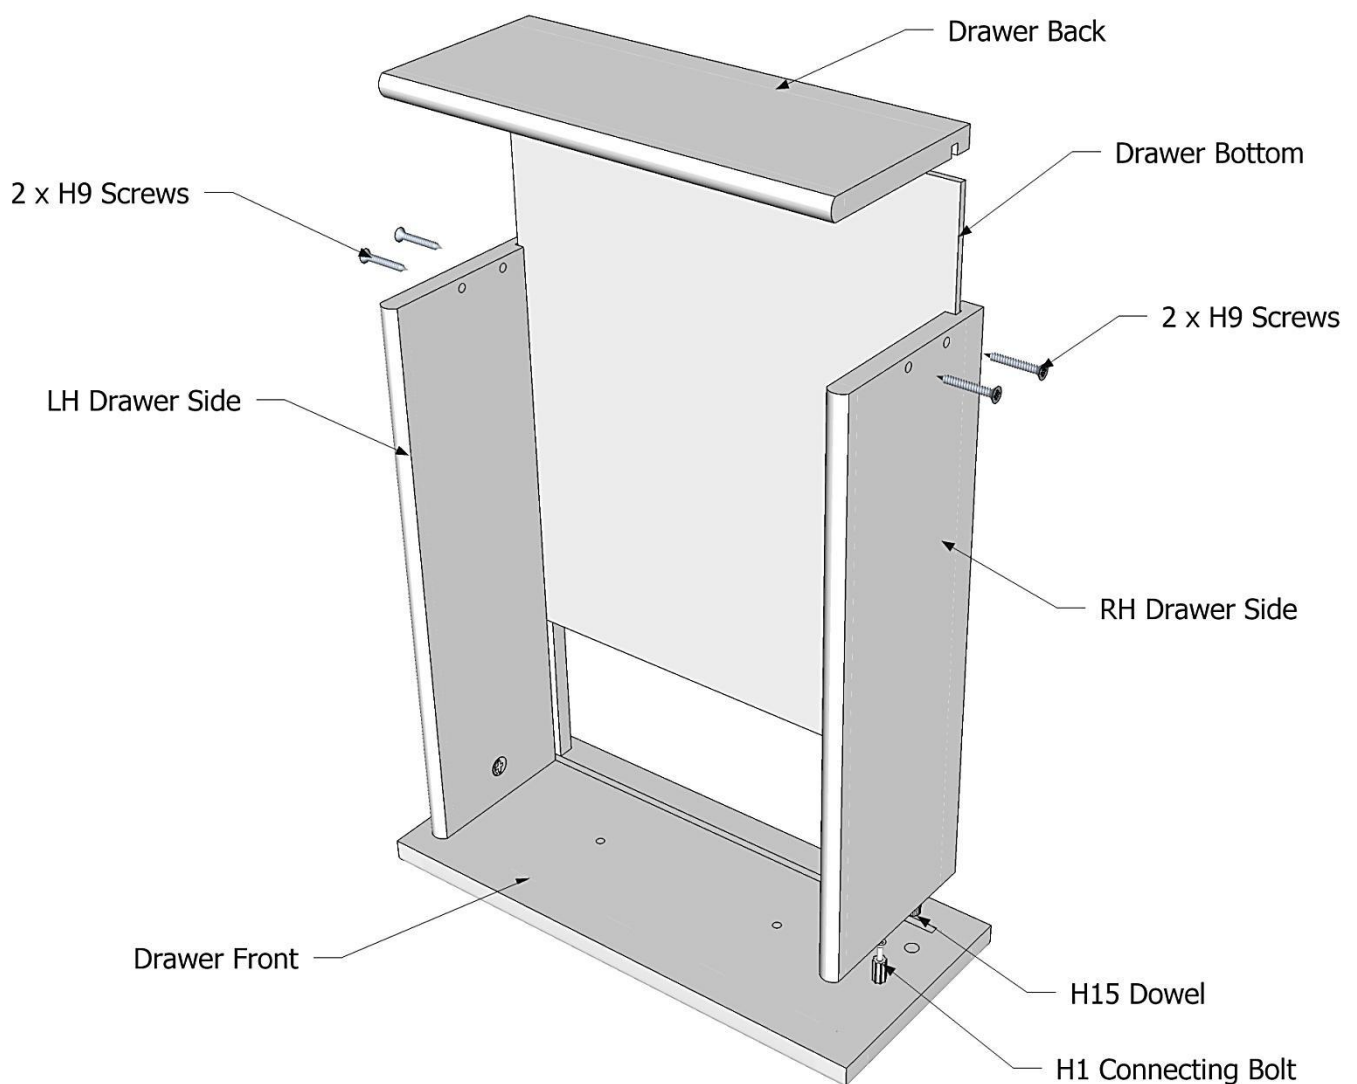


H9 Woodscrew



STEP 3

Turn the drawer upside-down as shown and attach the Drawer Slides (**DR** and **DL**) with the four **H6 Small Screws** as shown below. Each slide requires two screws. The DL goes on the LH Drawer Side and the DR goes on the RH Drawer Side.

To see a demonstration of how to attach the drawers slide to the drawer go to the assembly assistance tab at www.farmersfurniture.co.nz

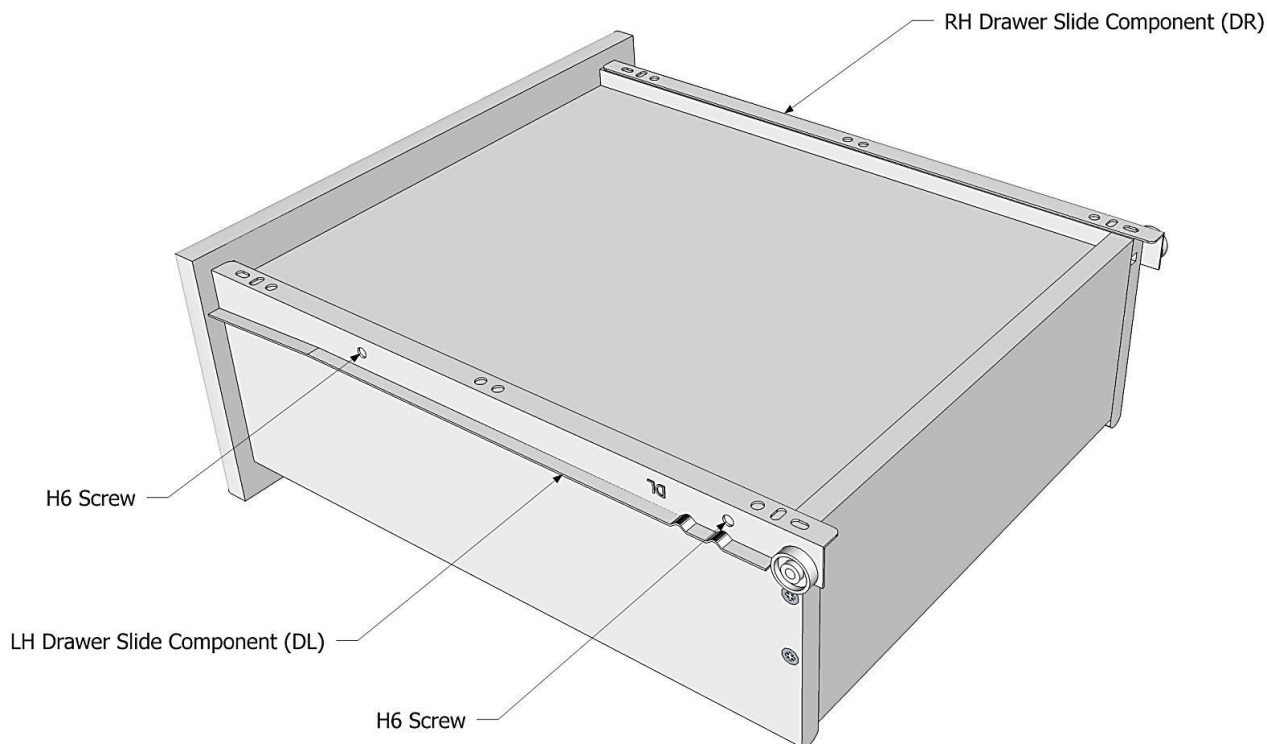


STEP 4

Turn the drawer over.

Attach the Drawer Knob using the screw provided with the knob.


Fit the drawers into the cabinet. Start with the top drawer and work your way down.

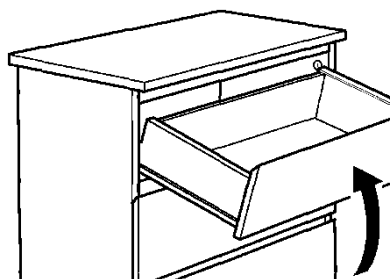


Angle the drawer slightly to ensure that the wheel at the back of the drawer slide goes behind the front wheel on the cabinet slide. Then lift the drawer up and slide it into the channel of the drawer slide attached to the cabinet.

CONGRATULATIONS, YOUR *RYAN FIVE DRAWER LINGERIE CHEST* IS NOW COMPLETE.

THANK-YOU FOR SUPPORTING NEW ZEALAND MADE FURNITURE

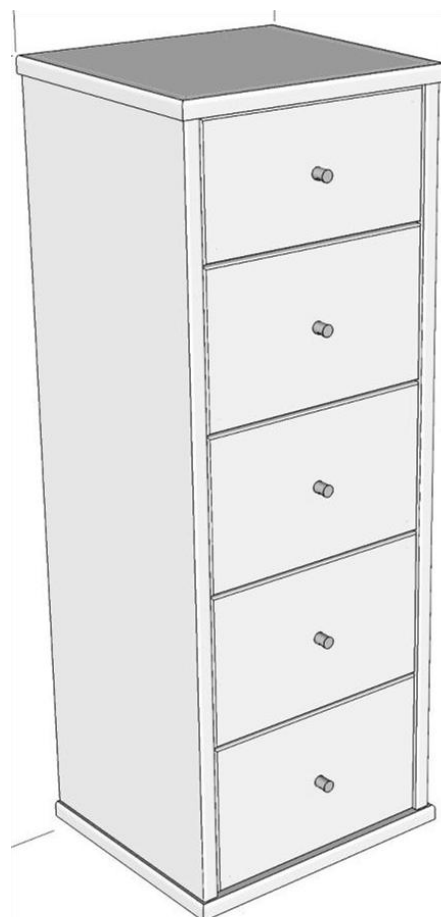

Add to your collection....

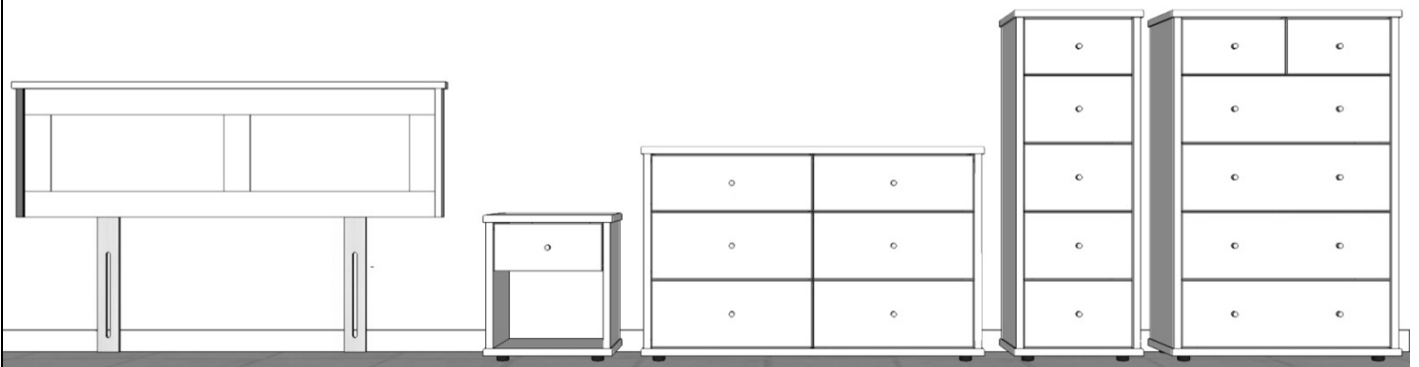

To view full range go to...

www.farmersfurniture.co.nz