



RYAN QUEEN HEADBOARD

Congratulations on your purchase of your **Queen Headboard**. The **RYAN** Collection is made in New Zealand from 100% New Zealand made MDF – an environmentally sound and renewable resource.

If you require any parts or assembly advice or have any questions please go to www.farmersfurniture.co.nz or call us direct on **0800 100 858**.

WHERE TO ASSEMBLE YOUR HEADBOARD




Assemble your Headboard on a clean and smooth surface, free of anything which may damage the laminated surface. A carpeted floor is ideal. If assembling on a workbench or table we suggest you cover it with the carton the unit was packaged in. **Warning!** Never leave hardware parts where children can reach them. Small parts may be a choking hazard!

PARTS LIST

Please check you have all the parts before beginning to assembling your headboard. The measurements will help you identify each part. If any parts are missing or damaged please contact us directly for replacements and advice. Do not call the store you bought the headboard from as they will be unable to help you. **Note: You will find two pieces of board fitted across the ends of the package. These are for packing purposes only and are not part of the headboard.**

QTY	PART	MEASUREMENTS	NOTES
1	Headboard Panel	1520 x 472x 15mm	White laminate finish
1	Headboard Cap	1600 x 51 x 25mm	White laminate finish both sides
2	End Packers	472 x 46 x 25mm	White laminate finish both sides
2	Headboard Legs	950 x 80 x 15mm	Plain MDF

HARDWARE LIST

QTY	PART	CODE	
8	Connecting Bolts	H1	
8	Large Cams	H2	
4	Woodscrews	H9	

5 YEAR WARRANTY


This furniture carries a **5 year warranty** against defective material or workmanship, excluding misuse and normal wear and tear. Obviously, as this headboard is customer-assembled we cannot guarantee headboard failure or damage from incorrect assembly. **All claims need proof of purchase – to ensure this register at www.farmersfurniture.co.nz.**

Follow the assembly instructions carefully and take note of the precautions below.

- **Avoid direct sunlight wherever possible.**
- **Keep headboard in a dry place.**
- **Wipe off spilt liquids immediately.**
- **Avoid placing hot items directly on the surface.**
- **Clean with a soft cloth.**
- **Do not allow nail polish, removers, deodorant etc. to come into contact with the surface.**

CAM INSTALLATION & OPERATION GUIDE

The Cam and Connecting Bolt system is used to put your headboard together. Below is an explanation of how this system works. To see a demonstration go to the assembly assistance tab on www.farmersfurniture.co.nz.

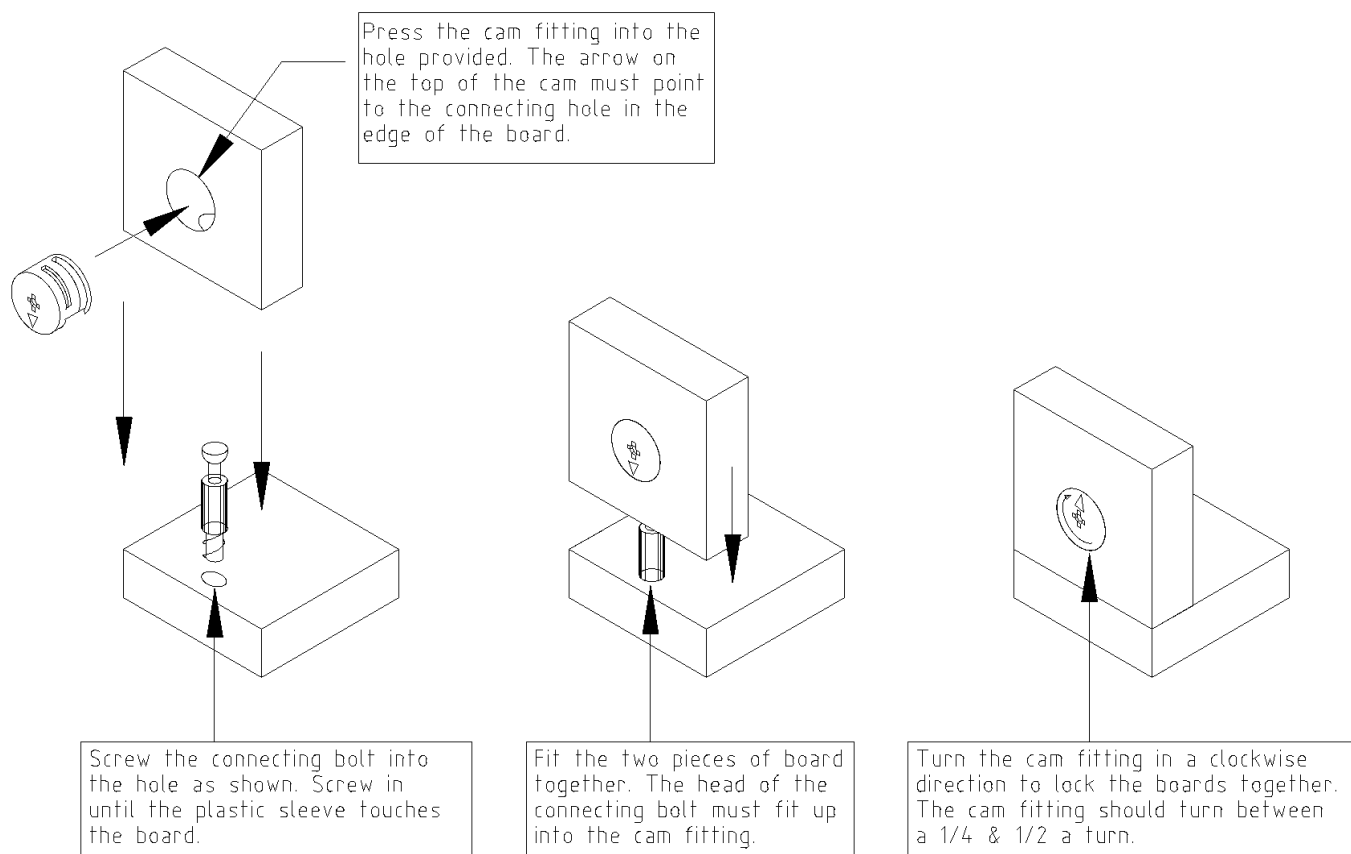


INSTALL THE HARDWARE

STEP 1

Lay the Headboard Panel finished side down on a surface which is clean and clear of anything that could damage the front of the panel.


Install the eight **H2 Large Cams** - ensure the arrow on the top of the cam points toward the nearest edge.

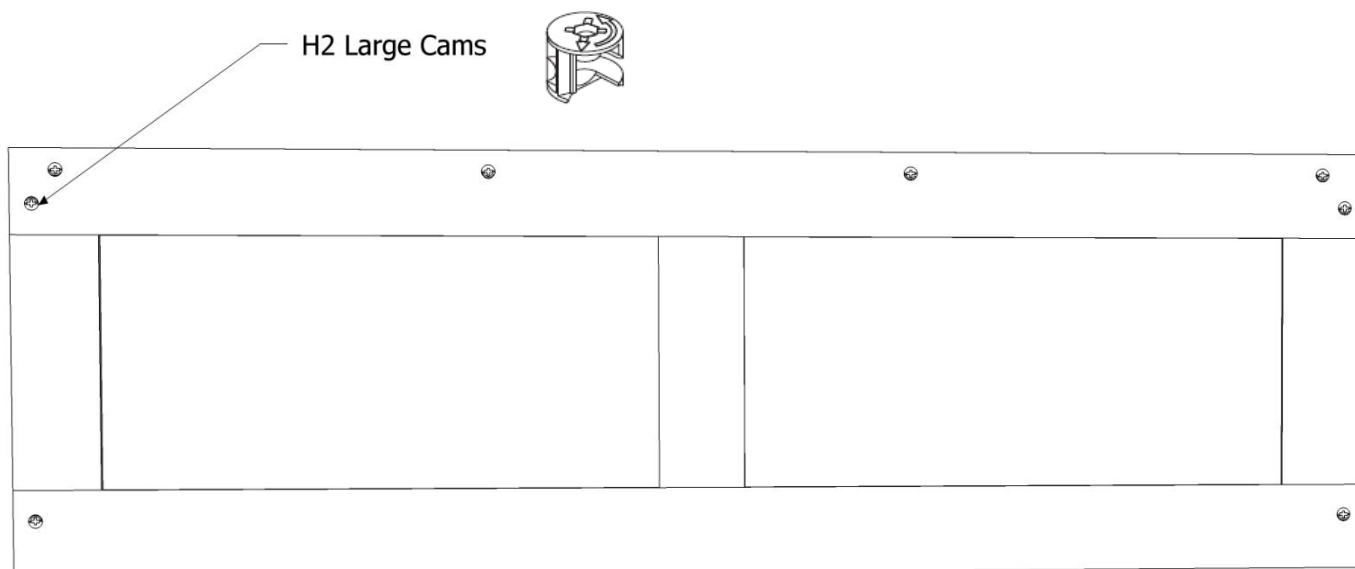

STEP 2

Take the Headboard Cap and lay it with the holes facing upwards.


Screw four **H1 Connecting Bolts** into the holes as indicated below.

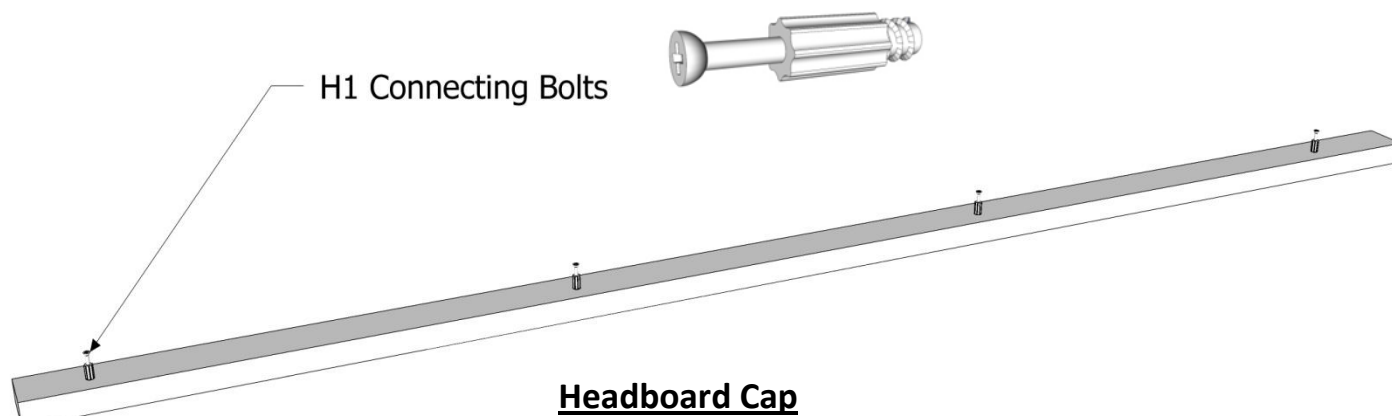

STEP 3

Take the two End Packers and lay them with the holes facing upwards.

Screw two **H1 Connecting Bolts** into each Packer as indicated below.

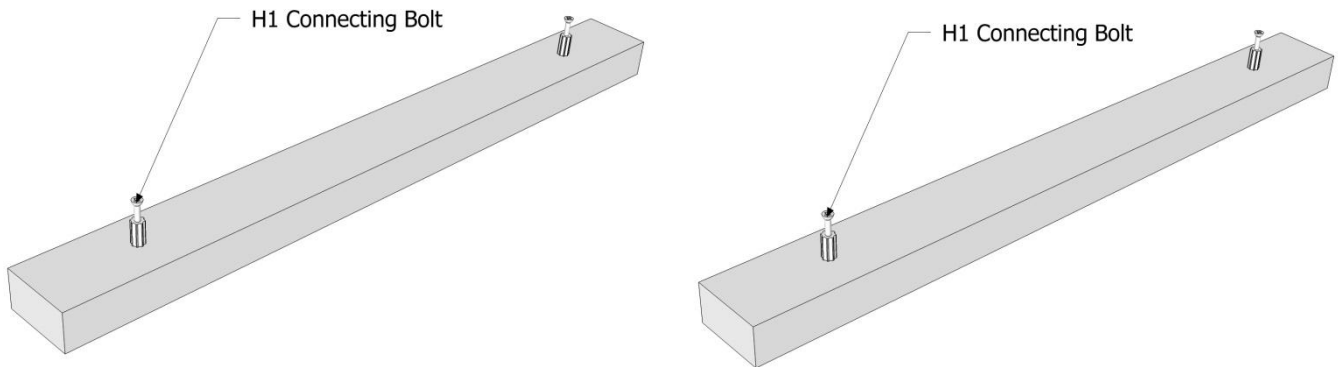


ASSEMBLE THE HEADBOARD

STEP 1

Fit the End Packers to the Headboard Panel - ensure the laminated edge of the Packer faces down. The Connecting Bolts in the Packers will fit up into the Cams in the Panel.

Turn the Cams in a clockwise direction to lock the Packers to the panel.


Ensure the cams turn at least $\frac{1}{4}$ to $\frac{1}{2}$ a turn. Tighten all four cams.

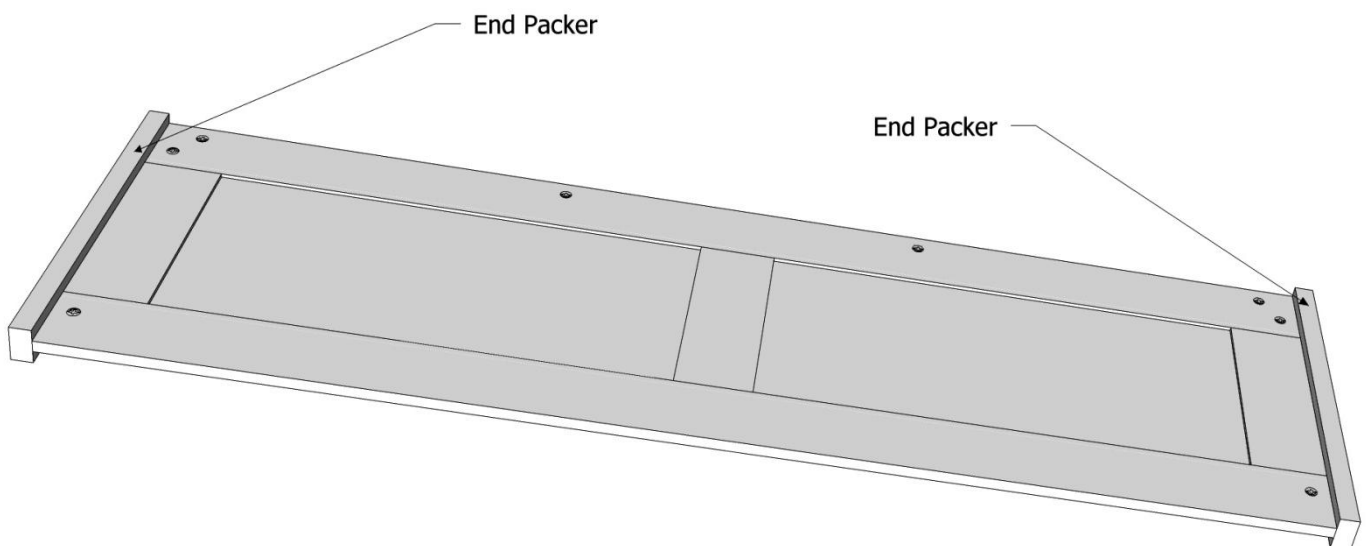


STEP 2

Attach the Headboard Cap to the Headboard Panel in the same way you did the Packers. Turn the four Cams in a clockwise direction to lock the Packers to the panel.

Ensure the cams turn at least $\frac{1}{4}$ to $\frac{1}{2}$ a turn. Tighten all four cams.

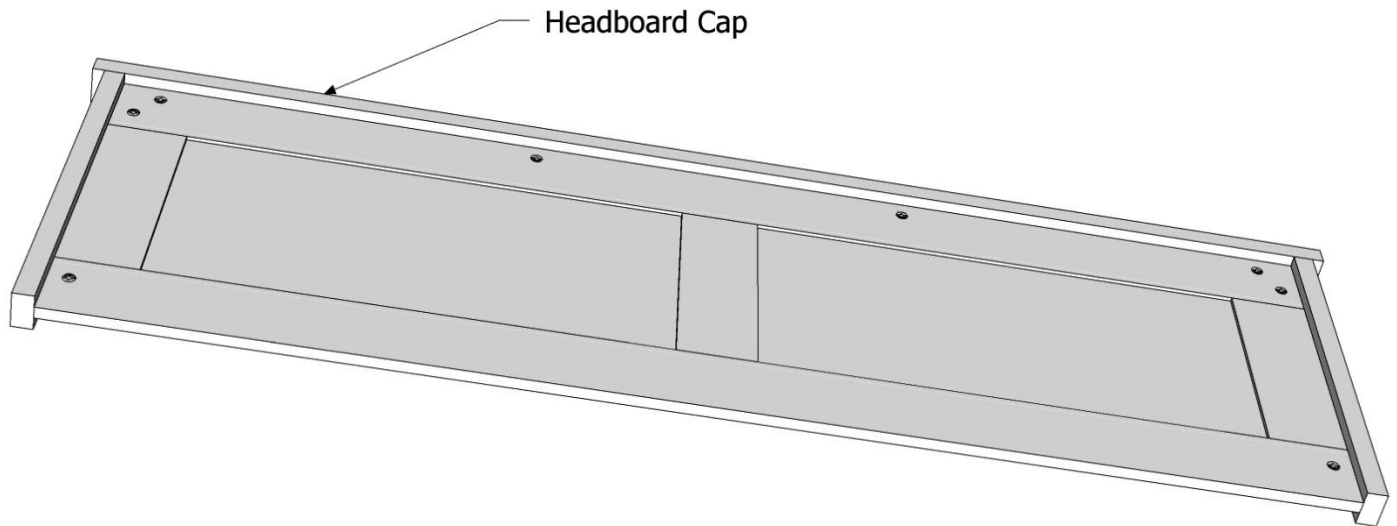**STEP 3**


Screw the two Headboard Legs to the back of the Panel as shown below using the four **H9 Woodscrews**. The holes for the screws are predrilled in the Panel and in the Legs.

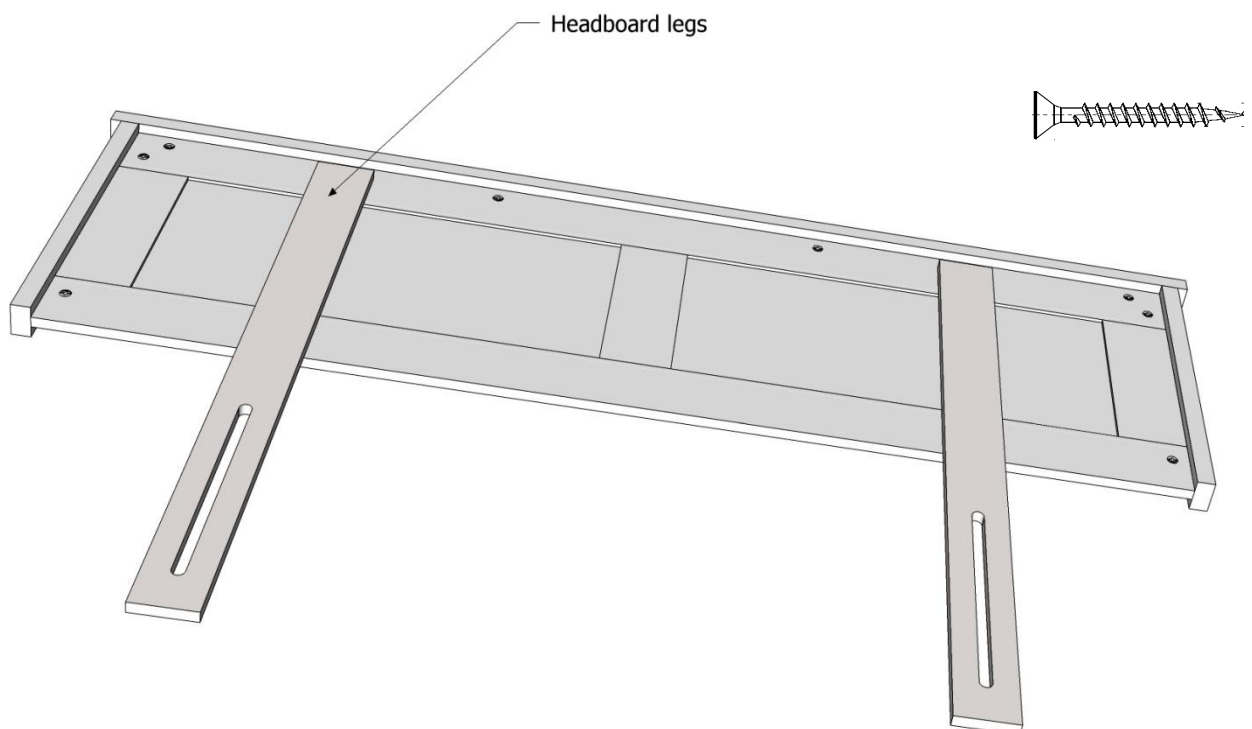

CONGRATULATIONS, YOUR *RYAN QUEEN HEADBOARD* IS NOW COMPLETE.

THANK-YOU FOR SUPPORTING NEW ZEALAND MADE FURNITURE

Add to your collection....

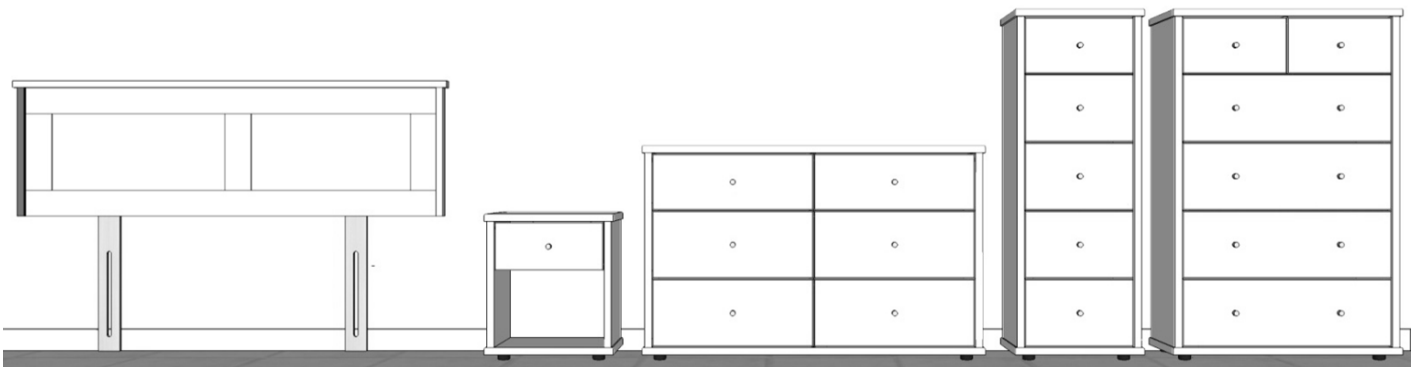

To view the full RYAN range go to...

www.farmersfurniture.co.nz