



TYLER 1 DRAWER BEDSIDE

Congratulations on your purchase of your **1 Drawer Bedside**. The **TYLER** Collection is made in New Zealand from 100% New Zealand made MDF – an environmentally sound and renewable resource.

If you require any parts or assembly advice or have any questions please go to www.farmersfurniture.co.nz or call us direct on **0800 100 858**.

WHERE TO ASSEMBLE YOUR BEDSIDE

Assemble your unit on a clean and smooth surface, free of anything which may damage the laminated surface. A carpeted floor is ideal. If assembling on a workbench or table we suggest you cover it with the carton the unit was packaged in.












Warning! Never leave hardware parts where children can reach them. Small parts may be a choking hazard!

PARTS LIST

Please check you have all the parts before beginning to assembling your cabinet. The measurements will help you identify each part. If any parts are missing or damaged please contact us directly for replacements and advice. Do not call the store you bought the cabinet from as they will be unable to help you. **Note: You will find two pieces of board fitted across the ends of the package. These are for packing purposes only and are not part of the cabinet.**

QTY	PART	MEASUREMENTS	NOTES
1	Top	450 x 396 x 25mm	Black laminate finish - Blue mark
1	Base	450 x 396 x 25mm	Black laminate finish - Purple mark
1	LH End	440 x 388 x 25mm	Black laminate finish both sides - Green mark
1	RH End	440 x 388 x 25mm	Black laminate finish both sides - Red mark
1	Drawer Front	378 x 167 x 15mm	Black laminate finish
1	LH Drawer Side	340 x 135 x 12mm	Plain MDF 12mm - Green mark
1	RH Drawer Side	340 x 135 x 12mm	Plain MDF 12mm - Red mark
1	Drawer Back	334 x 120 x 12mm	Plain MDF 12mm
1	Drawer Bottom	344 x 339 x 4mm	Plain MDF 4mm
1	Back Panel	460 x 404 x 4mm	Black laminate finish 4mm

HARDWARE LIST

QTY	PART	CODE	
6	Connecting Bolts	H1	
4	Large Cams	H2	
2	Small Cams	H3	
4	Drawer Slide Screws	H4	
4	Large Screws	H5	
4	Small Woodscrews	H6	
8	Woodscrews	H9	
6	Dowels	H15	
4	Black Plastic Feet	H16	
1	Set of metal drawer slides	H21	
1	Bag of small Nails	H27	
1	TYLER Handle & Handle Screw		

COLOUR CODING

To help identify the parts, the main components are colour coded with a pen mark on the back edge of the panel. (The edge without any laminate on it.)

- | | |
|-----------------|---|
| ○ RED | Right Hand Parts. (E.g. RH End, RH Drawer Side.) |
| ○ GREEN | Left Hand Parts. (E.g. LH End, LH Drawer Side.) |
| ○ BLUE | Tops |
| ○ PURPLE | Bases |

5 YEAR WARRANTY


This furniture carries a **5 year warranty** against defective material or workmanship, excluding misuse and normal wear and tear. Obviously, as this unit is customer-assembled we cannot guarantee cabinet failure or damage from incorrect assembly. **All claims need proof of purchase – to ensure this register at www.farmersfurniture.co.nz.**

Follow the assembly instructions carefully and take note of the precautions below.

- **Avoid direct sunlight wherever possible.**
- **Keep cabinet in a dry place.**
- **Wipe off spilt liquids immediately.**
- **Avoid placing hot items directly on the surface.**
- **Clean with a soft cloth.**
- **Do not allow nail polish, removers, deodorant etc. to come into contact with the surface.**

CAM INSTALLATION & OPERATION GUIDE

The Cam and Connecting Bolt system is used to put your unit together. Below is an explanation of how this system works. To see a demonstration go to the assembly assistance tab on www.farmersfurniture.co.nz.

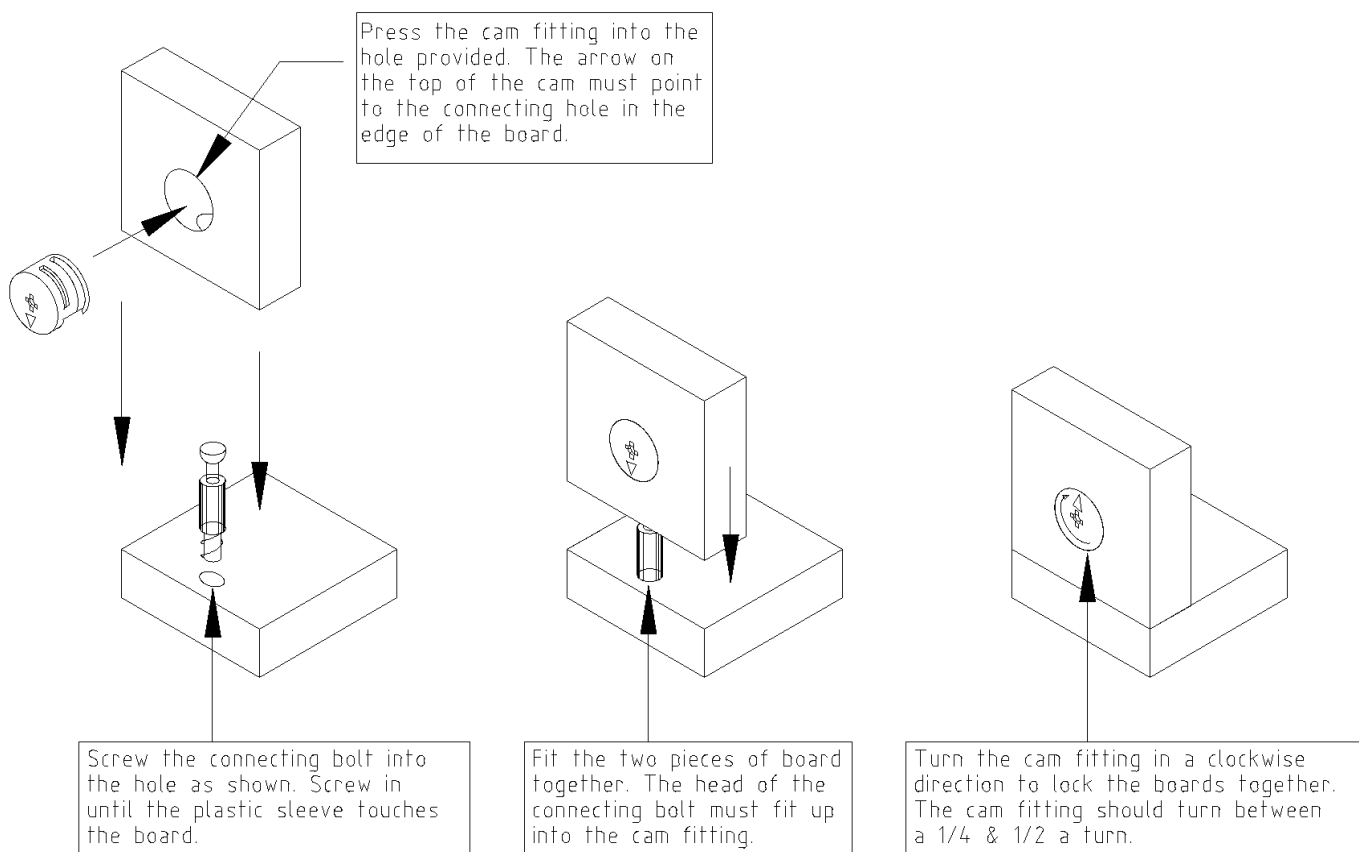


DRAWER SLIDES GUIDE

Your pack will contain a set of Metal Drawer Slides. These are bundled together with adhesive tape. The set comprises of 4 components. Undo the tape on one set at a time and separate the parts into four piles.

LEFT HAND PART (**DL**)RIGHT HAND PART (**DR**)

The Drawer Slide components shown above are attached to the **drawer**. They have the letters **DR** or **DL** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawer later on.

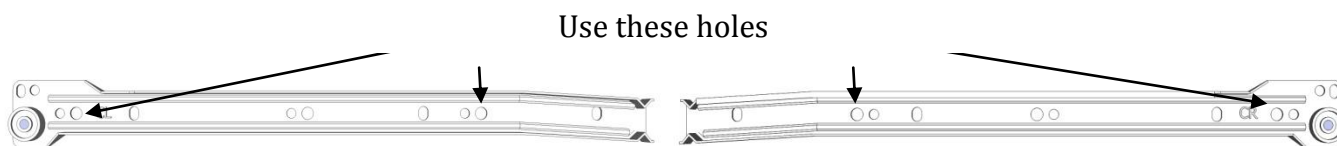LEFT HAND PART (**CL**)RIGHT HAND PART (**CR**)



The Drawer Slide components shown above are to be attached to the **cabinet**. They have letters **CR** or **CL** stamped on them to indicate left hand or right hand components.

INSTALL THE HARDWARE

STEP 1

Lay the Top of the cabinet, laminate side down, on a smooth clean surface.

Screw the four **H1 Connecting Bolts** in the holes as indicated.

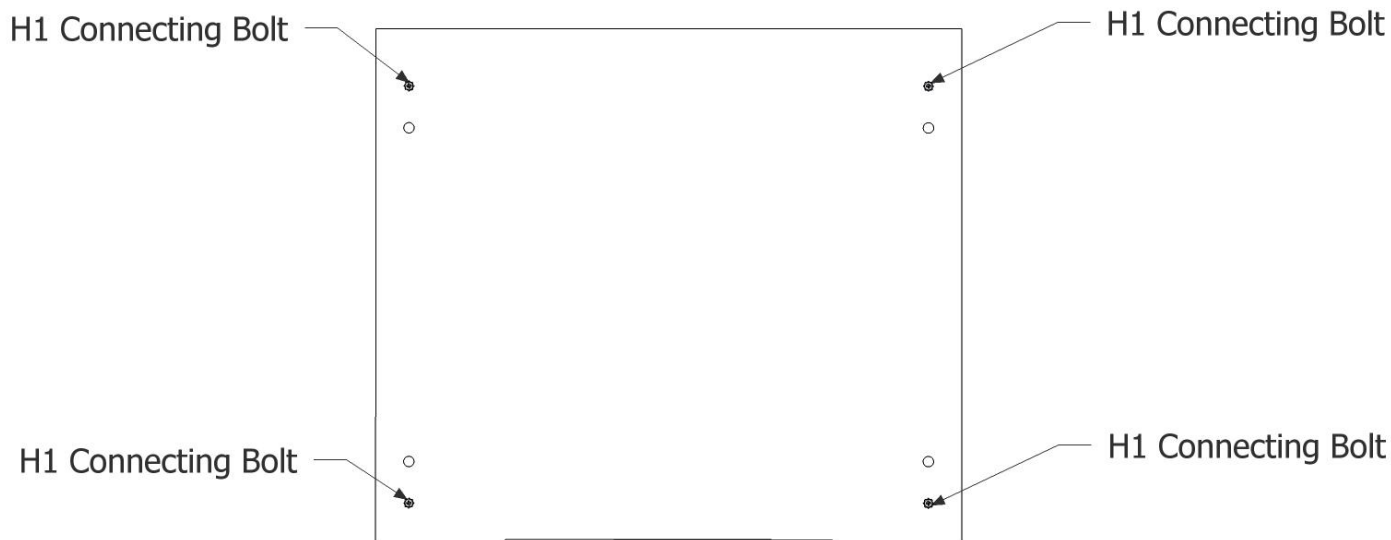

STEP 2

Take the LH End and lay it on a clean, clear surface with the holes facing upwards.


Take the **LH Cabinet Drawer Slide (CL)** and screw it to the LH End using the **H4 Drawer Slide Screws**. Use the holes as indicated in the diagram below.




Insert two **H2 Large Cams** as indicated. Make sure the arrow on top of the cam points towards the top edge of the End.



Push two **H15 Dowels** into the top edge of the End.

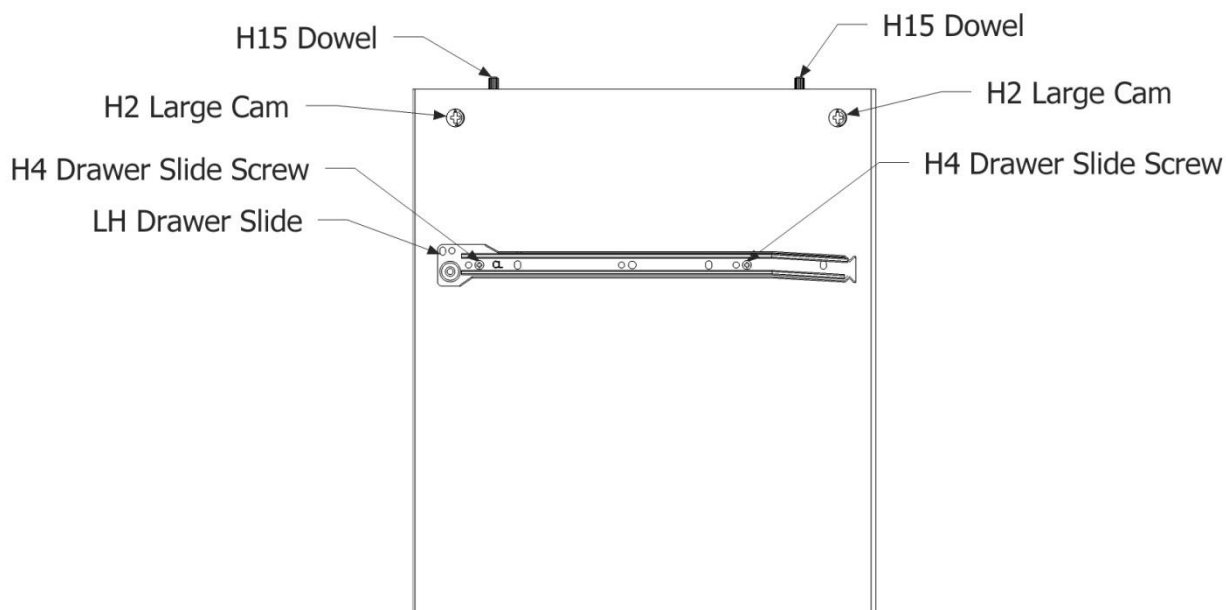**STEP 3**

Repeat previous step with the Right Hand End.

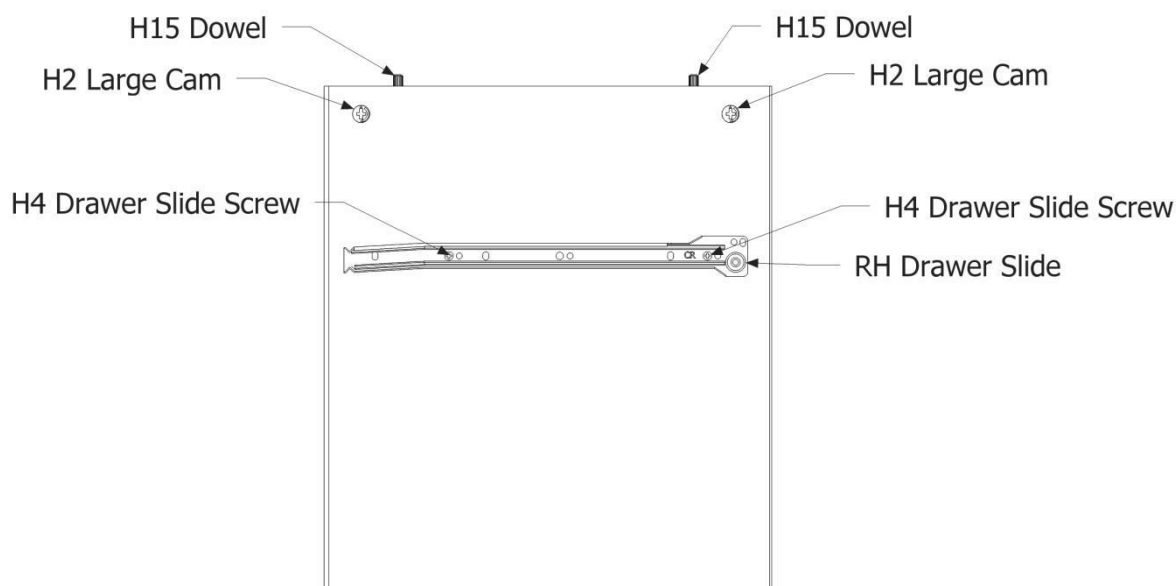

ASSEMBLE THE BEDSIDE

STEP 1


Stand the Top on its back edge.

Fit the LH End and RH End to the underside of the Top. The Connecting Bolts in the Top will fit down into the Metal Cams in the Ends.

Turn the Metal Cams in a clockwise direction to lock the Top to the Ends. **NOTE:** Ensure the Metal Cams turn a least a $\frac{1}{4}$ to $\frac{1}{2}$ a turn.

Tighten all four Metal Cams.



To see a demonstration of how the cam and connecting bolt works go to [www.farmersfurniture](http://www.farmersfurniture.co.nz) and to the assembly assistance tab at the top.

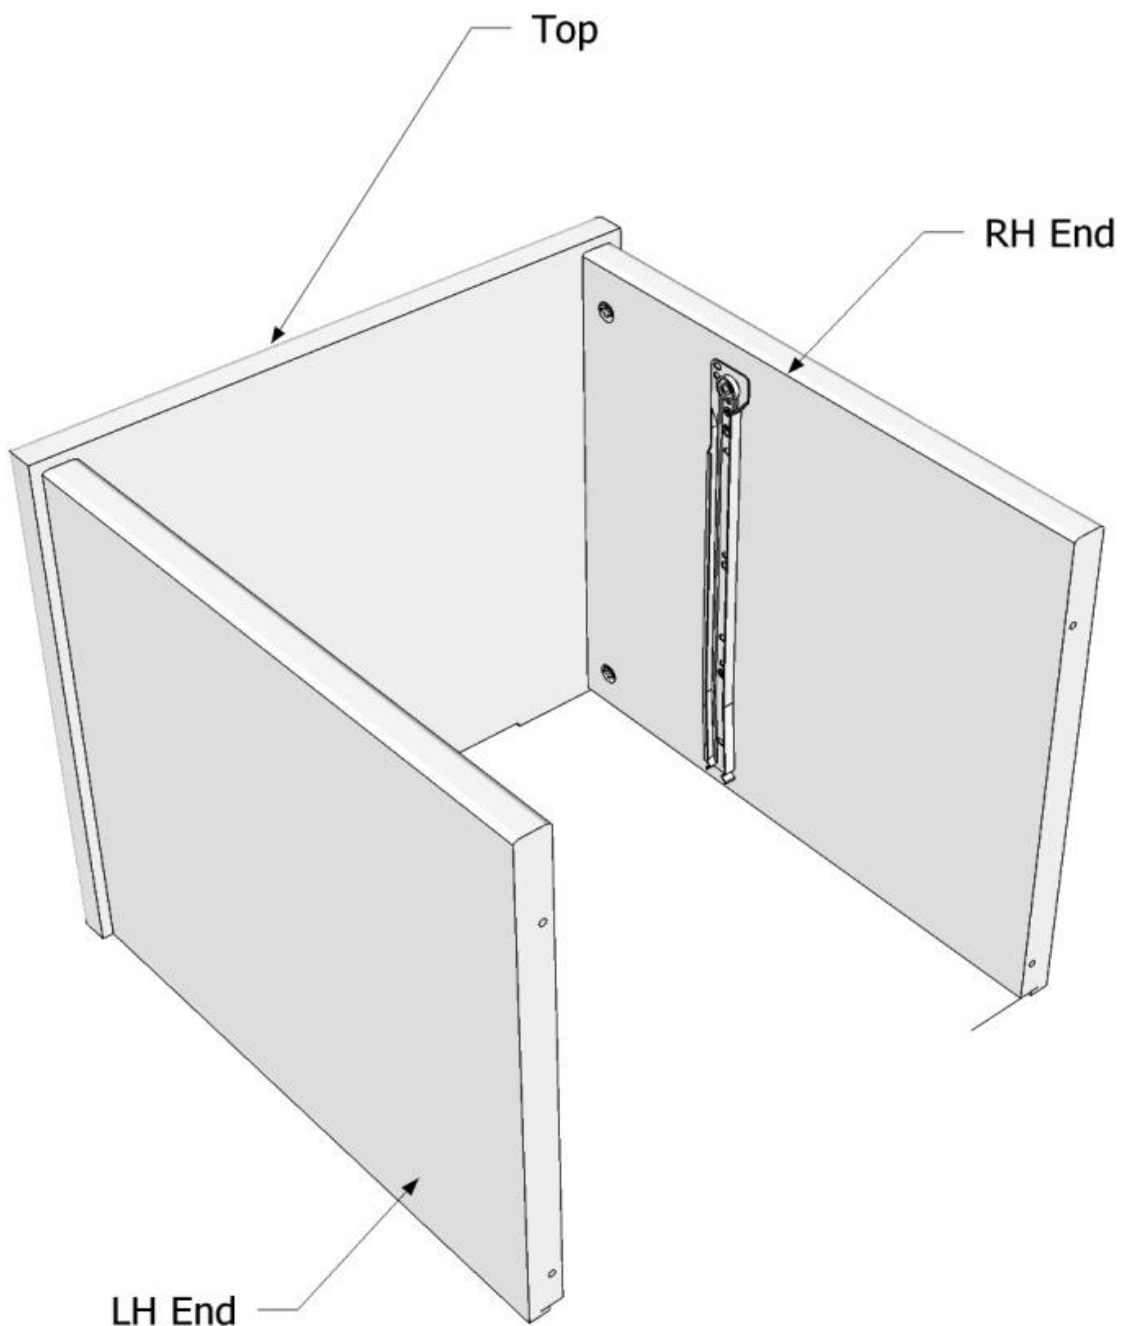

STEP 2

Attach the Base using the four **H5 Large Screws**. Ensure the laminated side of the Base faces into inside of the Bedside

Next attach the **H16 Black Plastic Feet** using four **H9 Woodscrews**

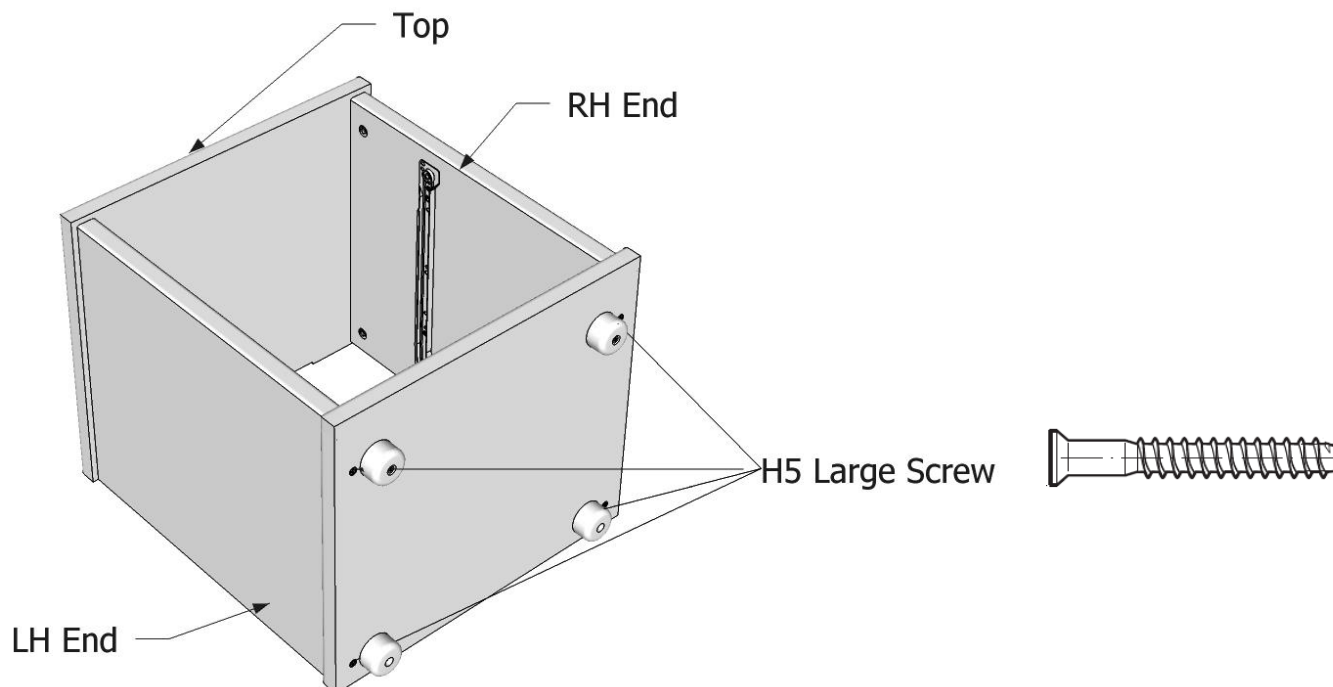
**STEP 3**

Lay the unit on its front edge - make sure the surface is clean and clear of anything that may damage the black finish.

Fit the Back Panel into place - ensure the laminated side is facing into the inside of the cabinet.


Nail the Back Panel in place with the Small Nails provided.
Space the nails about 10 to 15 cm apart.

Stand the cabinet upright.

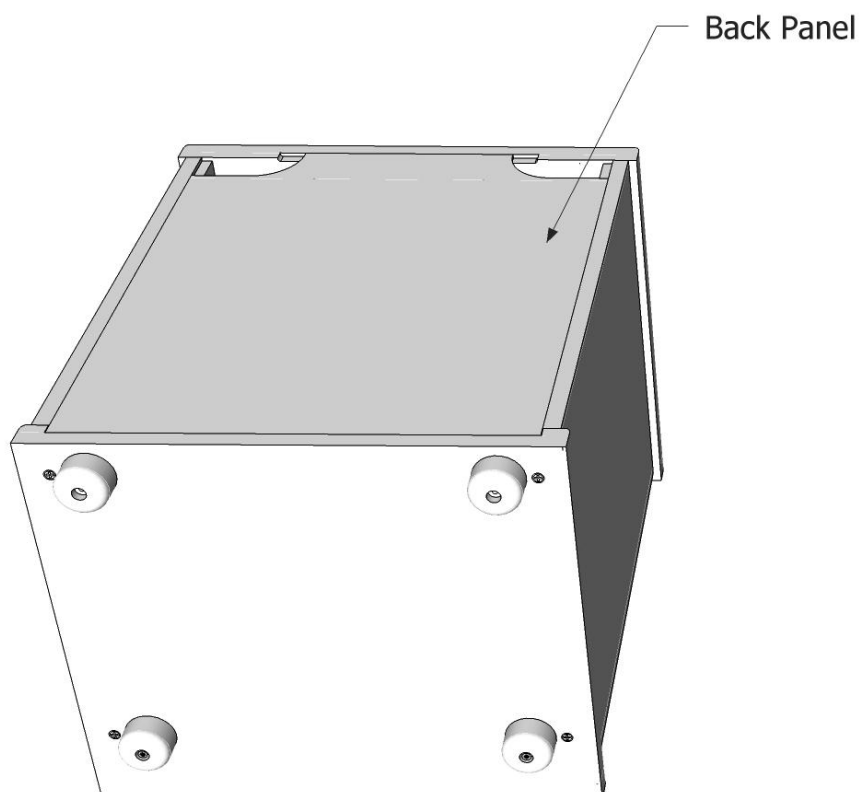


ASSEMBLE THE DRAWER

To see a demonstration of how a drawer goes together go to the assembly assistance tab on www.farmersfurniture.co.nz.

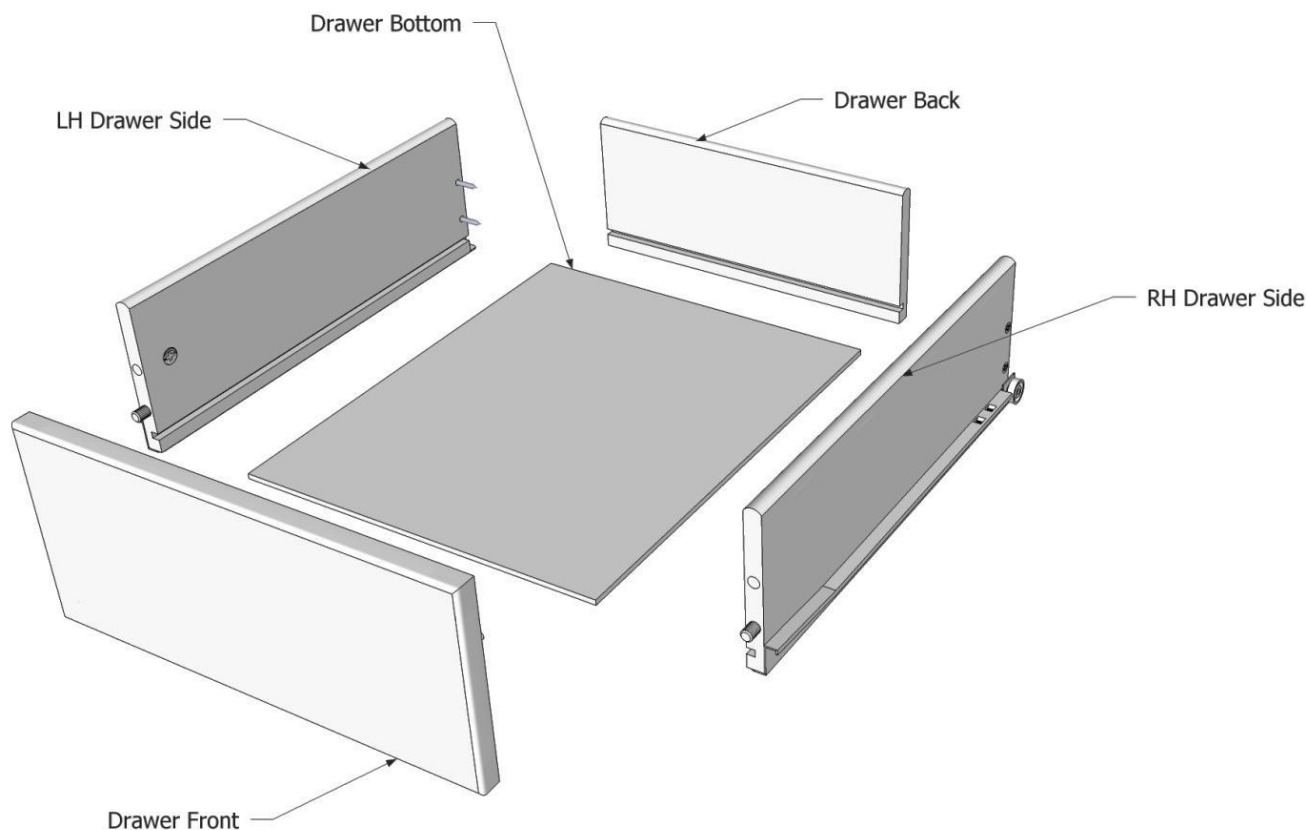

STEP 1

Install the hardware as shown below.

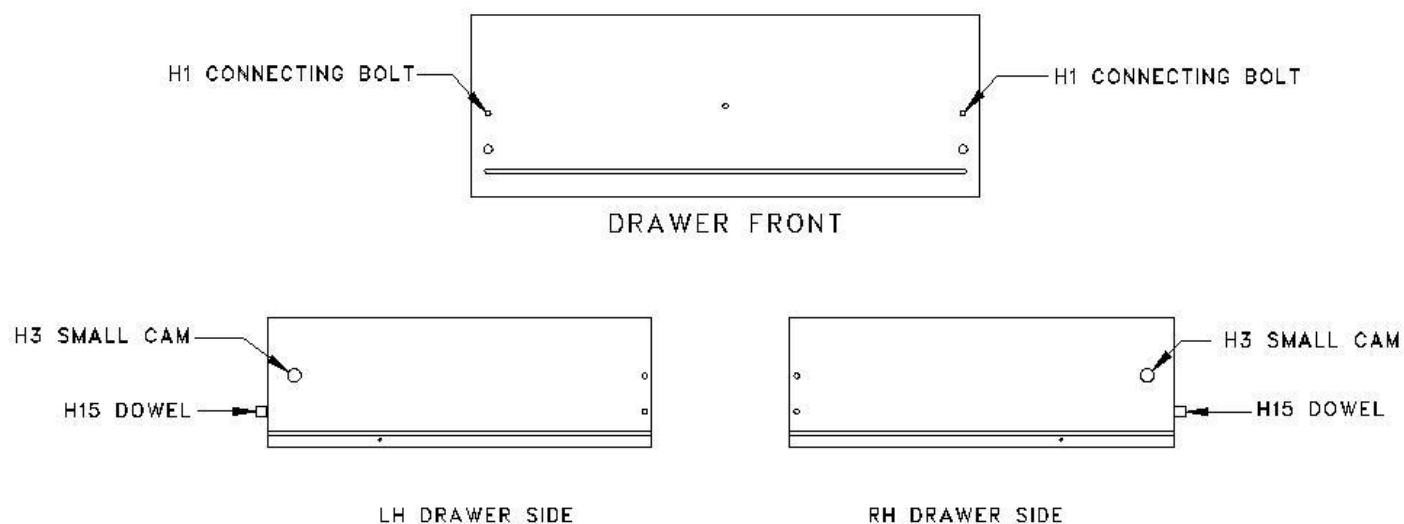

Note: Be sure that the arrow on the Metal Cam points to the end of the drawer side nearest it.



H15 Dowel



H3 Small Cam



H1 Connecting Bolt

STEP 2


Lay the Drawer Front face down on a smooth, clean surface.

Attach the LH and RH Drawer Sides by fitting them down into place over the Connecting Bolts installed in the Drawer Front.


Turn the Small Cams clockwise to lock the Drawer Sides in place.

Next slide the Drawer Bottom into place in the grooves in the Drawer Sides and Drawer Front.

Fit the Drawer Back into place between the Drawer Sides and secure with four **H9 Woodscrews** as shown below.

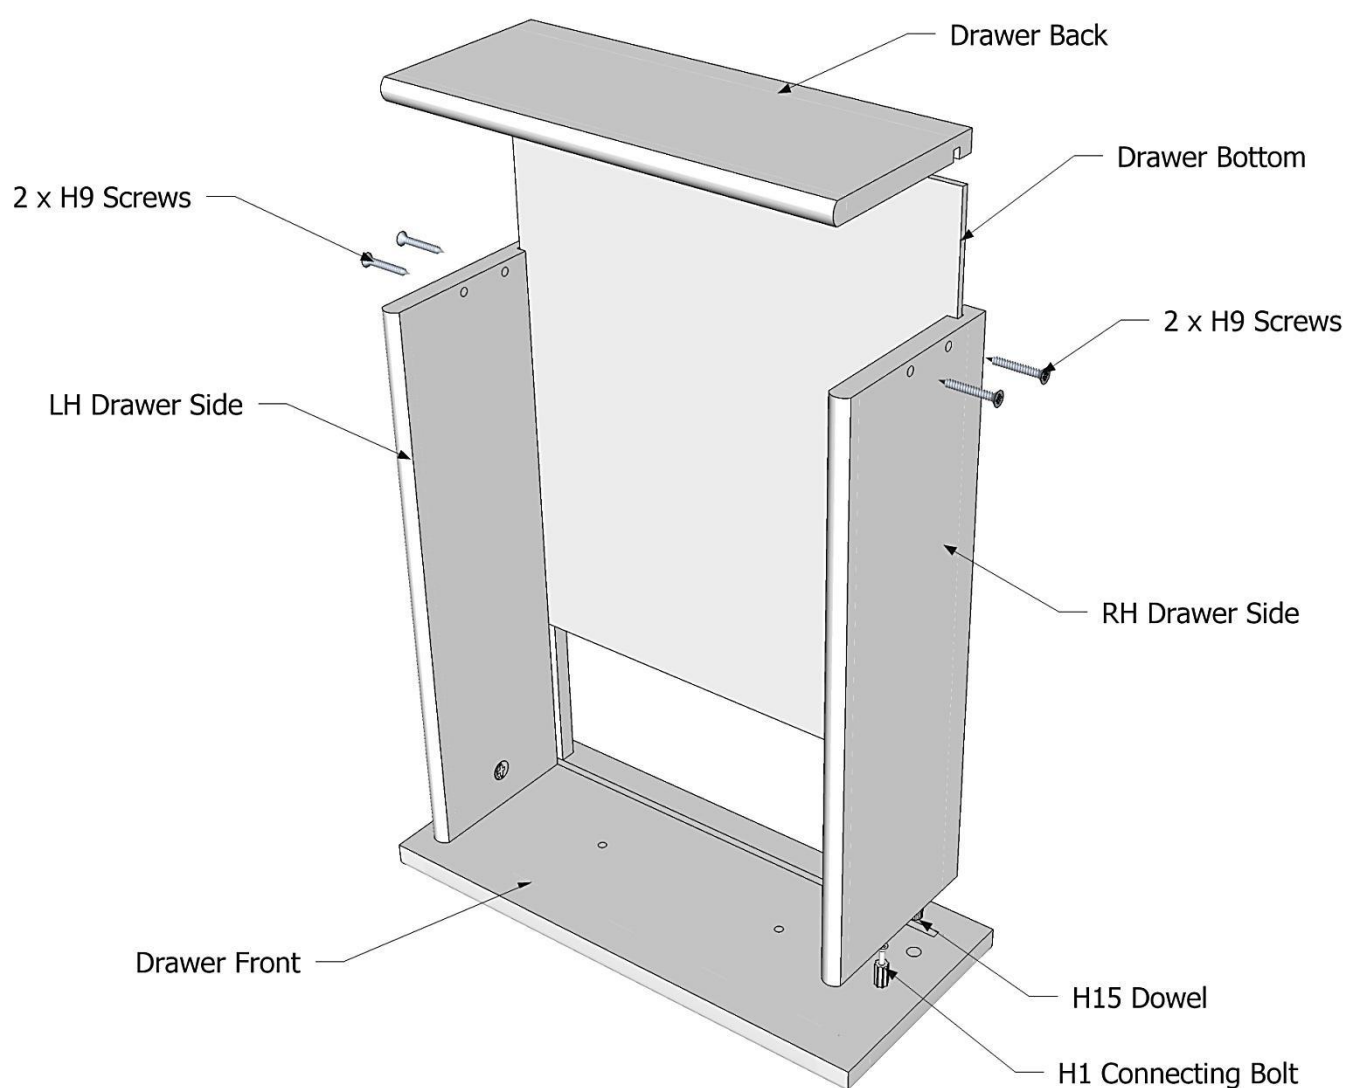


H9 Woodscrew




STEP 3

Turn the drawer upside-down as shown and attach the Drawer Slides (**DR** and **DL**) with the four **H6 Small Screws** as shown below. Each slide requires two screws.

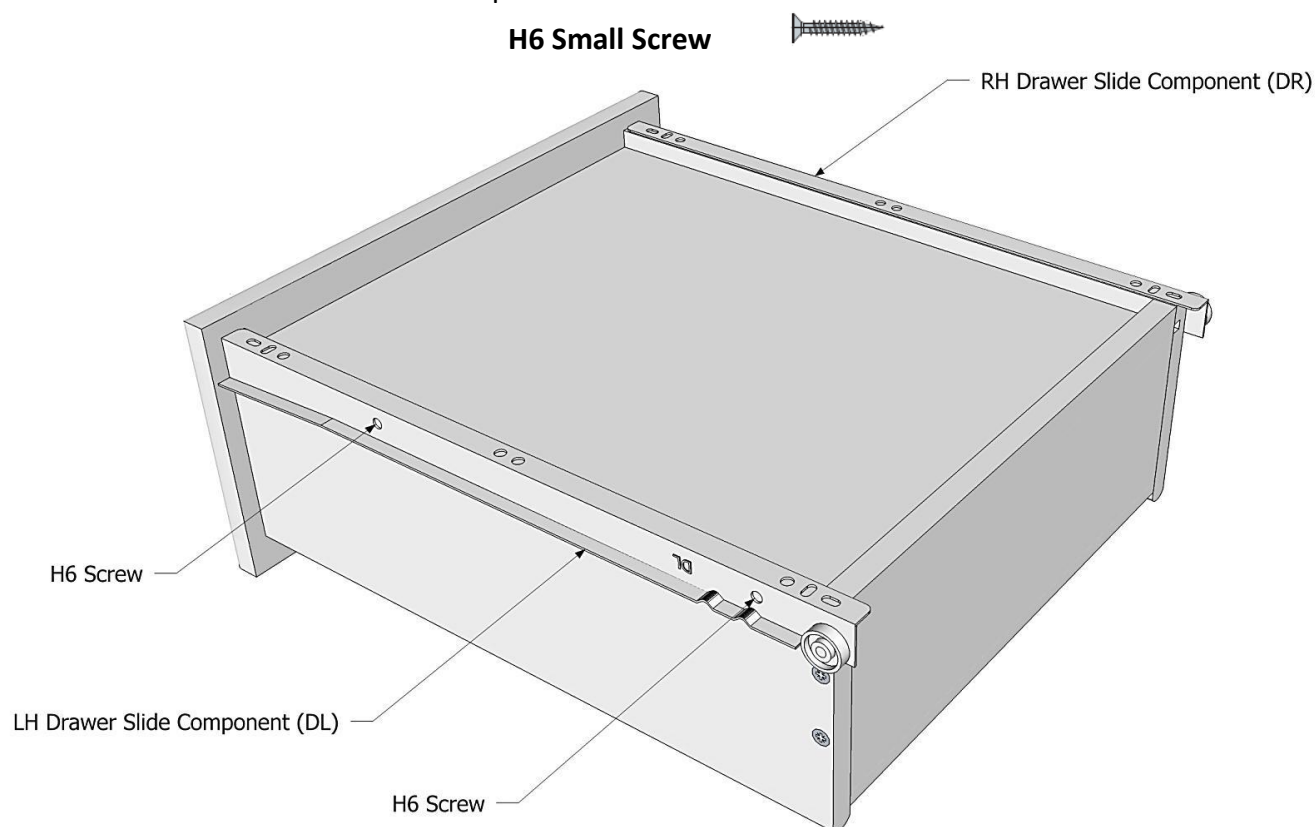**STEP 4**

Turn the drawer over. Attach the Drawer Handle using the screw provided with the handle.


Fit drawer into the cabinet. Angle the drawer slightly to ensure that the wheel at the back of the drawer slide goes behind the front wheel on the cabinet slide. Then lift the drawer up and slide it into the channel of the drawer slide attached to the cabinet.

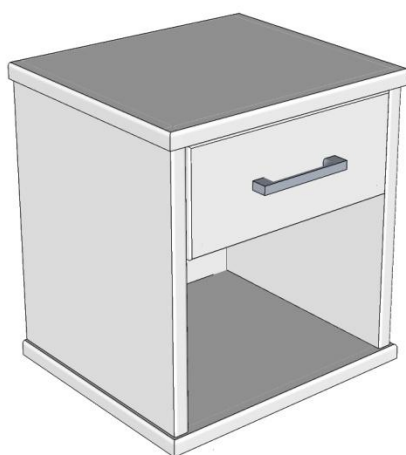

CONGRATULATIONS, YOUR *TYLER ONE DRAWER BEDSIDE* IS NOW COMPLETE.

THANK-YOU FOR SUPPORTING NEW ZEALAND MADE FURNITURE

Add to your collection....

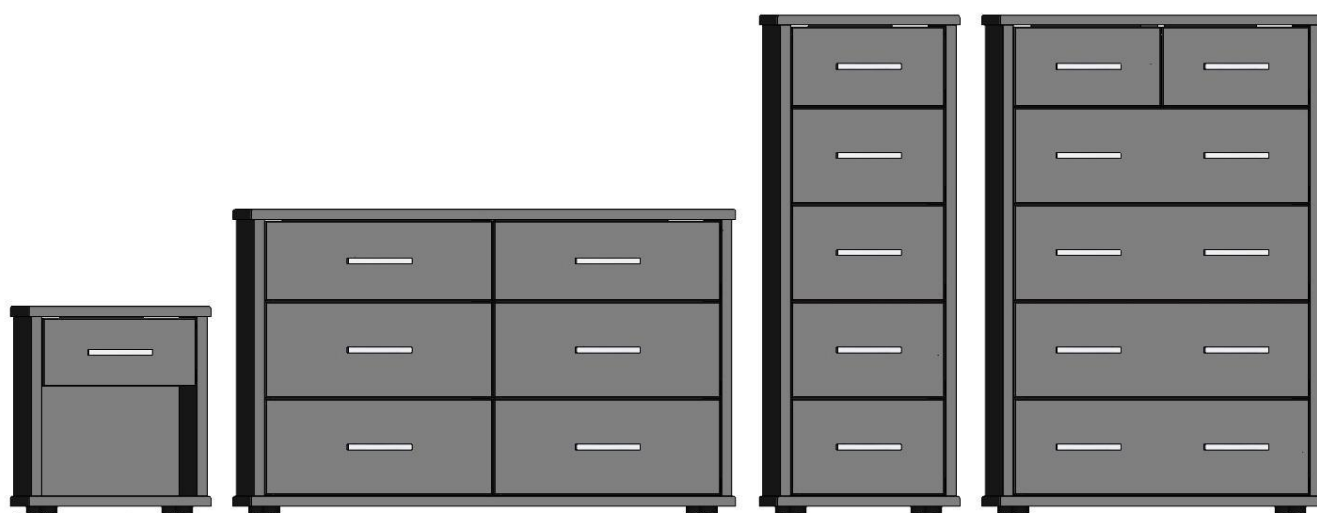

To view the full TYLER range go to...

www.farmersfurniture.co.nz